

# DIGITAL ANNOUNCER QUICK REFERENCE NT5M SERIES

## POWER-UP

Apply power to chassis.  
Turn on power and battery switches.  
Press "START/STOP" to display available memory.  
Press "START/STOP" to enter "SEL" mode.

## RECORDING

Unit must be in "SEL" mode.  
Insert handset into "REC/MON" jack.  
Press "RECORD". "RECORD" LED lights.  
Display indicates maximum recording time.  
(Multichannel units display time and channel number.  
Press "RECORD" to sequence to next channel.)  
Press "START/STOP" to begin recording.  
Press "START/STOP" to end recording.

## SELECT SIT CODE

If SIT # displayed after recording, use  
"ONLINE" and "RECORD" to change SIT #.  
Press "START/STOP" to enter "SEL" mode.

## PLAYBACK

Unit must be in "SEL" mode.  
Insert handset into "REC/MON" jack.  
Press "PLAYBACK". Time is displayed.  
(Multichannel units display time and channel number.)  
Press "PLAYBACK" to sequence to next channel.)  
Press "START/STOP" to begin.  
Press "START/STOP" to enter "SEL" mode.

## ONLINE

Message must be recorded into memory.  
Press "ONLINE". "OFF" is displayed.  
Press "ONLINE". "ON-LINE" LED lights.

## RETURN TO SEL MODE

Press "ONLINE" and "START/STOP" together;  
once for end of message termination, twice for  
immediate termination.  
Display indicates "SEL".

SWITCH "ON"	FUNCTION	ALARM	
S1-1	Not Used	AL-0	Power Failure
S1-2	Pulse Start Enable	AL-1	Memory Failure (Initial)
S1-3	Continuous Play	AL-2	Low Audio Output
S1-4	64 kbs Sampling Enable	AL-3	No Message Recorded
S1-5	AGC Enable	AL-4	Not used
S1-6	Voice Alarm Disable	AL-5	Processor Memory Failure
S1-7	Pulse C/MC Enable	AL-6	Memory Failure (Running)
S1-8	Remote Record Disable	AL-7	Firmware Checksum Failure
		AL-8	Voice Prompt Checksum Failure
		AL-9	Invalid Peripheral Configuration

# REMOTE RECORD QUICK REFERENCE NT5M SERIES

DA MUST BE IN MODE:

1	2	3
4	5	6
7	8	9
*	0	#

"ON-LINE"

"OFF"

"AL-0"

or

"TIME DISPLAY"

- Dial phone number of line to DA.
- DA answers phone, and plays either the first channel's announcement (if any) or a beep.
- Press the ☐ key within ten seconds.
- DA prompts "Access Code".
- Enter the 7-digit ACCESS CODE.  
(Default code is 9676600)
- DA announces status. Wait for ready.
- If DA status is "ONLINE", enter 0 to take DA offline prior to recording or playing back messages.

## RECORD

Press ☐ <channel> ☐ to begin recording, or,  
☐ <channel> ☐ SIT ☐ to specify SIT and  
begin recording.  
DA prompts "Recording <beep>"  
DA prompts "<beep> Ready" if recording time  
runs out.  
Press ☐ to stop.  
DA prompts "Ready".

## PLAYBACK

Press ☐ <channel> ☐ to begin playback.  
DA prompts "Playback" followed by message.  
Press ☐ to stop.  
DA prompts "Ready".

## CHANGE ACCESS CODE

Press ☐ ☐ then new 7-digit code.  
(Write down the new code!)  
DA prompts "Ready".

## RETURN ONLINE

Press ☐  
DA prompts "Current mode online, ready".

## RETURN OFFLINE

Press ☐  
DA prompts "Going offline" until DA is offline.  
DA prompts "Current mode offline, ready".

## HANG UP

DA times out in 30 seconds, or recognizes  
disconnect pulse.