

Ref.	Description
1110	Casing
1223	Suction Cover
1915.1	Wear plate, Suction
1915.2	Wear plate, Gland
2100	Shaft
2200	Impeller
2445	Shaft Sleeve
2460	Spacer, Impeller
2540	Deflector
2542	Clamp Ring
2912	Impeller Nut
3011	Line bearing
3031	Thrust bearing
3120	Adaptor Support
3122	Bearing Cartridge
3134	Support Foot
3240	Thrust brg. Hsg.
3260	Line brg. Cover
3712	Lock Nut, bearing
3856	Oil Level Site Gauge
4100	Stuffing Box
4120	Gland Half
4130	Packing
4132	Protector Plate
4134	Lantern Ring
4260	Spring
4300.1	Line bearing seal
4300.2	Thrust Brg. Seal
4590.1	Gasket, Casing
4590.2	Gasket, Impeller
4590.3	Gasket, Sleeve
4590.4	Gasket, Inboard Brg.
4590.5	Gasket, Outboard
4590.6	Gasket, Wear plate
4590.7	Gasket, Stuffing Box
4590.8	Gasket, wear plate
4610.1	O-ring, Line brg.
4610.2	O-ring, thrust brg
4610.3	O-ring, Stuffing Box
4610.4	O-ring, Expeller Hsg.
6521	Vent Plug
6541	Lockwasher
6572	Stud, wear plate
6580	Nut, wear plate
6700.1	Key, Coupling
6700.2	Key, Shaft
6820	Bolt, Eye