

PLATE  
CONNECTED TO SHAFT  
CAN BE PERMANENT

PULLEY  
CONNECTED TO SHAFT  
MUST BE REMOVABLE

SHAFT

BEARING

BUSHING

BEARING

