


With the defaults the spacing for this type of dimension will be something like this

165 H7 $\left(\begin{array}{c} 165,04 \\ 165 \end{array} \right)$


If I right click on the dimension and select Style and go to the Lettering Tab I can change the Dimension/ Dimension Line Space Factor from 0.5 to 0.0.

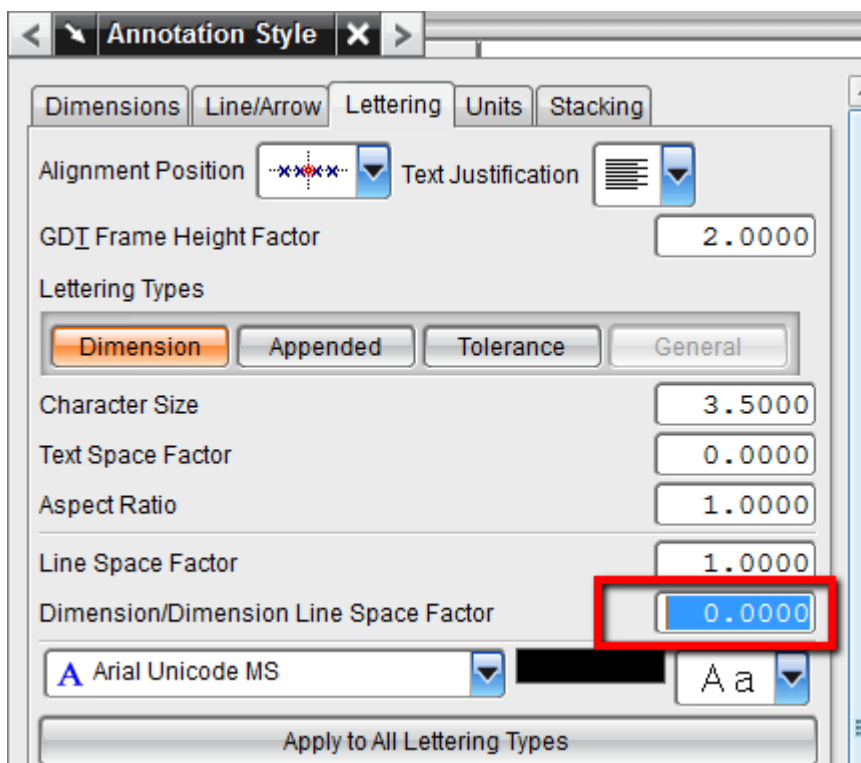

This moves the dimension closer

165 H7 $\left(\begin{array}{c} 165,04 \\ 165 \end{array} \right)$

If I then go to the Tolerance type and change the Line Space Factor from 1.0 to 0.1 it will move even closer

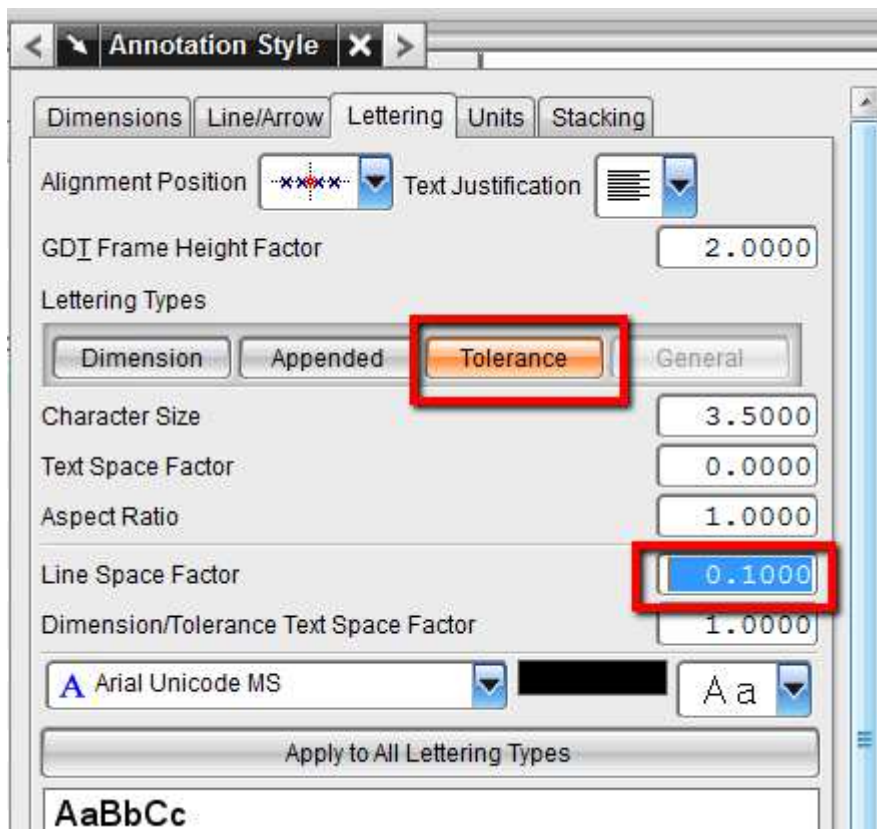

165 H7 $\left(\begin{matrix} 165,04 \\ 165 \end{matrix} \right)$
