


Starting current of stator

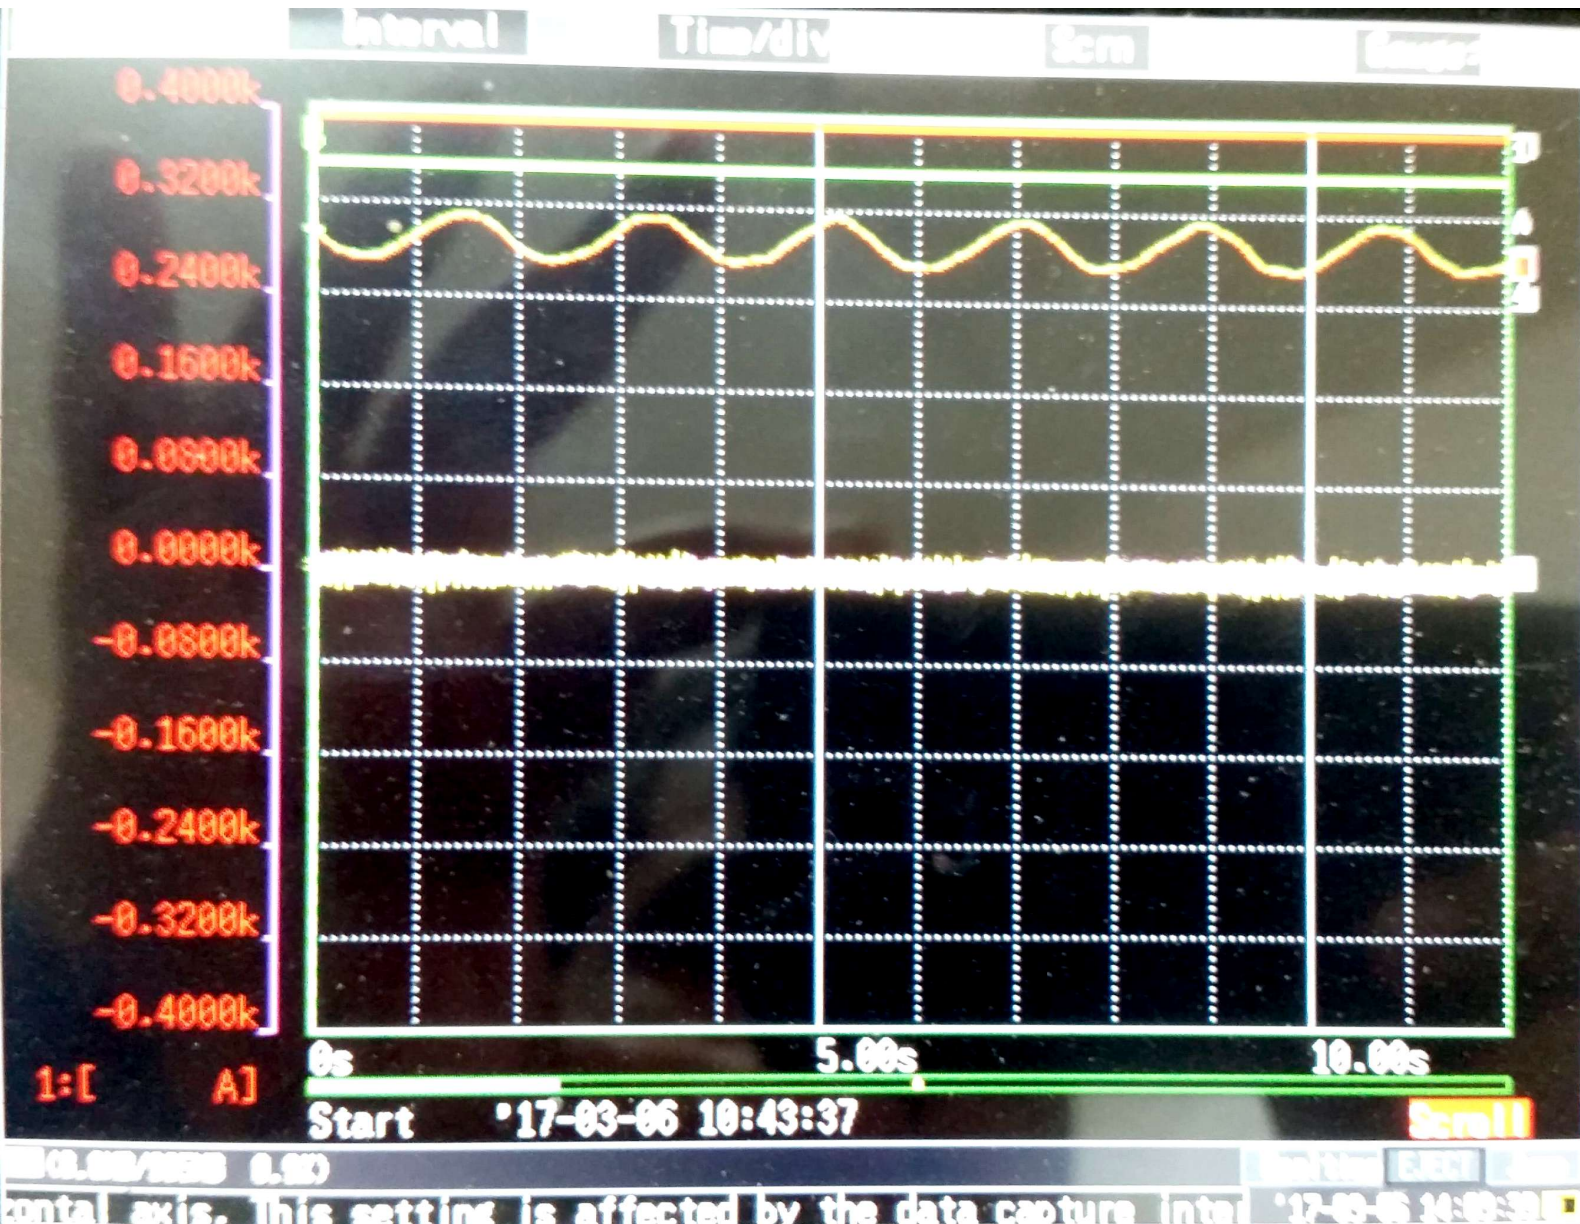

Operational current of motor stator


WARNING - SCREEN NOT LIVE

Trace

13


2017-03-01, 10:25:39  
Trigger Current: 10.0 A

A  
pk

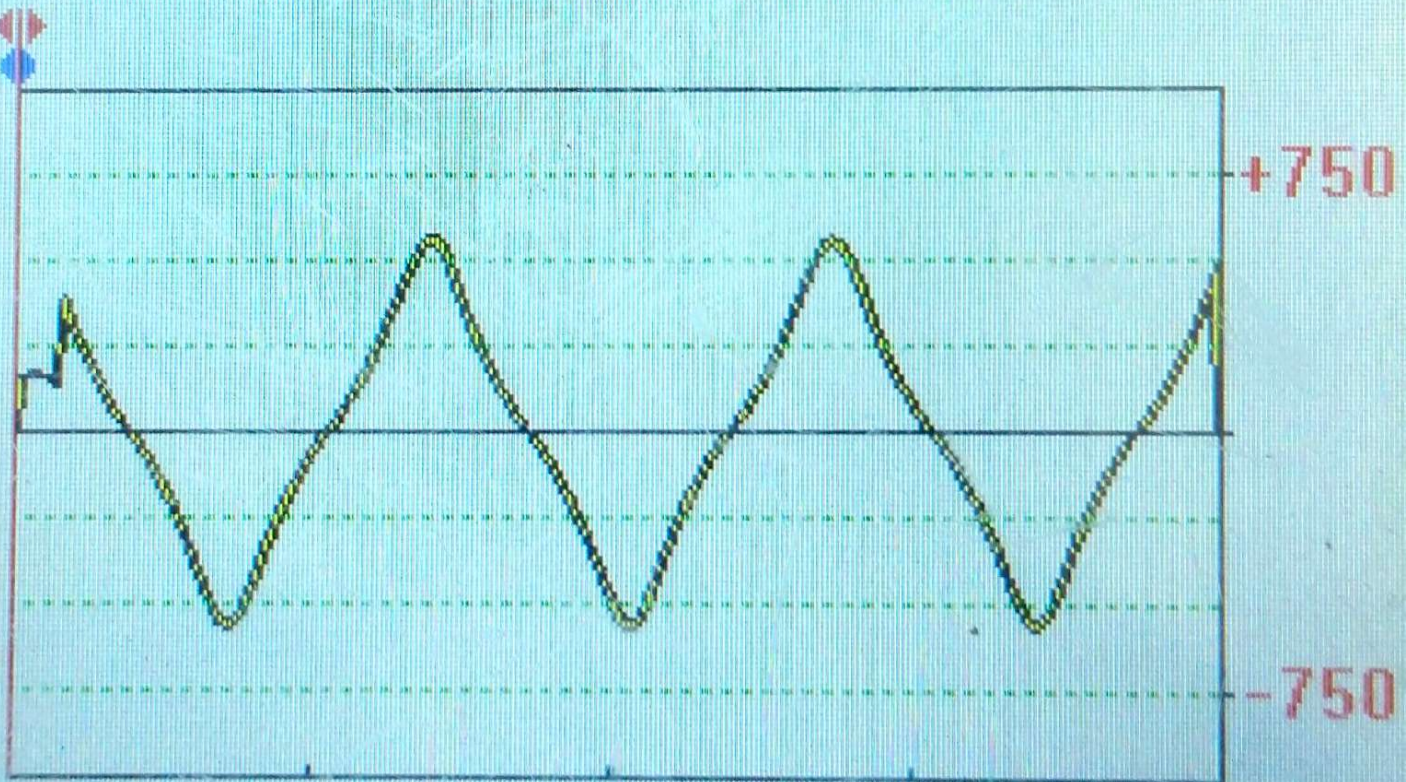


Press <RUN> to move marker

Rotor current phase A. Trend for 10 seconds

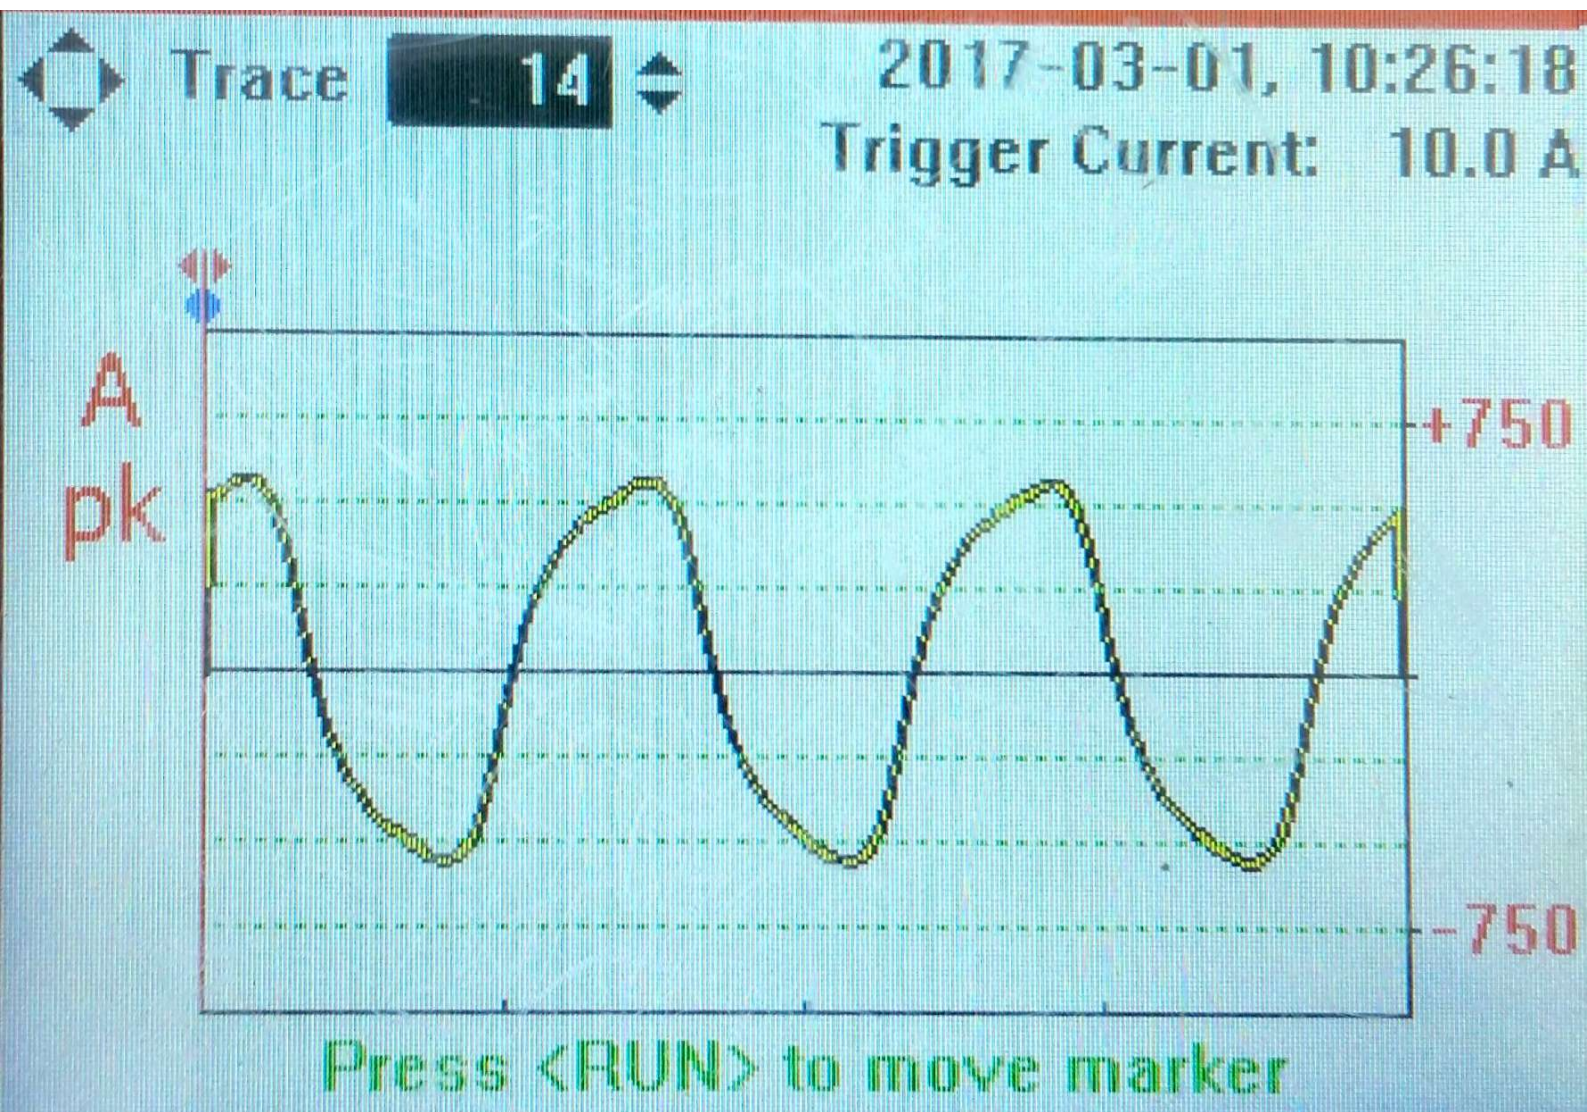

Rotor current phase B. Trend for 10 seconds

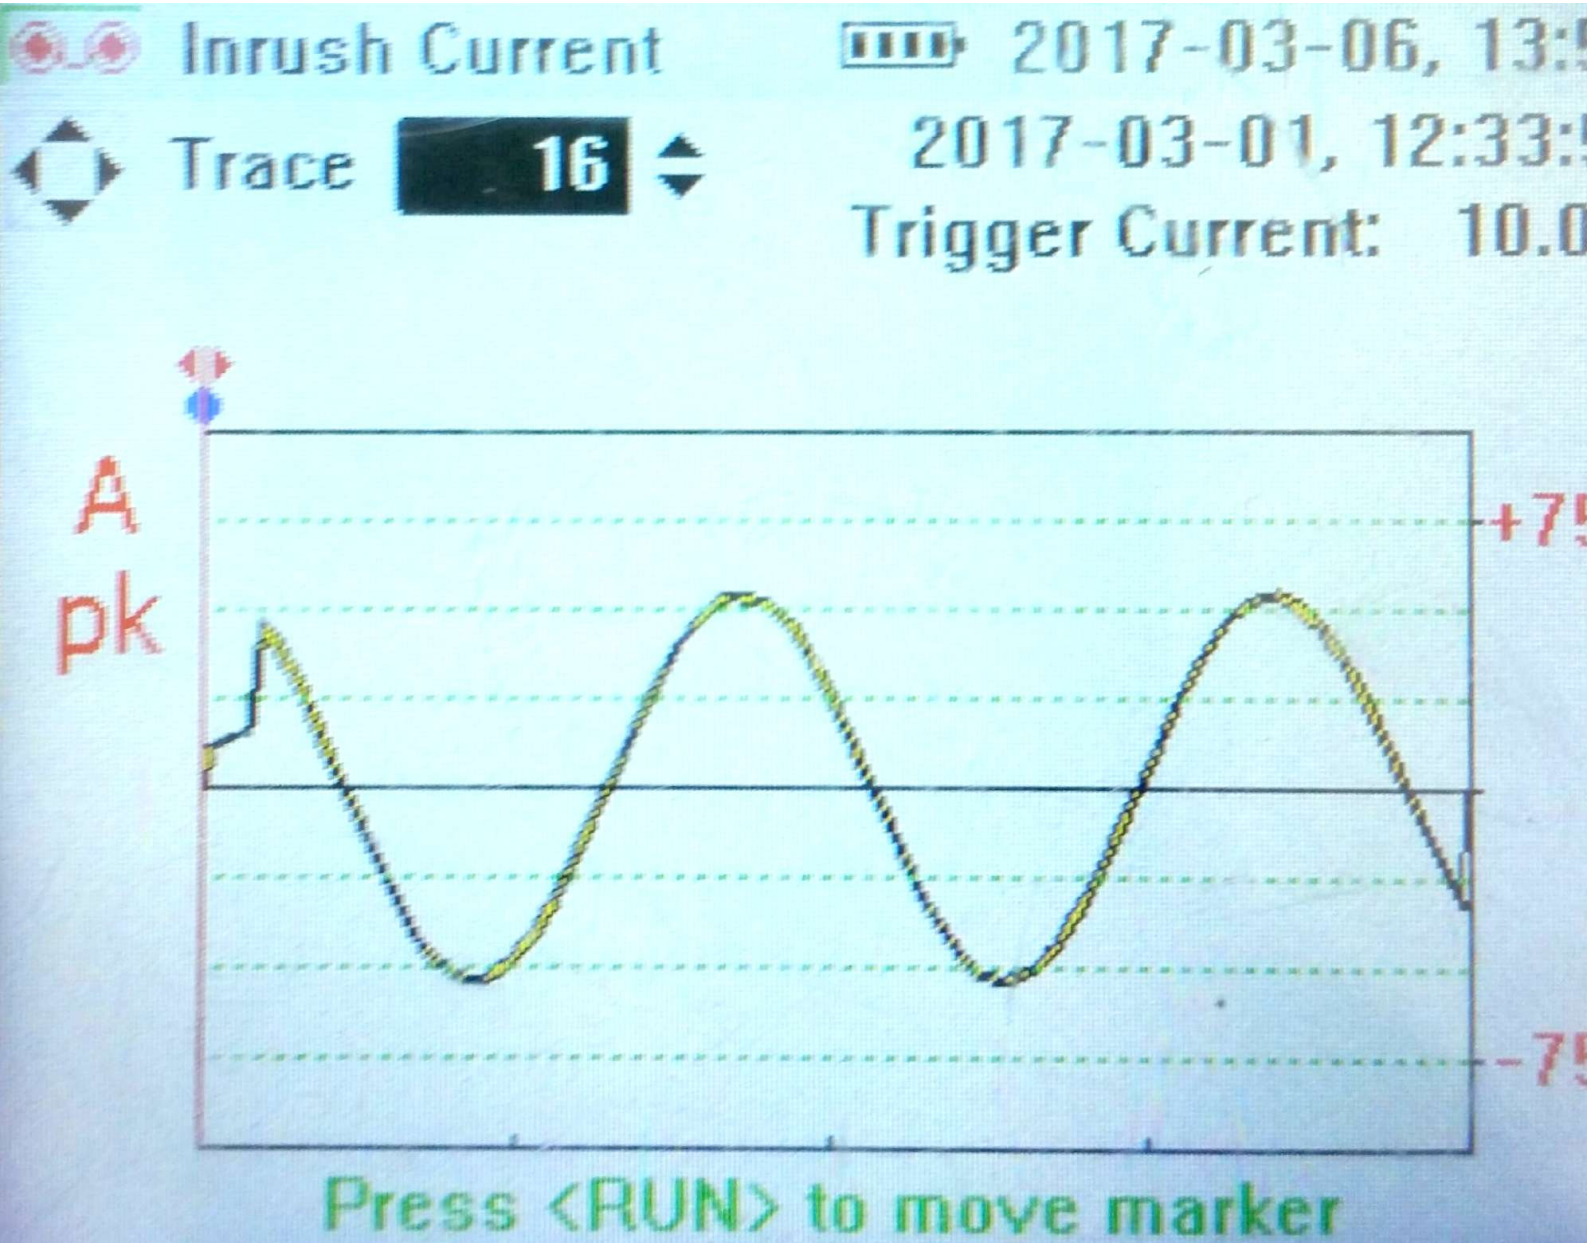

Rotor current phase A. Trend for 10 seconds  
For healthy motor.. This trend is for reference  
only