



TO UTILITY

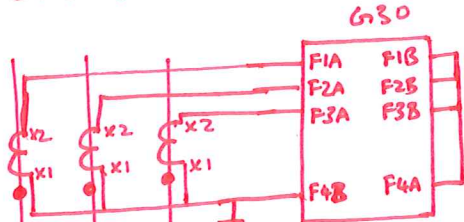

(Q1) ↑

52 GENERATOR BREAKER


GENERATOR

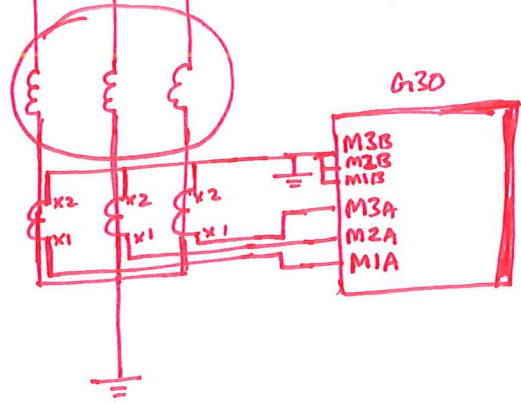

(Q1)

Is this configuration okay?
Will S0/S1/S7 functions all generate correct power/current readings?

OR DOES IT NEED TO BE

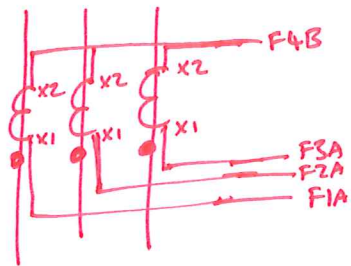

?
=