



*The selected anchor should permit in-plane horizontal and vertical movement between the column and masonry while preventing out-of-plane movement perpendicular to the wall surface.