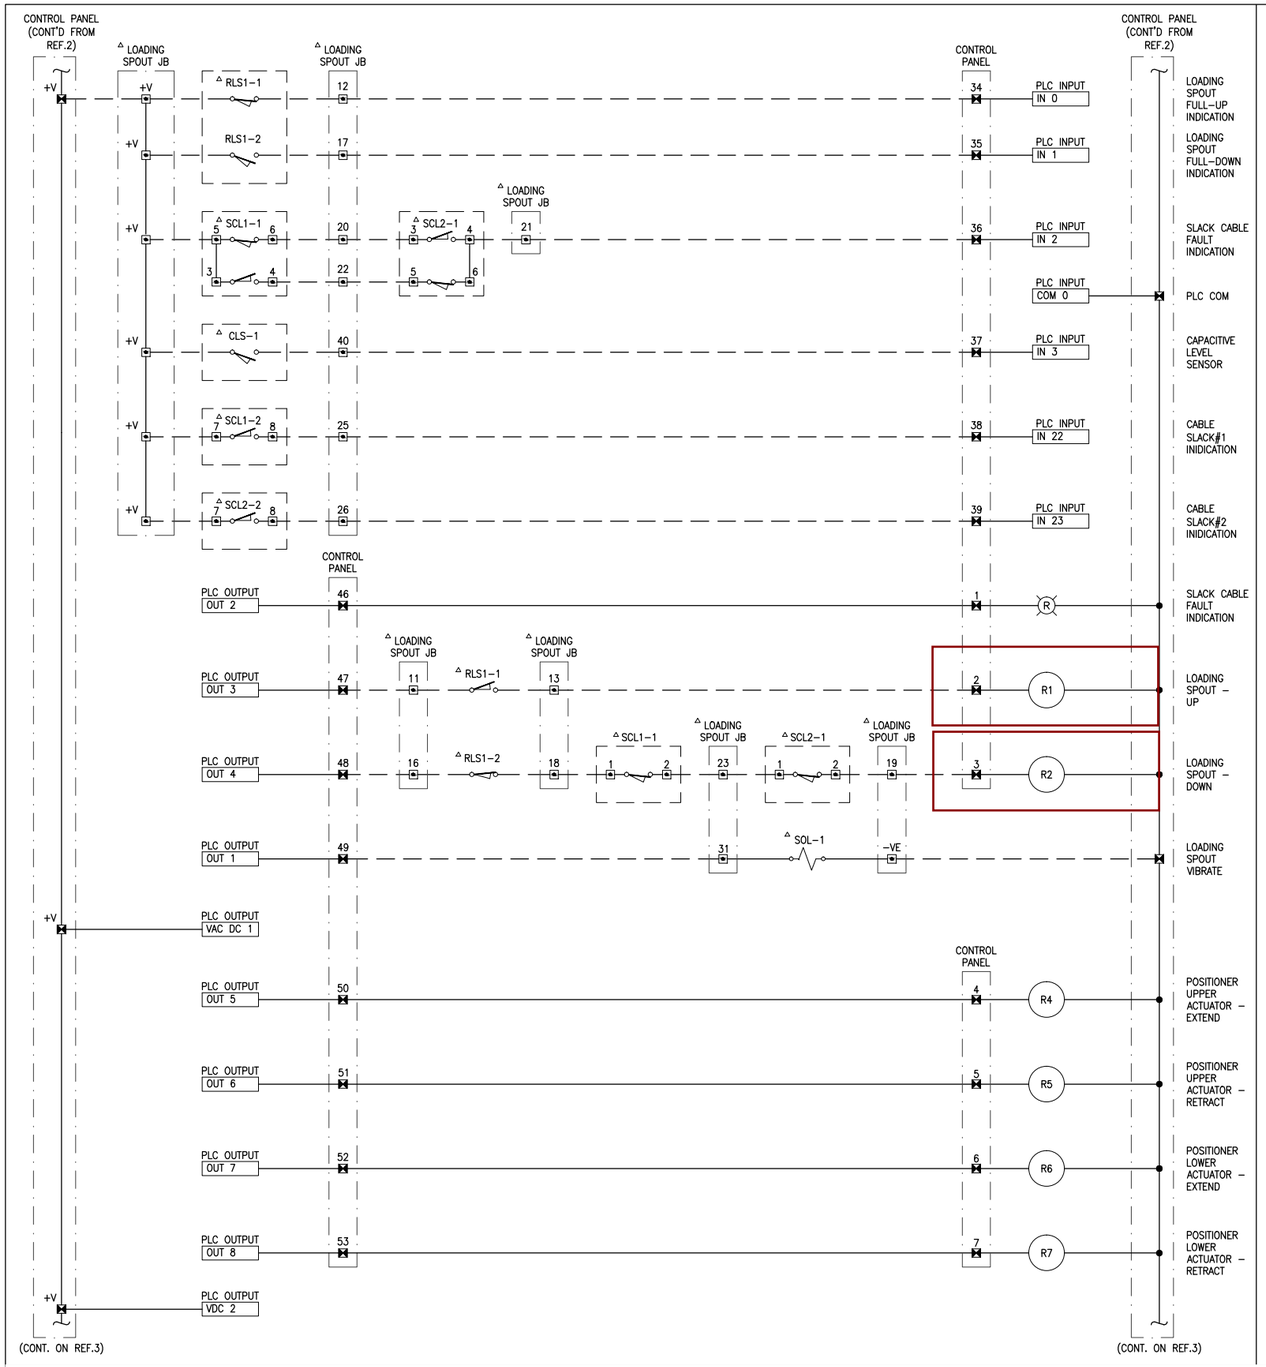
CONTROL PANEL (CONT'D FROM REF.2)
LOADING SPOUT JB
RLS1-1
RLS1-2
SCL1-1
SCL2-1
CLS-1
SCL1-2
SCL2-2
CONTROL PANEL
PLC INPUT IN 0
PLC INPUT IN 1
PLC INPUT IN 2
PLC INPUT COM 0
PLC INPUT IN 3
PLC INPUT IN 22
PLC INPUT IN 23
LOADING SPOUT FULL-UP INDICATION
LOADING SPOUT FULL-DOWN INDICATION
SLACK CABLE FAULT INDICATION
PLC COM
CAPACITIVE LEVEL SENSOR
CABLE SLACK#1 INIDICATION
CABLE SLACK#2 INIDICATION
PLC OUTPUT OUT 2
PLC OUTPUT OUT 3
PLC OUTPUT OUT 4
PLC OUTPUT OUT 1
PLC OUTPUT VAC DC 1
PLC OUTPUT OUT 5
PLC OUTPUT OUT 6
PLC OUTPUT OUT 7
PLC OUTPUT OUT 8
PLC OUTPUT VDC 2
SOL-1
R
R1
R2
R4
R5
R6
R7
SLACK CABLE FAULT INDICATION
LOADING SPOUT - UP
LOADING SPOUT - DOWN
LOADING SPOUT VIBRATE
POSITIONER UPPER ACTUATOR - EXTEND
POSITIONER UPPER ACTUATOR - RETRACT
POSITIONER LOWER ACTUATOR - EXTEND
POSITIONER LOWER ACTUATOR - RETRACT
(CONT. ON REF.3)
(CONT. ON REF.3)

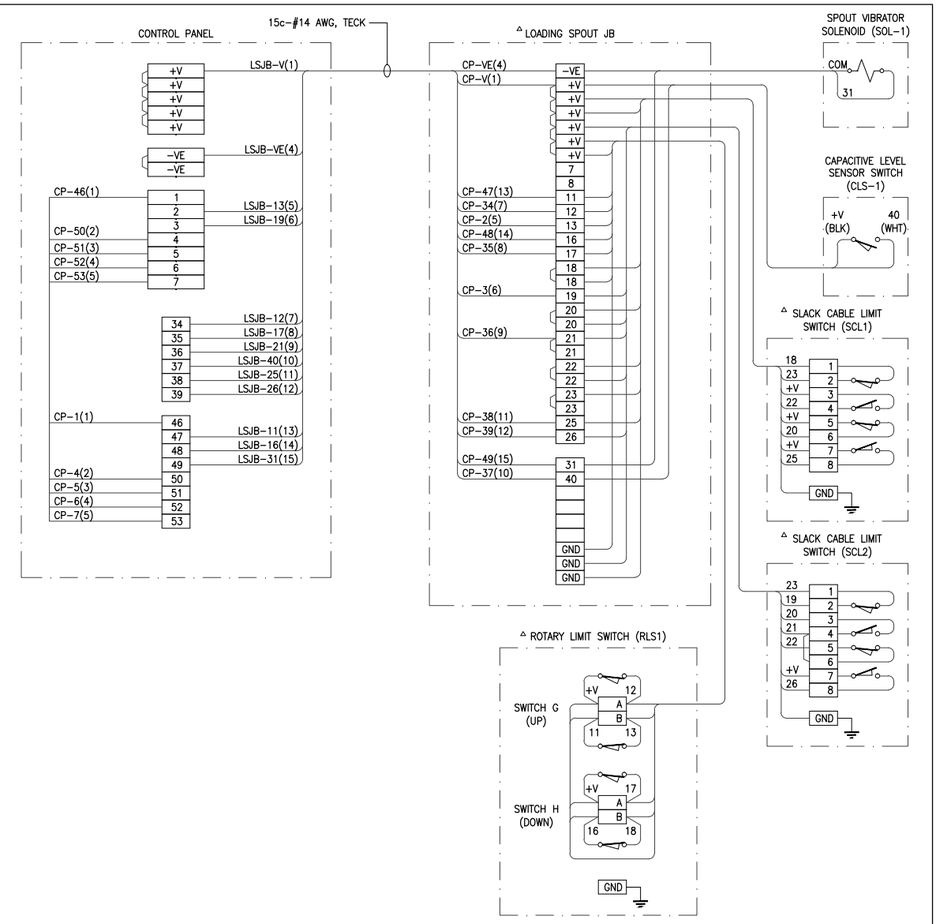
CONTROL PANEL
15c-#14 AWG, TECK
LSJB-V(1)
LSJB-VE(4)
LSJB-13(5)
LSJB-19(6)
LSJB-12(7)
LSJB-17(8)
LSJB-21(9)
LSJB-40(10)
LSJB-25(11)
LSJB-26(12)
LSJB-11(13)
LSJB-16(14)
LSJB-31(15)
CP-46(1)
CP-50(2)
CP-51(3)
CP-52(4)
CP-53(5)
CP-1(1)
CP-4(2)
CP-5(3)
CP-6(4)
CP-7(5)
LOADING SPOUT JB
CP-VE(4)
CP-V(1)
CP-47(13)
CP-34(7)
CP-2(5)
CP-48(14)
CP-35(8)
CP-3(6)
CP-36(9)
CP-38(11)
CP-39(12)
CP-49(15)
CP-37(10)
SPOUT VIBRATOR SOLENOID (SOL-1)
CAPACITIVE LEVEL SENSOR SWITCH (CLS-1)
+V (BLK)
40 (WHT)
SLACK CABLE LIMIT SWITCH (SCL1)
SLACK CABLE LIMIT SWITCH (SCL2)
ROTARY LIMIT SWITCH (RLS1)
SWITCH G (UP)
SWITCH H (DOWN)
GND

LEGEND: