


CONCERNS

1. IS PUNCHING SHEAR AN ISSUE WHILE CONSIDERING NON-MONOLITHIC POURS?
2. TIE-IN REINF. DESIGN?

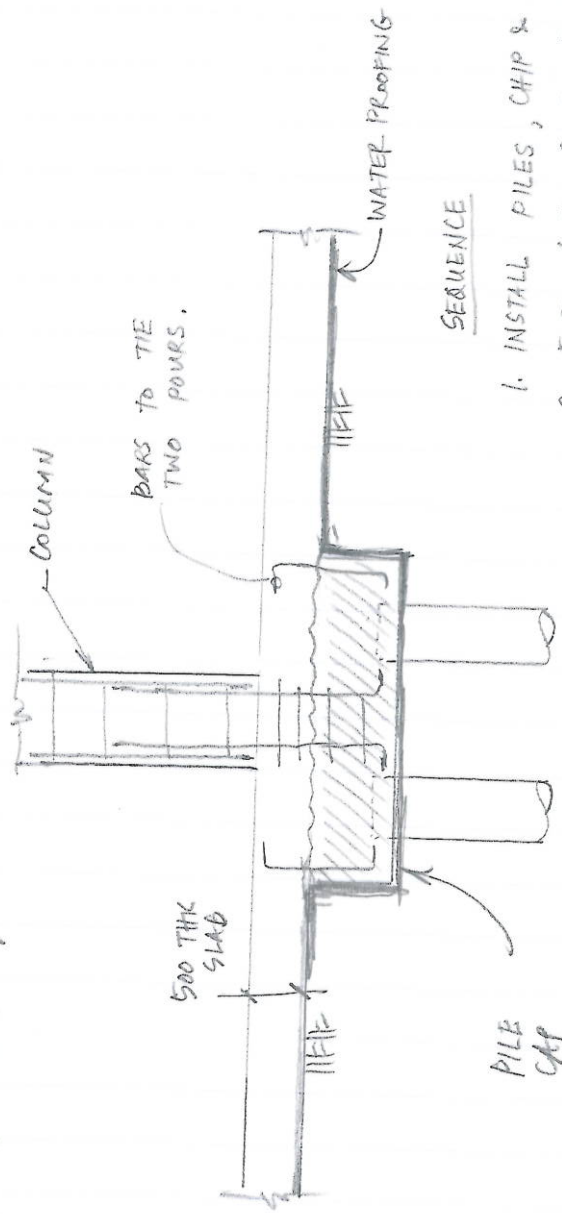

SEQUENCE

1. INSTALL PILES, CHIP & PREPARE
2. FORM AND POUR PILE CAP
TO BOTTOM OF BASEMENT SLAB
3. INSTALL WATER PROOFING
4. POUR BASEMENT SLAB CONTINUOUS
OVER PILE CAP.