



AERIAL SECTION

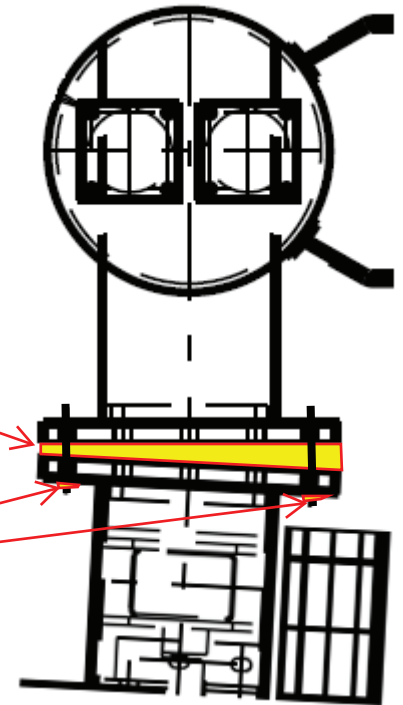

Install structural spacer between flanges to set correct VMS orientation.

Install tapered washers to ensure bolts are fully engaged.

REFER SHEET 1 FOR WELD DETAIL

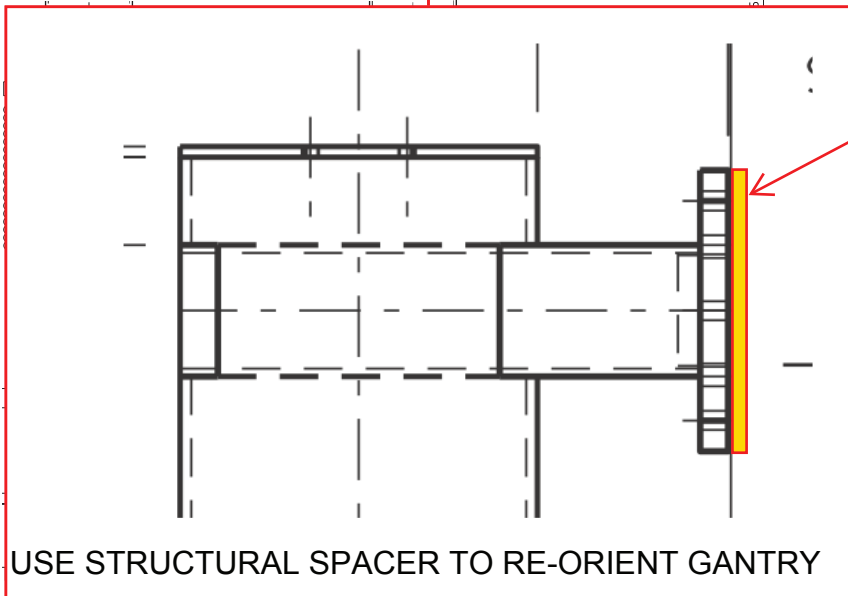

USE STRUCTURAL SPACER TO RE-ORIENT GANTRY

ITEM 6 POST TYPE B
1 REQD MATL STL GALV

