


3000 PSI


DIE REACTION

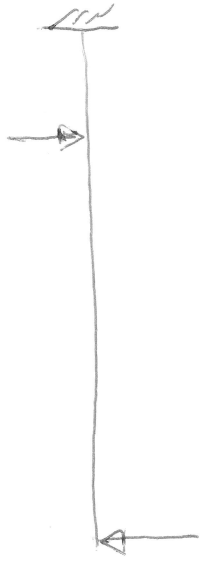

P

PROPPED
CANTILEVER

(STATICALLY INDETERMINANT)

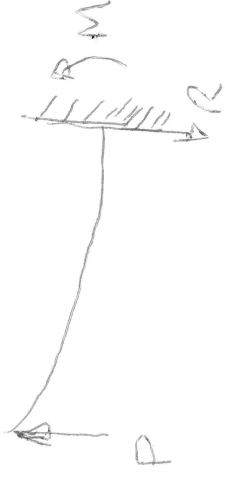

CALCULATE DEFLECTION FOR
LOAD P

THEN USE SUPERPOSITION TO
FIND THE RESTORING FORCE
THE DIE.

SO

DIE RESTORING
FORCE

