


# DRAINED V. UNDRAINED ANALYSES

7

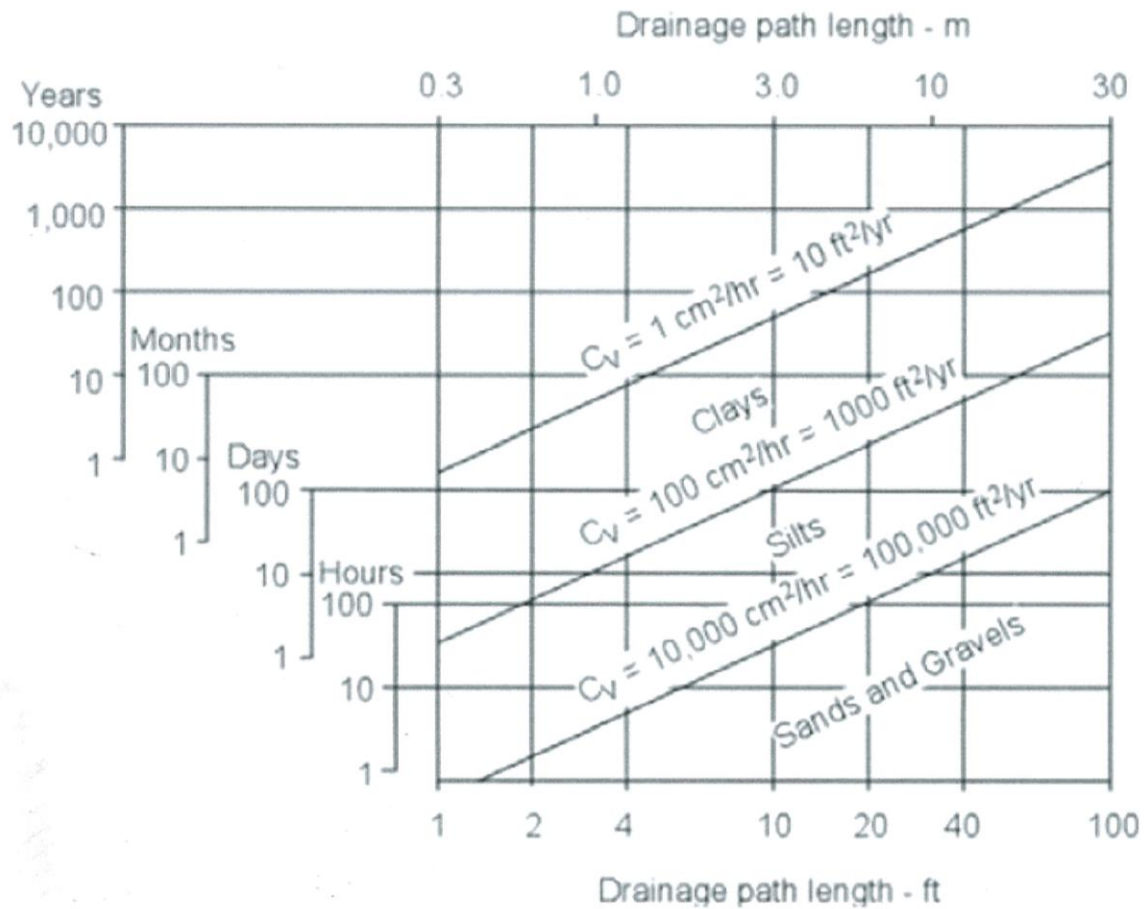

- Time required for 99% dissipation of excess pore-water pressures (Duncan and Wright, 2005)