



1) APPROACH WITH SUPPLEMENTAL ANCHORAGE REINFORCING

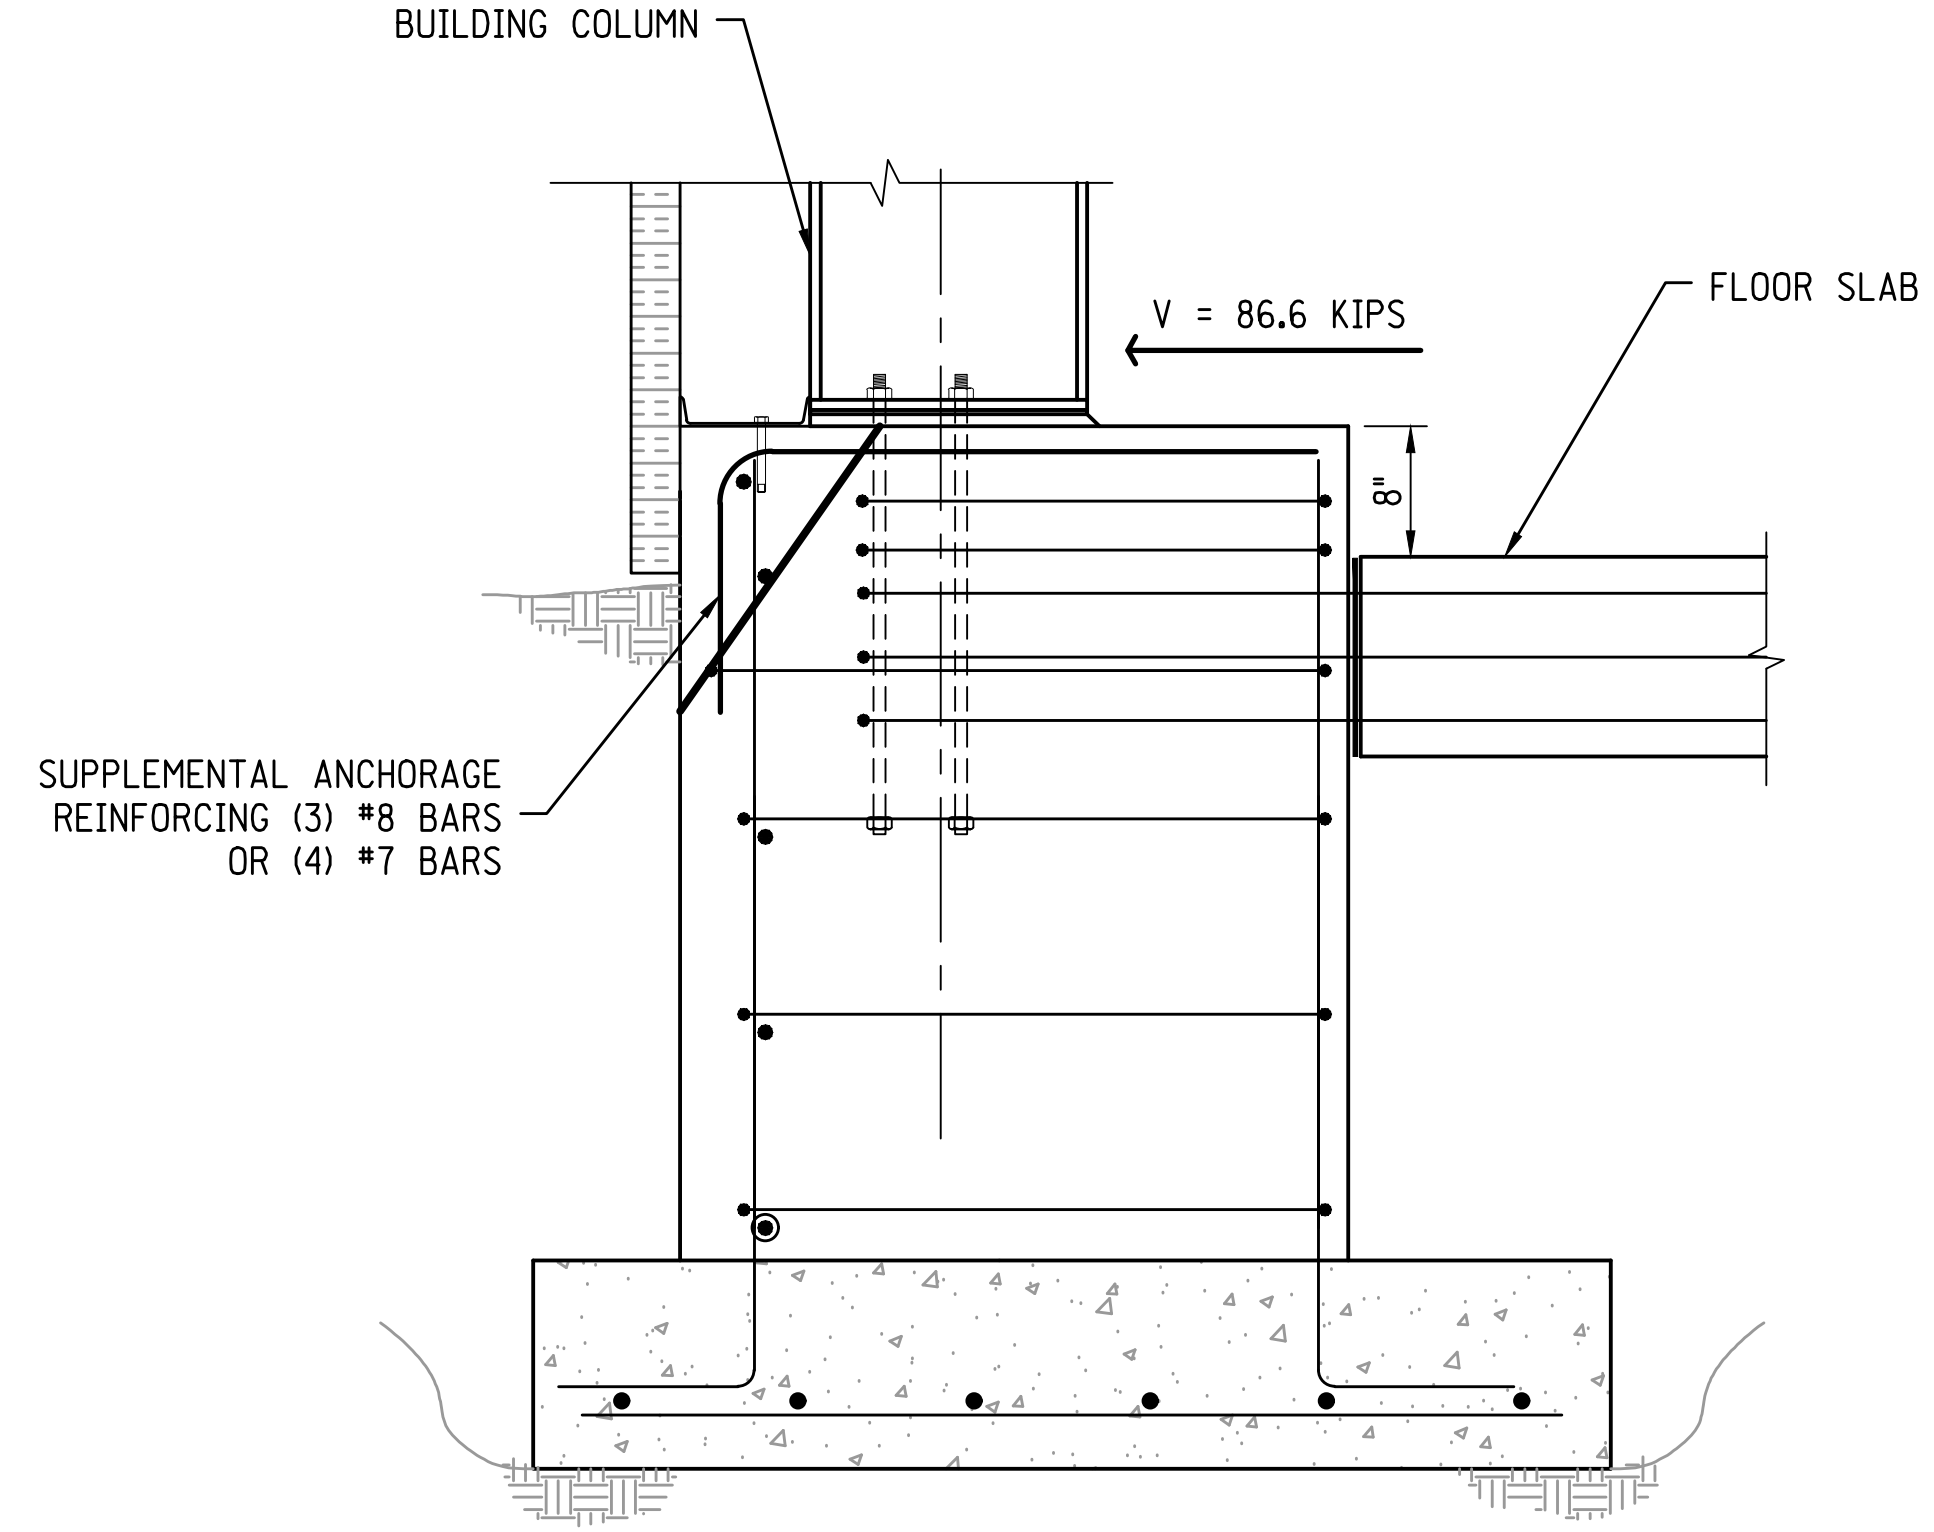

2) APPROACH WITH EMBEDDED WIDE FLANGE MEMBER TO TRANSFER SHEAR

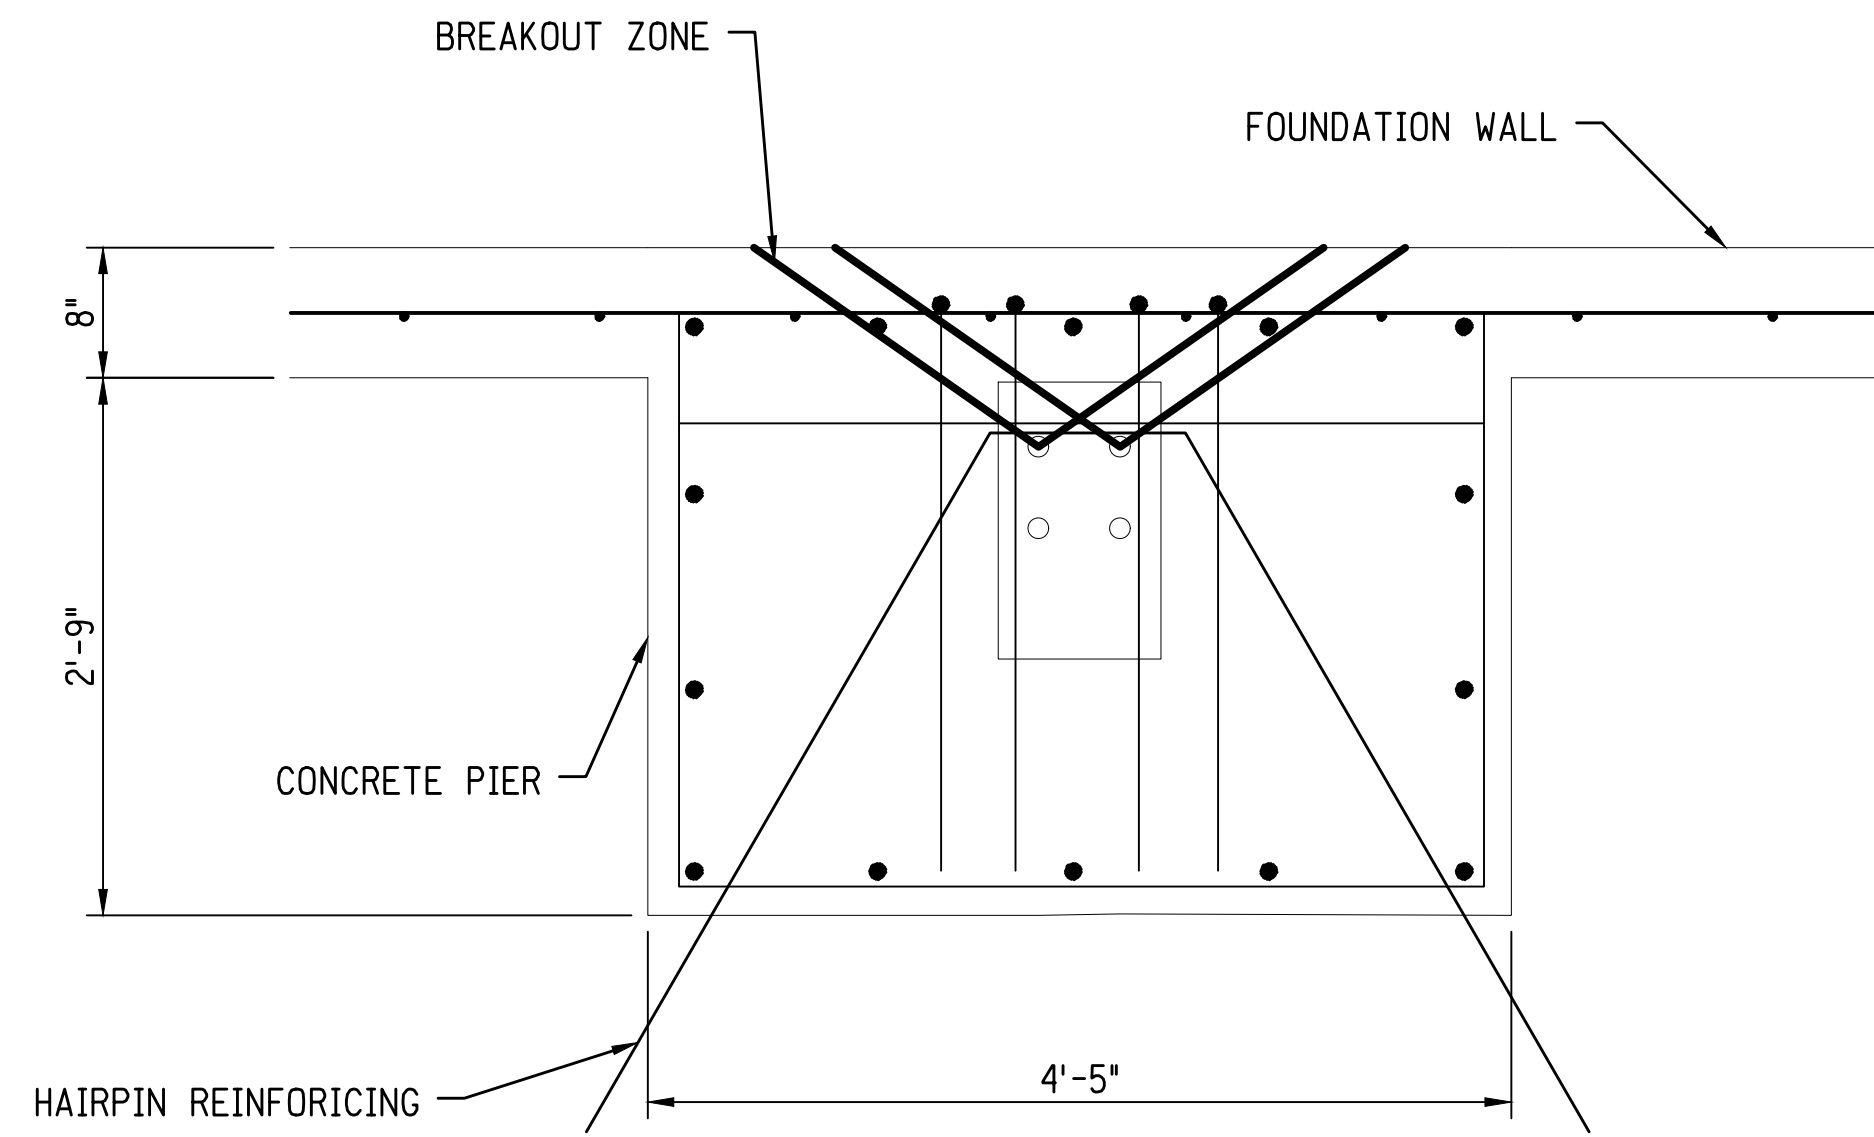