

9.1.1. Startup



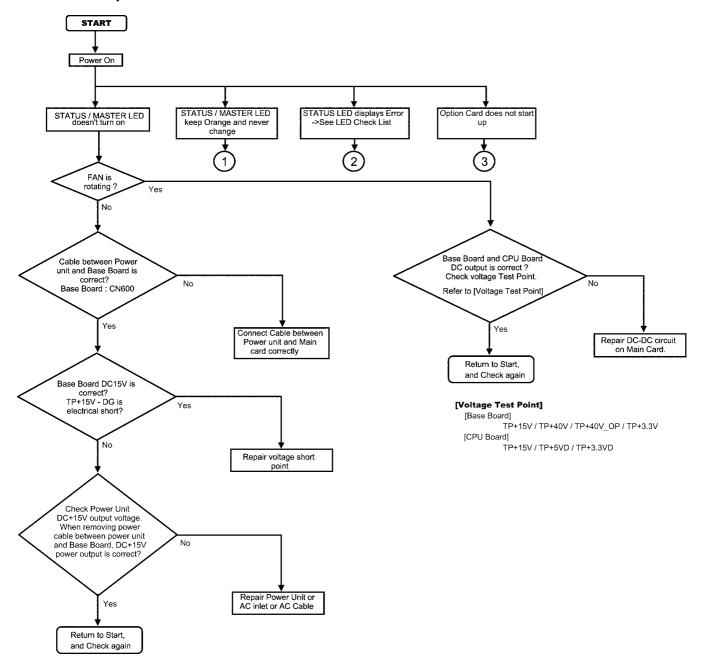

According to the table (LED Check List), please find the failure point. RED Blink x 2 Flash ROM Test NG2 Repair Flash ROM (IC203) (U-BOOT Error) Check SDRAM Address signals RED Blink x 3 SDRAM(IC102/103) DDR_A[**],DDR_BA[2:0] SDRAM Address Bus Test NG RED Blink x 4 Check SDRAM Data signals SDRAM Data Bus Test NG SDRAM(IC102/103) DDR_D[15:0] SDRAM Memory Cell Failure RED Blink x 5 Repair SDRAM Devices SDRAM Memory Cell Test NG (IC102/103) RED Blink x 6 FPGA LSI Failure FPGA Diag Test NG / Code Load NG Repair FPGA (IC201) SRAM Memory Cell Failure Amber Blink x 6 SDRAM Memory Cell Test NG Repair SRAM Devices

(IC206)

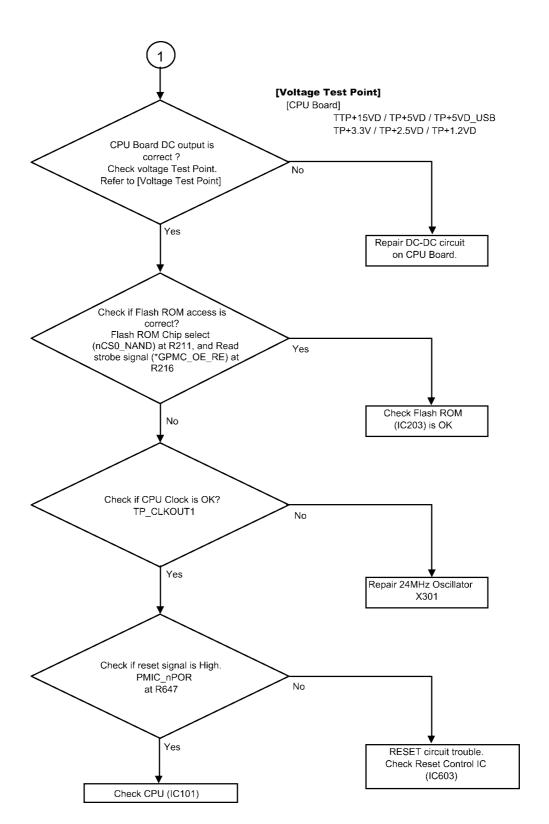