A SUPPLEMENT TO ANALYSIS AND DESIGN OF FLIGHT VEHICLE STRUCTURES

William F. McCombs

TABLE OF CONTENTS

PREFACE

The widely used and recommended college/industry textbook "Analysis and Design of Flight Vehicle Structures" by Dr. E.F. Bruhn has had only one revision since its inception in 1965. That was the 1973 edition in which Chapter A23 was revised and expanded, Chapter C13 was completely rewritten by another author and a few minor changes were made in Chapter 11. Aside from these the book remains in its original form.

The purpose of this Supplement is to increase the scope and usefulness of the textbook in numerous specific areas of analysis. These include columns, beam-columns, bending strength, margins of safety, tension field analyses, fastener/ joint data, arches, bulkheads and numerous others. The practical use of the Supplement is discussed in the Introduction. Only one or two applications of the Supplement's contents can be worth much more than its cost.

The Supplement may be expanded in some future year, so any suggestions for this, or for corrections or changes in its current text will be appreciated. Those readers who wish to be informed of any future revisions or who have suggestions can contact the author at P.O. Box 763576, Dallas, TX 75376-3576 (Tel.214 337-5506).

The author is one of the coauthors of the textbook. His career includes over forty years of experience in structural analysis and design of numerous aircraft and missile projects in the aerospace industry. Also included are technical papers and the preparation and teaching of practical courses in structural design and analysis for engineers working in the aerospace and other industries.

<div align="right">

William F. McCombs

</div>

FOREWORD

I am pleased to have the opportunity to recommend this Supplement to my late father's widely used college/industry textbook "Analysis and Design of Flight Vehicle Structures". I hope its practical applications will be a benefit to all who have the textbook. The additional data contained in this Supplement can be applied to both the study and the work of structural design and analysis. The Supplement should also be of interest to, and eventually benefit, those who may be considering purchasing the textbook.

<div align="right">

Patricia Bruhn Beachler

</div>

INTRODUCTION

The purpose of this Supplement is to increase the scope and usefulness of the widely used and recommended college/industry textbook "Analysis and Design of Flight Vehicle Structures" by E.F.Bruhn. As such it is by no means a revision of that book. Rather, it is an expansion and clarification of numerous topics and data in the book, along with the introduction of additional topics and data.

For best coordination with the textbook the following has been done. Where an existing article such as, for example, Art. C1.13 has been expanded or otherwise changed or corrected, the Supplement includes it as Art. C1.13a, the letter indicating a change or addition. When a new topic is added to a chapter it is given an article number which is subsequent to the last article number in that chapter and includes no letter. For example, the last article in Chapter C3 is Art. C3.14. Two additional topics, "Yield Stress Bending Modulus" and "Residual Stresses Following Plastic Bending" have been added, so they have been given article numbers C3.15 and C3.16 respectively with no letters.

The same thing has been done with figure numbers and table numbers. Where a figure has been changed or added to, it retains the same figure number with an added letter. For example, Figure 2.27 has added information so it has the designation Fig.2.27a in the Supplement. When a new figure is added it is given a number which is subsequent to the last figure number in the chapter, so no letters are used with its number in the Supplement. This procedure also applies to tables.

Although the Supplement provides an Index, for most usefulness the textbook must be marked in such a manner as to guide the reader directly to revised, corrected and new topics, figures, tables and references in the Supplement. A highly recommended scheme for doing this is provided later.

Structural design and analyses are based on theory, empirical methods and data, various assumptions and individual judgement. The assembled structure is a result of various specific manufacturing methods and procedures. Because of these things and also the possibility of inadvertent calculation errors, it is always necessary to prove the adequacy and safety of the completed structure by means of a sufficient test program before it is put into use. Such tests must demonstrate the structure's adequacy as to ultimate and yield strength, fatigue life, fracture and stiffness. The test results must be properly evaluated since the test article's materials usually have properties in excess of the minimum required values.

Procuring agencies such as the military, the airlines and other government and private organizations usually specify the design and test requirements and other criteria which must be used or met.

Coordination of the Supplement and the Textbook*

In order to easily guide the reader from the textbook to the Supplement, the following marking of the textbook is recommended.

1. On the textbook's Table of Contents place an asterisk, in red ink, after "Contents" and add the following footnote at the bottom of the page:

* A red asterisk preceding any article or figure number in the textbook means that additional material is available in the same article or figure in the Supplement.

2. For each textbook article listed in the Supplement's Table of Contents, place a large asterisk, in red ink, just to the left of each corresponding article number in the textbook (e.g., *A11.2).

3. The 12 articles in the Supplement's Table of Contents not having a letter in the article number are new articles. (e.g., C3.18 Beam-Column Analyses). Their numbers and titles should be written in at the end of their chapters, with a red asterisk just to the left of their article numbers.

4. The following figures in the textbook should have an asterisk, in red ink, placed just to the left of their figure numbers, to indicate that a revision or additional data is in the Supplement:

A5.1	C2.17	C2.26	C5.14	C8.15	C8.28	C11.47
A18.8	C2.18	C2.27	C8.8a	C8.20	C8.29	C11.48
C1.8	C2.19	C3.27	C8.11	C8.25	C10.15	D1.15
C2.2	C2.20	C3.28	C8.13	C8.26	C11.43	
C2.16	C2.25	C5.11	C8.14	C8.27	C11.44	

5. The additional references shown on p. 30 (for Chapter C2) and on p.A21 (for Chapters C3, C4, C7 and C11) should be written in at the end of the list of references for these chapters.

6. Put a black asterisk after "RINGS" on the title of p.A9.1 and at the bottom of the right hand column add the footnote * See Appendix B of the Supplement for alternative analyses of bulkheads, frames, arches and bents.

* To increase the scope and usefulness of other such textbooks, put appropriate asterisks in their texts with footnotes saying which article to see in the Supplement.

A5.23a Introduction

Add the following at the end of Art. C5.23. For a discussion of all types of beam-columns, including non-uniform members, with numerous example problems see "Engineering Column Analysis" described in Art. A18.27a.

A5.24a Effects of Combined Axial and Lateral Loads

Add the following at the end of Art. C5.24. Formulas and example problems for beams in tension are available in the book described in Art. A18.27a.

A5.25a Equations for a Compressive Axially Loaded Strut with Uniformly Distributed Load

Add the following at the end of Art. A5.25. The deflection, y, at any beam station can be calculated as follows.*

$$M = M_Q + M_P = M_Q + Py$$

therefore

$$y = -(M - M_Q)/P$$

$$= (M_Q - M)/P$$

The negative sign is introduced since a positive beam bending moment produces a negative (downward) deflection. M_Q is the moment due to the lateral loads only and M is the final moment.

To calculate the slope at any station calculate the deflection at a point very slightly to the left of the station and then very slightly to the right, the same amount, ΔL. The slope is then

$$slope = (y_R - y_L)/2\Delta L$$

A5.26a Formulas for Other Single Span Loadings**

Table A5.1a presents numerous additional cases of single span loadings.**

The case of a beam-column with a varying EI or a varying axial loading requires a numerical analysis, just as does a column of this nature. The numerical analysis procedure is presented in C3.18.

A5.27a Combinations of Load Systems, Margins of Safety and Accuracy of Calculations

For a beam-column the true margin of safety must be calculated as discussed in Art. C4.23a. The allowable stresses or bending moments are calculated as discussed in Art. C3.18.

A5.28a Example Problems

In Example Problem 2 member BD is considered to be pinned to ABC at joint B. This is why it does not pick up any of the 36,000 in lb bending moment at joint B.

A5.29a Stresses Above Proportional Limit Stress

If a column curve is not available

for the beam material, the axial stress, P/A, is calculated, $f_c/F_{0.7}$ is calculated Fig. C2.16 is entered with this value and E_t/E is obtained. Then $E_t = E(E_t/E)$. E' in Art. A5.29 is actually E_t.

A5.31a Beam-Columns in Continuous Structures

Multispan beam-columns require a moment distribution analysis to determine the end moments acting on each span. Once these are known the applicable single span formulas in Table A5.1 and A5.1a can be used to determine the bending moments at any station within a span. This is discussed in Art. C3.18.

A5.32 Approximate Formula for Beam-Columns

For preliminary sizing when there are no end moments the following formula can be used to determine the final bending moment at any station

$$M = M_Q/(1 - P/P_{cr})$$

where M_Q is the moment due to the transverse loads only and P_{cr} is the critical load as a column (Chapter 2). This is most accurate for a uniform lateral load and least accurate for a concentrated load. P_{cr} is calculated assuming the member has a stable cross-section even if this is not the case. For a beam in tension the negative sign in the formula is replaced with a positive sign (tension makes the bending moment smaller).

A6.7a Torsion of Solid Non-Circular Shapes

All of the previous formulas are based on the shear stresses being in the elastic range. With ductile materials failure (rupture) does not occur until the shear deformation has gone well into the plastic range (similar to the plastic bending case). The torsional moment at which rupture occurs can be predicted as discussed in Art. C4.20a.

For the special case of tubes having a circular cross-section the failing torque can be calculated as discussed in Art. C4.20 and its associated Figures C4.17 to C4.30 and in the example problems of Art. C4.21.

A7.1a Introduction

For practical purposes the deflection and slopes of beams are calculated as discussed in Art. A7.12a, standard formulas being used for uniform beams, and for varying section beams using tables such as Table C3.3 and the "End Fixity" discussion.

A7.12a Deflections and Angular Changes of Beams by Method of "Elastic Weights"

For beams of uniform section deflections and slopes are most easily cal-

---

* See footnote on p.37, L.H. column

** For other distributed loadings replace them with several statically
equivalent concentrated loads and use superposition for these. For
any case of one end fixed one simply supported not shown, use the
both ends fixed case and then multiply the moment at the fixed end
by (1 + COF); M is zero at the other end. The exception to this is
case 19 where (1 - COF) must be used.

Table A5.1a Continuation of Table A5.1

$$M = C_1 \sin x/j + C_2 \cos x/j + f(w)$$

Case	LOADING	C_1	C_2	$f(w)$	MAX. MOMENT
9	Partial Uniformly Distributed Load	$x < a$: $-\dfrac{2wj^2 \sin a/j \sin f/j}{\sin L/j}$ $a < x < b$: $\dfrac{2wj^2 \sin a/j \sin e/f}{\tan L/j} - wj^2 \sin b/j$ $b < x < L$: $\dfrac{2wj^3 \sin a/j}{\tan L/j} \sin e/f$	0 $-wj^2 \cos a/j$ $-2wj^2 \sin a/j \sin b/j$	0 wj^2 0	Determine by plotting
10	Symmetrical Partially Uniform Distrib. Load	$x < a$: $-wj^2 \sin a/j \sec L/2j$ $a < x < L-a$: $-wj^2 \tan L/2j \cos a/j$ $L-a < x < L$: $wj^2 \sin a/j \sec L/2j \cos L/j$	0 $-wj^2 \cos a/j$ $-2wj^2 \sin a/j \sin L/2j$	0 wj^2 0	$wj^2\left[1-\dfrac{\cos a/j}{\cos L/2j}\right]$ At Midspan
11	Two Symmetrical Concentrated Loads	$x < a$: $-Wj\dfrac{\cos b/2j}{\cos L/2j}$ $a < x < L-a$: $-Wj \sin a/j \tan L/2j$ $L-a < x < L$: $Wj\dfrac{\cos L/j \cos b/2j}{\cos L/2j}$	0 $-Wj \sin a/j$ $-Wj\dfrac{\sin L/j \cos b/2j}{\cos L/2j}$	0 0 0	$-Wj\dfrac{\sin a/j}{\cos L/2j}$ At Midspan
12	Concentrated Moment	$x < a$: $-\dfrac{m \cos b/j}{\sin L/j}$ $x > a$: $-\dfrac{m \cos a/j}{\tan L/j}$	0 $m \cos a/j$	0 0	If $b < \pi j/2$, M_{max} at $x = a$ If $b > \pi j/2$, M_{max} at $L - \pi j/2$
13	Fixed End Beam - Uniform Load	$-\dfrac{wjL}{2}$	$-\dfrac{wjL}{2 \tan L/2j}$	wj^2	At $x = 0$: $M = wj^2\left[1 - \dfrac{L/2j}{\tan L/2j}\right]$ At $x = L/2$: $M = -wj^2\left[\dfrac{L/2j}{\sin L/2j} - 1\right]$
14	Fixed End Beam-Concentrated Load at Center	$x < L/2$: $-1/2 \, Wj$ $x > L/2$: $1/2\,Wj\left[2\cos L/2j - 1\right]$	$1/2Wj\left[\dfrac{1-\cos L/2j}{\sin L/2j}\right]$ $1/2Wj\left[\dfrac{\cos L/j - \cos L/2j}{\sin L/2j}\right]$	0 0	$M_{max} = 1/2Wj\left[\dfrac{1-\cos L/2j}{\sin L/2j}\right]$ At $x = 0$ $(M_x = L/2) = -M_{max}$
15	Fixed Simple Beam Uniform Load	$x < L/2$: $-\dfrac{\tan L/2j - L/2j}{\tan L/j - L/j} wLj$ $x > L/2$: $-\dfrac{1-\cos L/j}{\sin L/j} wj^2$	$\left[\dfrac{\tan L/2j - L/2j}{\tan L/j - L/j}\right]x$ $\left[\tan L/j (wLj)\right] - wj^2$	wj^2	$M_{max} = wLj\left[\dfrac{\tan L/2j - L/2j}{\tan L/j - L/j}\right]\cdot[\tan L/j]$ At $x = 0$
16	Fixed Simple Beam Concentrated Load	$x < L/2$: $-\dfrac{Wj}{2}\left[\dfrac{j\tan L/j(\sec L/2j-1)}{j \tan L/j - L}\right]$ $x > L/2$: $Wj/2\left[\dfrac{L+2j(\sin L/2j - 2L\cos L/2j)}{j \tan L/j - L}\right]$	$\dfrac{WL}{2}\left[\dfrac{j\tan L/j(\sec L/2j-1)}{j\tan L/j - L}\right]$ $\dfrac{WL}{2}\left[\dfrac{L\tan L/j(\sec L/2j-1)}{j\tan L/j - L}\right] - 2\sin L/2j$	0 0	$M_{max} = \dfrac{WL}{2}\left[\dfrac{j\tan L/j(\sec L/2j-1)}{j\tan L/j - L}\right]$ At $x = 0$
17	Cantilever-Concentrated End Load			Or use case V with $L=2L$, $W=2W$ and $a=b=L$ there for same results	$M_{max} = Wj \tan L/j$ $\times\left(1 - \dfrac{\sin a/j}{\sin L/j}\right)$ At $x = L$
18	Cantilever-Uniform Load			Or use Case III with $L=2L$ and same w there for same results	$M_{max} = wj\left[j(1-\sec L/j) + L\tan L/j\right]$ At $x = L$
19	Fixed End Beam With Lateral Displacement	For C_1 use Case II with $M_2 = -M_1$	Or calculate $M = 6EIa/L^2(2\beta - \alpha)$ See Art. 11.15a item 6. $(\theta = a/L)$ $C_2 = M_1$ (case II)		$M_{max} = \dfrac{a P \tan L/2j}{2\left[\tan L/2j - L/2j\right]}$ At $x = 0$ And $-M_{max}$ At $x = L$
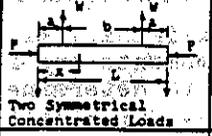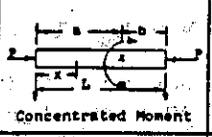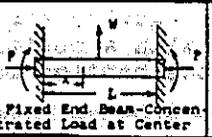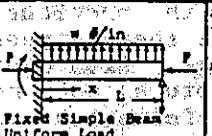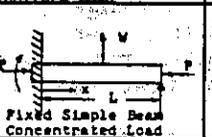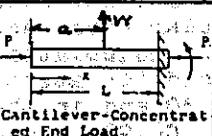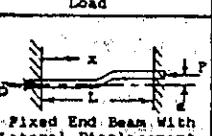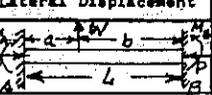
20		$M_A = \dfrac{WL(b/j\cos L/j - \sin L/j + \sin a/j + \sin b/j - L/j\cos b/j + a/j)}{(L/j)(2 - 2\cos L/j - L/j\sin L/j)}$ $M_B =$ as above but switching a and b
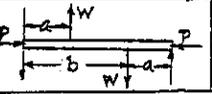
21		$M_{Max} = Wj\sin a/j\left[\cos b/j - \sin b/j(1 + \cos L/j)/\sin L/j\right]$ (Occurs under the loads W) This is a superposition of Cases V

culated by using beam deflection and slope formulas widely available in the structural literature. These formulas are based on bending stresses only and are accurate unless the web is very thin or otherwise quite flexible due to holes etc., in which cases there may be significant additional deflection due to shear. For beam-columns the deflections and the slopes at any station can be calculated as discussed in Art. A5.25a.

For beams with a varying EI a numerical analysis is necessary to determine the deflections and slopes. This can be done as discussed and illustrated in Art. C3.18 where Table C3.3 shows the deflections due to the transverse loads only and Tables C3.4 and C3.5 show the additional deflections due to the axial loads, the final bending moments being in Table C3.6 The deflections are obtained using the data in the tables and the geometric series, p.35, as was done in Table C3.6 for moments. Tables for end fixity are discussed in Art. C3.18. With any elastic end restraint a moment distribution analysis is required to determine the end moments on the beam etc. as discussed in Ref. 3 (Art. A18.27a).

A11.2a Definitions and Derivations of Terms

Add the following at the end of the article. In the moment distribution procedure, where adjacent spans "meet" (at a support) there is assumed to be a "joint" even though the member may be continuous across the joint. The sketch in Fig. A11.92 shows the direction of (+) and (-) moments as they act upon the spans and also upon the joint. As seen there (+) moments act clockwise on the span and counterclockwise on the joint. This is different from conventional beam sign convention where a (+) moment produces compression in the "upper" surface.
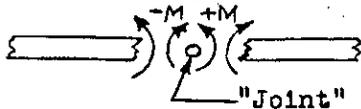

Fig. A11.92 Sign Convention[*]

A11.5aa Example Problems

The stiffness factor, K, as used in Art. A11.5a and subsequently, is a "relative" factor rather than a true one. It has the value EI/L for the far end fixed and .75 EI/L for the far end pinned. As such it applies only when there is no external elastic restraint, k (in-lbs per radian)at the ends or at any joint, and when there is no axial load in the spans. In such cases "correction factors" must be applied to it, as shown in Art.A11.14 for example. In general, to avoid inad-

vertent calculation errors it is best to use the true value of the stiffness factor, SF, which is in in-lbs per radian and is

$$SF = 4SCEI/L$$

where SC is the stiffness coefficient and can be obtained from Fig. A11.47 (as "C") or calculated per Art. A11.13a. Doing this eliminates the need for introducing the correction factors otherwise needed. The carry over factor, COF, can be obtained from Fig. A11.46 or calculated per Art. A11.13a.

In doing moment distribution calculations, unless the "far end" of a span is pinned (or free) it is assumed to be fixed for determining the values of the stiffness and carry over factors.

A11.13a Fixed End Moments, Stiffness and Carry Over Factors for Beam-Columns of Constant Cross-Section

Sometimes it is necessary to use the values of the SC and the COF (see Art. A11.5aa) for larger values of L/j than are given in Fig. A11.46, A11.47 and A11.56 (for $2\beta-\alpha$). Those values can be calculated as follows for compression members:[*]

SC (far end pinned) $= 3/4\beta$
SC (far end fixed) $= 3\beta/(4\beta^2 - \alpha^2)$
COF $= \alpha/2\beta$

where $\alpha = 6(\frac{L}{j}\cosec\frac{L}{j} - 1)/(L/j)^2$

$\beta = 3(1 - \frac{L}{j}\cot\frac{L}{j})/(L/j)^2$

For members in tension the same formulas can be used, but the trigonometric functions are replaced with the hyperbolic functions, cosech and coth. Extensive tables of the SC and COF values (to 6 significant figures) from $L/j = 0$ to 2π for compression members and from 0 to 50 for tension members are in the book described in Art. A18.27a.[**]

A11.15a Secondary Bending Moments in Trusses with Rigid Joints

Art. A11.15 gives a procedure for determining the secondary bending moments in such trusses but no illustrative example is provided. The following illustrates the procedure except that in step one one finds the relative rotation of each member using the method of virtual work, step 2 is omitted and in step 3 "its relative rotation" is used in place of "these transverse displacements". That is, due to the applied loads the truss joints move, and therefore the members

---

[*]Some books use an opposite sign convention.

[**] In Fig.A11.56 $2\beta -\alpha$ can be calculated as follows:

$2\beta-\alpha = \frac{6}{(L/j)^2}\left[2 - \frac{L}{j}\left(\frac{1 + \cos L/j}{\sin L/j}\right)\right]$

[**] Also obtainable from p. B12 and B13

rotate relative to each other. These rotations generate fixed end moments at their ends (just as a beam with unequally deflecting supports will undergo an angular rotation and develope fixed end moments). The following illustrates the procedure using the truss shown in Fig.A11.92.

Fig. A11.92 Applied and Internal Loads
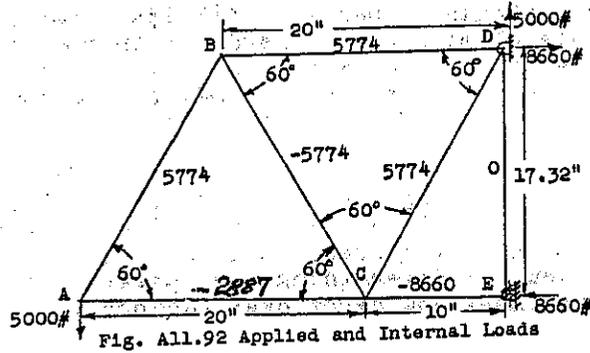
1. For the applied loads the resulting internal loads in the members are determined as shown in the figure.

2. Member BC is arbitrarily selected as the "base member" from which the rotations of all other members are calculated.

3. For each other member (one at a time) a clockwise 1 in-lb moment in the form of couple loads (1/L) at its ends is applied and reacted with a counter-clockwise couple at the ends of the base member BC. The resulting loads in the truss members are then determined. See Fig. A11.93 and note that only a few (3 or 4) members are load-in this procedure.

4. Then for each loaded member the quantity SuL/AE is calculated and the results summed to obtain the relative rotation, θ, of the member to which the clockwise couple was applied.

5. Steps (3) and (4) are repeated for each of the remaining members to get their relative rotations, θ. Table A11.4 presents the basic data and Table A11.5 summarizes the calculations.

Table A11.4 Basic Data

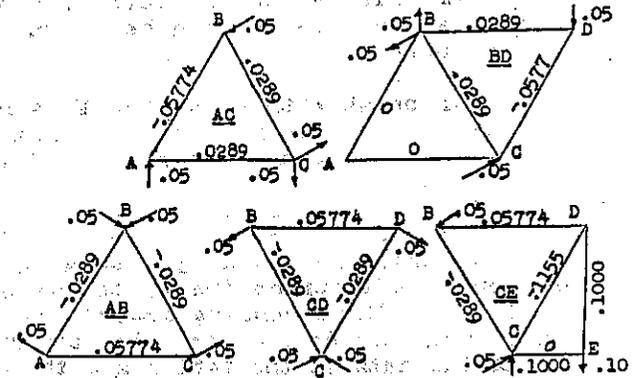| Member	S lbs	L in	A in²	E x10⁶	SL/AE	I in⁴	$\frac{1}{\sqrt{EI/S}}$	L/J
AB	5774	20	.563	10	.0205	.0264	6.76	2.96
AC	-2887	20	.563	10	-.0103	.0264	9.56	2.09
BC	-5774	20	.563	10	-.0205	.0264	6.76	2.96
BD	5774	20	.563	10	.0205	.0264	6.76	2.96
CD	5774	20	.563	10	.0205	.0264	6.76	2.96
CE	-8660	10	.360	10	-.0208	.0108	3.53	2.83
DE	0	17.32	.250	10	0	.0053	∞	0

Fig. A11.93 Relative Rotation Loads

For each of the above members the fixed end moments are calculated as

$$FEM = -6EI\theta/L(2\beta - \alpha)$$

where $2\beta - \alpha$ is obtained from Fig. A11.56 and accounts for the effect of the axial load, S, in the member. A positive (clockwise) relative rotation, θ, produces negative (counterclockwise) FEM's (per Example 2 sketch on p.A11.2) hence the minus sign in the formula. If a member has one end pinned a fixed end moment occurs only at the other end and is calculated as

$$FEM = -6EI\theta(1 - COF)/L(2\beta - \alpha)$$

where COF is from the pinned end to the fixed end. Table A11.5 summarizes the calculations for the values of θ.

6. The fixed end moments at all truss joints are now known and the moment distribution procedure can be carried out as illustrated in Fig. A11.43 to obtain the final moments at the ends of each member. *Then see Art. A5.31a.*

Table A11.5 Calculation of Relative Rotations, θ

Member	SL/AE	Couple at AB u	Couple at AB uSL/AE	Couple at AC u	Couple at AC uSL/AE	Couple at BD u	Couple at BD uSL/AE	Couple at CD u	Couple at CD uSL/AE	Couple at CE u	Couple at CE uSL/AE
AB	.0205	-.0289	-593	-.0577	-1183	0	0	0	0	0	0
AC	-.0103	.0577	-594	.0289	-289	0	0	0	0	-.0289	593
BC	-.0205	-.0289	593	.0289	-593	.0289	-592	-.0289	592	-.0289	1183
BD	.0205	0	0	0	0	.0289	592	.0577	1183	.0577	1183
CD	.0205	0	0	0	0	-.0577	-1183	-.0289	-592	-.1155	-2367
CE	-.0208	0	0	0	0	0	0	0	0	-.1155	0
DE	0	0	0	0	0	0	0	0	0	.1000	0
			$\theta_{AB} = -594$		$\theta_{AC} = -2065$		$\theta_{BD} = -1183$		$\theta_{DC} = 1183$		$\theta_{CE} = -591$

Note: Multiply each θ by 10⁻⁶. DE doesn't rotate since it is held by the supports.

A11.15b The Effects of Increased Internal Loads on Secondary Bending Moments

Although the secondary bending moments in the truss of Art. A11.15a were relatively small, they can become quite large as the internal axial loads in the truss members increase. As the applied loading on the truss approaches the critical loading these moments will approach infinity. This is why the theoretical critical loading for a truss can never be attained; bending failure will precede it. The following example, using the simplest rigid joint truss illustrates this.
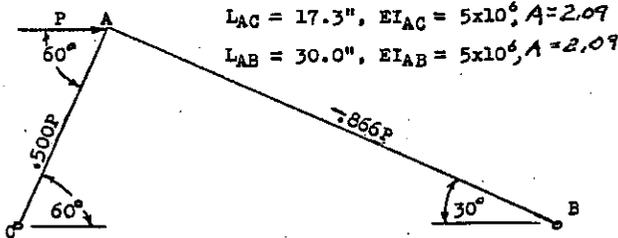

$L_{AC} = 17.3"$, $EI_{AC} = 5 \times 10^6$, $A = 2.09$

$L_{AB} = 30.0"$, $EI_{AB} = 5 \times 10^6$, $A = 2.09$

Fig. A11.94 Rigid Joint Truss with Pinned Ends

A is a rigid joint and ends B and C are pinned. Assuming A to be a pinned joint only to determine the axial loads in AC and BC, they are as shown in the figure. With the axial loads known this simple truss can be analyzed for stability (buckling) as a two-span column with pinned ends, as is illustrated and discussed in Art. C2.3b, Example 2. By successive trial calculations, when P 101700 lbs, $P_{AB} = 88072$ and $P_{AC} = 50850$.

$(L/j)_{AB} = 30/\sqrt{5 \times 10^6/88072} = 3.9816$

$SC_{AB} = -1.5428$

$SF_{AB} = 4(-1.5428)(5 \times 10^6)/30$

$\quad = -1028500$

$(L/j)_{AC} = 17.3/\sqrt{5 \times 10^6/50850} = 1.7446$

$SC_{AC} = .89059$

$SF_{AC} = 4(.89059)(5 \times 10^6)/17.3$

$\quad = 1029600$

Hence, at Joint A $\Sigma SF = 1029600 - 1028500 \approx 0$ so 101700 is the buckling (critical) load for the truss.[*] If A were assumed to be a pinned joint then an applied load of only 63315 would cause AB to buckle as a pin-ended column, since for pinned ends P_{CR} for AB is 54831 and $.866 \times 63315 = 54831$.

To illustrate the effects of applied loadings near the critical loading on secondary bending moments, assume that $P = 100000$ and find the resulting moments.

[*] When ΣSF at any joint ≤ 0 there is no resistance to rotation so an infinitesmal moment will cause rotation and failure.

Let AC be the base member, apply a 1 in-lb couple on AB and react it with an opposite couple on AC as in Fig. A11.95.
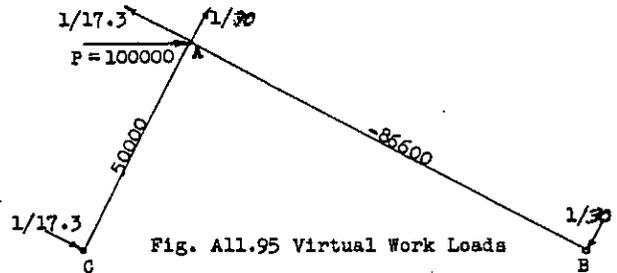
Fig. A11.95 Virtual Work Loads

The relative rotation of member AB is then calculated as follows.

Member	L/AE x10⁶	S	u	SuL/AE x10⁶
AC	.828	50000	1/30	1380
AB	1.435	-86600	1/17.3	-7183
			$\theta = \Sigma = $	-5803

The only FEM is at A since end B is pinned (and AC has no relative rotation).

$FEM_{AB} = -6(5 \times 10^6)(-5803 \times 10^{-6})(1-2.323)/30(1.44)$

$\quad = -5331$ in lbs

Doing the moment distribution for the final moments at A

SC	.8884	-1.394
SF	1027100	-932670
SF	94430	
DF	10.877	-9.877
FEM	0	-5331
Bal	57985	-52654
Final Mom	57985	-57985

Fig. A11.96 Moment Distribution

The extremely large final moments are, of course, unacceptable since bending failure would occur (if P were 101700 the moments would be infinite). Therefore, when the applied loading on a truss is near the critical loading bending failure will occur (and prevent the critical loading from being reached), due to the deflection of the truss joints under load.[*]

Repeating the above calculations for successively smaller values of the applied loading, P, results in the final moments shown in Table A11.6. Note that as the applied loading decreases from near the critical loading the final moments decrease very rapidly at first. When the loading decreases to the value which is the critical value assuming pin joints

[*] The maximum bending in AB is 77,840 in-lbs, occuring 18.3" from A (using Case 2 in Table A5.1)

Table A11.6 Variation of Final Moments
with Applied Loading

Applied Loading	% of Critical Loading	Final Moments At A
101700	100.0	∞
100000	98.4	-57985
99000	97.3	-24983
98000	96.4	-20522
95000	93.4	- 8876
63315	62.3	0
40000	39.3	60

(63315) the final moments are relatively
small. This is why an assumed pin-joint
analysis which ignores the secondary mom-
ents, a common procedure, is unlikely to
result in strength failures. Fatigue
life might be a concern for very light
structures. If a truss member is subject
to a lateral loading, that causes an add-
itional type of secondary moment to occur
and additional beam-column effects.

Although this illustrative example
uses only the simplest type of rigid
joint truss, the results would be similar
for a conventional type of truss. The
analysis would, of course, be more te-
dious. More about trusses is in the book
mentioned in Art.A18.27a (and Fig.A11.43).

A13.11a Curved Beams

For compact cross-sections the beam
is not subject to flange instability ef-
fects (Chapter 7). Therefore, with duc-
tile materials, the ultimate bending
strength can be calculated as discussed
in Chapter C3, ignoring the curvature.

When the cross-section has relative-
ly thin flanges, as with an I, channel,
Z etc. there is another effect of curva-
ture. It causes the flange to bend as
shown in Fig. A13.22a, and therefore be-
come less effective, resulting in higher
bending stresses for the beam. It also
generates bending stresses in the flanges
in a direction normal to the plane of the
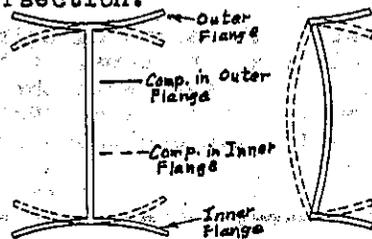web which are a maximum at the flange-to-
web intersection.

Fig.A13.22a Curved Beam Section Bending

For symmetrical cross-sections the cir-
cumferential bending stress at any point
on the section can be calculated as

$$f_b = \frac{M}{AR}\left[1 + \frac{1}{Z}\left(\frac{y}{R+y}\right)\right]$$

where   A = Area of cross-section
      R = Radius of curvature at the
        centroidal axis
      M = Applied moment, positive for
        tension in the outer fibers
        and vice-versa
      y = distance from centroidal axis,
        being + outward from this axis
        and - if inward

$$Z = -\frac{1}{A}\int\frac{y\,dA}{R+y} = -\frac{1}{A}\int\frac{wy\,dy}{R+y}$$

where w = cross-sectional
width at distance y

Table A13.4 presents formulas for Z for
several cross-sections. Where a flange
width is required, it is not the actual
width, b, but rather an effective width,
b_{eff}, due to the deflection shown in Fig.
A13.22a. This can be calculated as

$$b_{eff} = C_1 b$$

where C_1 is obtained from Fig. A13.22b.
b_{eff} is used for determining A and Z
when flanges are present. Being less
than the actual b, it results in high-
er bending stresses, f_b.

Fig.A13.22b

Curved Beam
Bending
Coefficients
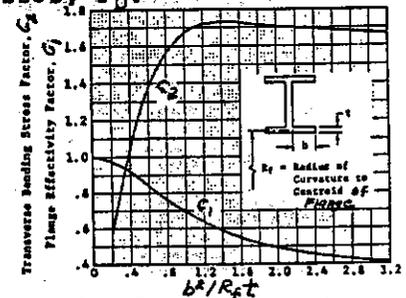
The transverse bending stress in
the flange, f_{bt}, can be calculated as

$$f_{bt} = C_2 f_b$$

where C_2 is obtained from Fig.A13.22b
and f_b is the stress calculated previ-
ously using C_1. Again, this discussion
applies only to symmetrical cross-
sections as in Fig. A13.22a.

When weight is important and rela-
tively thin flanges result in high
stresses, the stresses can be reduced
by using thin, closely spaced, machined in
place "bulkheads" between the flanges, or
beneath a T-member's flange. This reduces

the flange deflection and therefore re-reduces the beam bending stresses and the flange's transverse bending stress. Unfortunately, there is apparently no design criteria for this, so one must rely on judgement and tests as to, both, limit and ultimate load adequacy.

Unsymmetrical cross-sections should be avoided in fittings and hooks with large curvature since there are no formulas or data for predicting bending stress in such flanged members (tests required).

Finally, much curvature with flanged members can cause significant compressive ("crushing") stresses on the web and the thinner the web the worse the effect. These are generated as discussed for Fig. D3.28 and stiffeners are needed as illus-there to prevent crushing or buckling. The machined bulkheads also do this in in the case discussed for machined items.

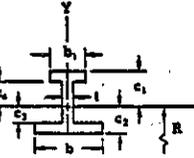### A18.5a Buckling Loads of Columns

Equation 16(b) applies only when the axial stress is in the elastic range and when the cross-section of the column remains stable (i.e., no local buckling occurs before P_{cr} is attained). When these conditions do not exist the critical load will be less than predicted by Eq. 16(b), as discussed in Art. A18.8a.

A18.8a Imperfect Columns. Tangent Modulus Theory

Add the following at the end of Art. A18.8. Since E_t (in Eq. 16b, 30 and 34) decreases as the compressive stress increases above the proportional limit (E_t being the slope of the stress-strain curve), a successive trials solution for P_{cr} is indicated. That is, E_t must be the value corresponding to σ_{cr}. The successive trials can be avoided if a column curve is available as in Fig. A18.11, entering with L/r and reading σ_{cr} on the ordinate. If a column curve is not available the procedure illustrated in Art. C2.10 can be used.

Equations 16b, 30 and 34 also do not apply, nor does the column curve, if any part of the cross-section is thin enough to have a local buckling stress which is smaller than σ_{cr} as predicted by the above equations. In this case a special column curve which accounts for this local instability must be constructed and used as shown in Art. C7.26 and C2.16.

Table A13.4   Some Formulas for Z
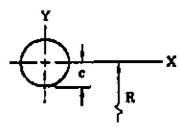
$Z = -1 + 2\left(\frac{R}{c}\right)^2 - 2\left(\frac{R}{c}\right)\sqrt{\left(\frac{R}{c}\right)^2 - 1}$
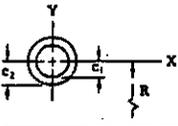
$Z = -1 + \frac{2R}{c_1^2 - c_2^2}\left(\sqrt{R^2 - c_2^2} - \sqrt{R^2 - c_1^2}\right)$
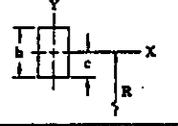
$Z = -1 + \frac{R}{h}\left[\log_e\left(\frac{R+c}{R-c}\right)\right]$
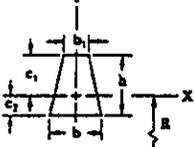
$Z = -1 + \frac{2R}{(b+b_1)h}\left\{\left[b_1 + \frac{b-b_1}{h}(R+c_1)\right]\log_e\left(\frac{R+c_1}{R-c_2}\right) - (b-b_1)\right\}$
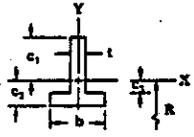
$Z = -1 + \frac{R}{A}\left[t\log_e(R+c_1) + (b-t)\log_e(R-c_3) - b\log_e(R-c_1)\right]$

$Z = -1 + \frac{R}{A}\left[b_1\log_e(R+c_1) + (t-b_1)\log_e(R+c_2) + (b-t)\log_e(R-c_2) - b\log_e(R-c_1)\right]$
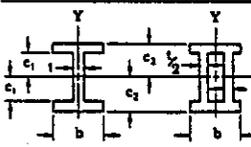
$Z = -1 + \frac{R}{A}\left[b\log_e\left(\frac{R+c_2}{R-c_1}\right) + (r-b)\log_e\left(\frac{R+c_1}{R-c_2}\right)\right]$

A18.8b Torsional Buckling

The previous discussions are for the conventional form of general instability involving only a bent (buckled) shape, also referred to as bending buckling. There is another form of general instability which can result in smaller values of P_{cr}. This form of buckling involves a twisting of the column (even though there is no applied twisting moment) and is called "torsional buckling". Depending upon the cross-sectional shape, the buckled shape may be either a pure twisting or a combination of twisting and bending about one or both axes. It occurs for open cross-sections having thin elements and is usually more critical than bending buckling in the short to medium range column range.[*] Torsional buckling is discussed further in Art. C7.31 and in detail in the book described in Art. A18.27a

A18.27a Comprehensive Treatment of Column Strength

The broad coverage (180 pages) of column design referred to in Art. 18.27 as being in an originally planned "Volume 2" was not included when it was decided to publish only the current single volume rather than two volumes because of space requirements. However, this material is available in the book "Engineering Column Analysis" by W.F. McCombs, Datatec , P.O. Box 763576, Dallas, TX 75376-3576. Topics include columns, beam-columns, truss members, bents, arches, torsional buckling, local buckling, crippling, buckling of shells and members on elastic or otherwise sagging supports. Both, uniform and varying section members are included.

A18.28a Mechanical and Physical Properties of some Aircraft Materials

The last paragraphs of Art. A18.28 refer to a planned Volume 2 which was finally included as Parts B, C and D of the textbook. Therefore, it is Chapters B1 and B2 of the textbook to which the reference is made.*

A19.23 Crushing Loads on Ribs Due to Wing Bending

Chapter A19 provides methods for determining the stress in the flanges, shear webs, stringers and skin panels of the wing structure. Chapter A.21 discusses the shear loads and stresses in wing ribs. Neither of these chapters discusses the crushing loads on the rib webs at a rib-stringer joint which are caused by the bending of the wing or of any box beam having stringers supported by ribs. Since the ribs provide simple support for the stringers in compression, if a rib fails locally its simple support for the stringer will vanish and the stringer will fail as a column. When the rib web is thin with no local reinforcement and the crushing loads are large such failure can occur. The manner in which these crushing loads arise is as follows.

Fig.A19.44 shows a front view of a wing in its bent form (greatly exaggerated), the upper stringers being in compression, the lower ones being in tension and the load line from rib to rib shown by the broken line. Due to the bending radius of curvature, R, the angle θ will be $\theta = L/R$, a very small angle since R is very large in a practical wing structure. The load , P, in any stringer located at a rib will have components of load parallel to the rib which are re-
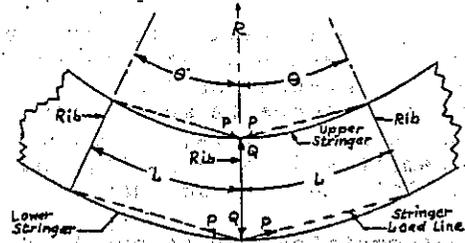
Fig. A19.44 Wing Rib Crushing Load, Q

acted by the rib load, Q, in the amount

$$Q = 2P\sin(\theta/2) \simeq P\theta$$
$$\text{or,} \quad Q = PL/R$$

Since $R = EI/M$
$$Q = PLM/EI$$

If L_1 and L_2 are different rib spacings

$$Q = P(L_1 + L_2)M/2EI$$

Where Q is the crushing load on the rib web at the stringer, M is the bending moment on the wing at the rib station and EI is that of the wing at the rib station. Therefore, each stringer will need a clip to the rib (or its equivalent) which can pass the load Q into the rib web, and if the load is large enough to crush the rib the clip will also need to be extended and fastened so as to serve as a stiffener for the rib, to prevent crushing of the rib web.

C1.13a Factors of Safety and Margins of Safety

These items are discussed in articles A4.2 and in C1.13 through C1.15, but they do not provide specific associated numbers for factors of safety or methods for calculating the margin of safety for members under many combined load systems. The purpose of the following discussion is to do that.

Factors of Safety

Ultimate loads, also called design loads, are obtained by multiplying the limit loads (the actual or expected loads) by a factor of safety. For piloted aerospace vehicles the factor of safety is usually 1.5. For missiles, which are not piloted, the factor of safety is is usually 1.25 except for any load condition where the safety of people is involved where it is 1.5 (e.g., for the ejection loads from a carrier airplane). Naval airplanes are designed for a very fast sinking speed, about 26 feet per second, so no safety factor is applied to

these loads. However, the landing gear must continue to function after such a landing and the major attach fittings (landing gear to wing or fuselage, wing to fuselage and major fuselage section splices) must show a margin of safety of .25 for this landing condition. In general, factors of safety are specified by the procuring agency.

Margins of Safety

The margin of safety for a structural member subject to a single load or stress is calculated as

$$M.S. = \frac{\text{Allowable Load (or Stress)}}{\text{Ultimate Load (or stress)}} - 1.0$$

and must be zero or more. However, in some cases it must have a specified positive value as mentioned for Naval airplanes and .15 for fittings. This margin is also required if additional fitting or casting factors have been specified. For shear joints a minimum margin of safety of .15 is required and for tension joints it is .50.* Also for these joints there must be no yielding at limit load. For shear joint attachments if the bearing yield strength is less than 2/3 of the ultimate bearing strength, the bearing allowable strength is taken as 1.5 times the bearing yield strength and the joint is said to be "yield critical". For riveted shear and tension joint allowable data see Chapter D1. Also see Appendix A.

The previous simple formula for the M.S. gives the decimal fraction by which the load may be increased and still have a M.S. of zero. For example, if M.S.=.20 the applied loads may be increased by a factor of 1.20. However, the simple formula applies only when all of the following conditions exist

1. The member is subject only to a single type of loading, not to several types such as shear plus compression etc.

2. The internal loads vary linearly with applied loads.

3. All applied loads are variable, i.e., none are fixed in magnitude such as a constant pressurization.

These conditions are discussed as follows.

1. For example a bolt may be subject to shear, bending and tension simultaneously. In such cases so-called "interaction equations", derived from

tests rather than theory, are used to show structural adequacy. A typical interaction equation is of the form

$$R_1^a + R_2^b + R_3^c + \cdots R_m^n = 1.0$$

Where $R_1 = f_1/F_1$, $R_2 = f_2/F_2$, $R_3 = f_3/F_3$ and $R_m = f_m/F_m$, f being the ultimate stress (or load) and F being the allowable stress (or load). R is called the "stress ratio". When the left side of the equation is 1.0 the M.S. is zero. When it is less than 1.0 the M.S. is positive but undefined and when it is more than 1.0 the M.S. is negative but undefined.

Example:

$f_1 = 10000$ and $F_1 = 30000$, so $R_1 = .333$
$f_2 = 40000$ and $F_2 = 60000$, so $R_2 = .667$

Interaction Equation: $R_1 + R_2^2 = 1.0$

$$.333 + .667^2 = .778 \; (<1.0)$$

Hence the M.S. is positive but undefined.

There are two cases for which the M.S. can be calculated directly using the interaction stress ratios, R, as follows.

a) When all exponents (a, b, c, n) have values of 1.0 and/or 2.0. In this case

$$M.S. = \frac{2}{\Sigma R_1 + \sqrt{(\Sigma R_1)^2 + 4\Sigma R_2^2}} - 1.0$$

b) When all exponents have the same value, n, in which case

$$M.S. = \frac{1}{(R_1^n + R_2^n + \cdots R_m^n)^{1/n}} - 1.0$$

For all other cases the M.S. is found by using plots of the applicable interaction equation (discussed later) or by successive trial calculations. The latter is done by finding, by successive trials, by what common factor, A, all of the loads must be multiplied to satisfy the interaction equation. The M.S. is then A - 1.0. Or, when

$$(AR_1)^a + (AR_2)^b + (AR_3)^c + (AR_4)^d = 1.0$$

$$M.S. = A - 1.0$$

Example:

For the previous example

$$A \times .333 + (A \times .667)^2 = 1.0$$

After several trials the equation is satisfied when $A = 1.171$, so

$$M.S. = A - 1.0 = 1.171 - 1.0 = .171$$

Since all exponents are 1.0 and/or 2.0 the M.S. can also be calculated by formula as

$$M.S. = \frac{2}{.333 + \sqrt{.333^2 + 4 \times .667^2}} - 1.0 = .171$$

When using this formula with other more lengthy interaction equations the parentheses around the term ΣR_1 must be noted and used. ΣR_1 is the sum of all stress ratios having the exponent 1.0 and ΣR_2 is the sum of those having the exponent 2.0.

When plots of interaction equations are available the M.S. can be determined by a graphical construction. This is illustrated in Art. C4.24a in the textbook using Fig. C4.36. However, graphical solutions are not needed when the prior formulas apply, and in many other cases the successive trials procedure may be easier with calculators or when the interaction curves are not available.

Listing of Interaction Equations

Numerous interaction equations appear in various parts of the book per the following listing.

2. There are cases where the internal loads in a member do not vary linearly with the applied loads. One example is the beam-column where the bending moment increases faster than does the applied loading. Another example is the axial stress in stringers due to tension field action. For such cases the M.S. as previously calculated would be an "apparent" M.S., not a true M.S. Whether the apparent M.S. is positive or negative, the true M.S. will always be closer to zero than the apparent M.S. The true M.S. must be calculated as follows.

By successive trials find the common factor, A, by which the applied loads (which produce the internal loads in the members) must all be multiplied to give a calculated M.S. of zero. The true M.S. is then $A - 1.0$. For a beam-column the applied loads are the axial load and the transverse loads. Multiplying these by any factor, F, will generate a bending moment in the beam-column which increases faster than the common factor, F. A is the value of F for which the calculated M.S. is zero, and then the true M.S. is $A - 1.0$. This procedure applies for any interaction equation that may be applicable. Note that this requires a greater effort than that in (1) previously. This is because increasing the applied loads requires another analysis to determine the internal loads, since they do not

vary linearly with the applied loads.

This is important because margins of safety are reported for structural members and are used to see if the members can withstand an increase in the applied loads. If the applied loads increased by a factor of, say, 1.20 and the report showed a M.S. of, say, 1.20 it would be judged to be acceptable as an increase. But if this happened to be an apparent M.S. the true M.S. would be smaller and the increase in applied loads would not be acceptable. Hence, the true values of the M.S. should be in the report. If not they should be "flagged" as being apparent ones so that a proper evaluation can be made when needed.

3.   The internal loads in a member are due to the applied loads. Sometimes the applied loads consist of "fixed" loads which do not vary, such as, for example, constant pressurization loads. When such are present the internal loads or stresses in the member due to them should not be multiplied by the common factor, A, in (1) previously or by the factor, F, in (2) since they are constant. If such were done the calculated M.S. would be conservative (too small) if these loads were "additive" and vice-versa if they were "subtractive". This also applies when the M.S. is calculated by the formulas in (1a) and (1b), and when the M.S. is determined graphically, which makes these calculations not applicable for for such cases (the successive trials procedure is then needed).

C1.13b Dealing with Tolerances

When calculating margins of safety for a structural member nominal (mean) dimensions are used to determine the stress in the member and its allowable load. Ideally, the M.S. is zero, generally. However, all drawings specify the manufacturing tolerance which accompanies each dimension such as, for example, $\pm.03"$ and these are considered as follows

In aerospace structures it is common practice to consider only the two worst tolerances affecting any dimension and to compute the reduced margin of safety based on the reduced dimensions. This will give a negative M.S. when the nominal M.S. is zero. Such negative margins are acceptable if they do not exceed -.15 for single load path members

or -.25 for redundant members. These are arbitrary limits, some companies allowing more negative values such as -.19 and -.39 respectively. Such negative margins caused by tolerances are acceptable since the probability is quite low that, simultaneously, the material will have minimum properties, the tolerances will be as large as allowed, the loading condition will be achieved and the internal loads in the members will be as large as predicted. If the M.S. had to be zero or more based on such minimum, rather than nominal, dimensions considerable weight would be added to the structure.

When dimensioning structural members care should be used to prevent the build-up of large tolerances affecting the final dimension. Unacceptable tolerance effects are most likely to occur when dimensioning small machined or cast protuberances or holes, where small internal corner radii are present and for thin machined or chem-milled parts.

However, the above should in no way be construed as sanctioning negative margins based on nominal dimensions or endorsing the salvage of parts having less strength than required per the drawing.

C1.6a Combined Stress Equations

For practical calculation purposes the following summary and example problem are helpful. Fig.C1.8a(a) shows the positive direction of known or given applied stresses. Fig. (b) shows the resulting stresses, τ_θ and σ_θ, on any plane θ (positive directions shown), which can be calculated as follows.

$$\sigma_\theta = \tfrac{1}{2}(\sigma_x + \sigma_y) + \tfrac{1}{2}(\sigma_x - \sigma_y)\cos 2\theta + \tau_{xy}\sin 2\theta$$

$$\tau_\theta = \tfrac{1}{2}(\sigma_x - \sigma_y)\sin 2\theta - \tau_{xy}\cos 2\theta$$

1. The principle stresses, σ_n, are calculated as follows.

$$\sigma_n = \tfrac{1}{2}(\sigma_x + \sigma_y) \pm \sqrt{\tfrac{1}{4}(\sigma_x - \sigma_y)^2 + \tau_{xy}^2}$$

2. The plane for the largest principle stress, θ_p, is measured from the plane of the larger of σ_x or σ_y and is calculated as follows.

$$\theta_p = \tfrac{1}{2}\arctan(2\tau_{xy}/(\sigma_x - \sigma_y))$$

The plane of the smaller principle stress is 90° away from this plane.

3. The maximum shear stress, τ_{max}, is calculated as follows.

$$\tau_{max} = \sqrt{\tfrac{1}{4}(\sigma_x - \sigma_y)^2 + \tau_{xy}^2}$$

4. The plane on which τ_{max} is located is
$$\theta_{\tau_{max}} = \tfrac{1}{2}\arctan((\sigma_x - \sigma_y)/-2\tau_{xy})$$

Positive directions of applied stresses shown Tension is (+), comp. is (-)

(a)

(b)

σ_x, σ_y and τ_{xy} are known values, positive as shown

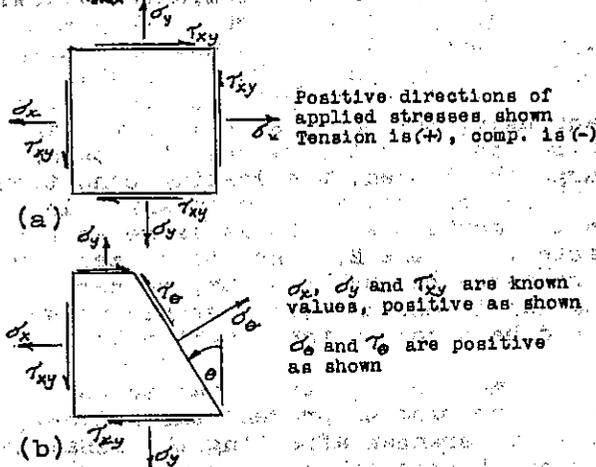σ_θ and τ_θ are positive as shown

Fig. Cl.8a Shear and Normal Stresses

Example Problem
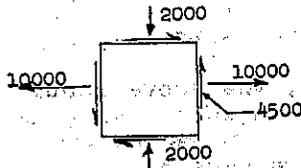
For the stresses shown in the sketch above (note that σ_y is compressive, hence negative) what are σ and τ on a plane at $\theta = 60°$? What are σ_n, θ_p, τ_{max} and θ_τ?

$$\sigma_\theta = \tfrac{1}{2}(10000 - 2000) + \tfrac{1}{2}(10000 + 2000)\cos 120°$$
$$+ 4500\sin 120° = \underline{4897}$$

$$\tau_\theta = \tfrac{1}{2}(10000 + 2000)\sin 120° - 4500\cos 120°$$
$$= \underline{7446}$$

$$\sigma_n = \tfrac{1}{2}(10000 - 2000) \pm \sqrt{\tfrac{1}{4}(10000+2000)^2 + 4500^2}$$
$$= \underline{11500 \text{ and } -3500}$$

$$\theta_p = \tfrac{1}{2}\arctan(2 \times 4500/(10000 + 2000))$$
$$= \underline{18.43°}$$

$$\tau_{max} = \sqrt{\tfrac{1}{4}(10000 + 2000)^2 + 4500^2} = \underline{7500}$$

$$\theta_\tau = \tfrac{1}{2}\arctan(10000 + 2000/-2(4500)) = \underline{-26.57°}$$

θ_τ is always 45° away from θ_p.

If any of the above calculated values had been negative they would be acting or located in a direction opposite to that shown in Fig. C.18a.

Usually one is interested only in deter-mining the value of the largest σ_n and of the largest τ_{max}.

C2.1a Methods of Column Failure. Column Equations

The last paragraph is extended to include the following. Predicting fail-ure due to local instability requires that the column curve be reconstructed in the short to intermediate ranges. This reconstruction is discussed and illus-trated in Art. C7.25 through C7.27

C2.2a Free-Ended Columns**

Fig. C2.2 shows only a special case of the free-ended column, one end being fully fixed and the load remaining paral-lel to the axis of the member in its straight (unbuckled) form. In general, however, the load, P, may be directed either to or from a given point, "o", as shown in Fig. C2.2a.

(a) Load directed toward "o"
$m = a/(a + L)$

(b) Load directed from "o"
$m = (L + L_0)/L_0$
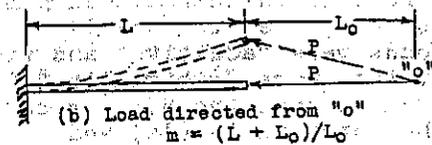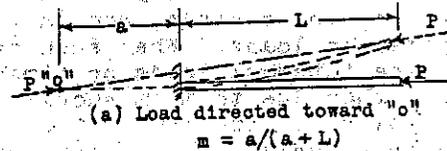
Fig. C2.2a Free-Ended Column, Fixed End

As shown in Ref. 4 (Art. A18.27a), the buckling load is defined by the trans-cendental equation

$$(L/j)\operatorname{ctn} L/j = 1 - (1/m)^*$$

For any given value of m (Fig. C2.2a), P_{cr} is found by successive trials. That is, one assumes a value for P, calculates j $(= \sqrt{EI/P})$ and uses this in the equation. When $P = P_{cr}$ the equation will be satis-fied. However, this effort can be great-ly reduced by using Fig. C2.2b, entering the figure with m and obtaining $(L/j)_{cr}$. P_{cr} is then calculated as

$$P_{cr} = (L/j)^2_{cr}(EI/L^2)$$

Note that when a or $L_0 = \infty$, m = 1.0 and $P_{cr} = (\pi/2)^2(EI/L^2)$; When a = 0, m = 0 and $P_{cr} = \pi^2(EI/L^2)$; when $L_0 = 0$, $m = \infty$ and $P_{cr} = 0$. That is, as a decreases P_{cr} increases, but as L_0 decreases P_{cr} decreases.

* For Fig. (a) an alternate form is $TanL/j = -a/j$ and for Fig. (b) $TanL/j = (L + L_0)/j$

** For free-ended beam-columns see Art. A18.27a book

Fig. C2.2b $(L/j)_{cr}$ versus m

$(L/j)ctn(L/j) = 1 - 1/m$

$P_{cr} = (L/j)^2_{cr}EI/L^2$

Elastically Restrained End

Instead of being fully fixed, the end may be elastically restrained as shown by the "torsion spring", k, in Fig. C2.2c, which has a value in in-lbs/radian This results in a smaller buckling load than when fully fixed ($k = \infty$).

(a) Load directed toward "o"

$m = a/(a + L)$

(b) Load directed from "o"

$m = (L + L_0)/L_0$
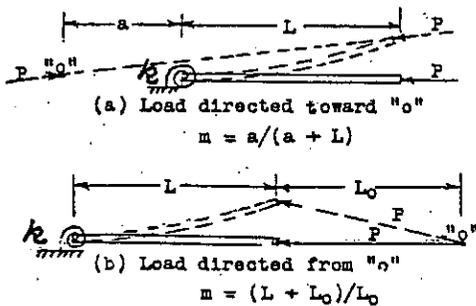
Fig. C2.2c Free-Ended Column Having an Elastically Restrained End

For this case, as shown in Ref.4, the buckling load is given by the equation[*]

$$k - \frac{PmL}{1 - m(1 - (L/j)ctnL/j)} = 0$$

P_{cr} is found by successive trial calcu-

* Derived by using the moment distribution procedure.

When m = 1 the equation becomes simply k - PjtanL/j = 0

lations as follows. For a given k and m one assumes a value of P, calculates j and uses these values in the equation. When P = P_{cr} the equation is satisfied.

For the special case where a or L_0 is infinity, so that m = 1.0, P_{cr} can be determined directly by entering Fig. C2.44 with kL/EI, obtaining the value of C and calculating P_{cr} as

$$P_{cr} = C\pi^2 EI/L^2$$

Note that when $k = \infty$ (fully fixed) C = .25 as given in Fig. C2.2.

It must be remembered that in all column calculations E is E_t, which decreases as the compressive stress exceeds the proportional limit. Also, when the column has an unstable (thin) cross-section E is an "effective" modulus.[*] To determine it one finds the buckling stress from the modified column curve (Art.7.26) and then calculates it as

$$E_{eff} = F_{cr}(L/\rho)^2/\pi^2$$

For free-ended columns Fig. C2.17 is applicable only when m = 1.0

If the column has lateral loads or an initially bent shape it becomes a beam-column. Free-ended beam-columns are discussed in Ref.4, also Table A5.1a, Case 17.

Example Problem 1

For a column as in Fig. C2.2a(a) assume that a = 30", L = 30", E = 10.5 x 10^6 (7075-T6 Extrusion, p.B1.11), I = .191, A = .50 sq in and a stable cross-section What is P_{cr}?

m = 30/(30 + 30) = .50. Per Fig. C2.2b for m = .5, $(L/j)_{cr}$= 2.03. Therefore,

P_{cr}= 2.03^2(10.5x10^6)(.191)/30^2 = 9183
F_{cr} = 9183/.50 = 18366

Since F_{cr}< Prop. Limit, E_t= E as assumed.

Example Problem 2

Repeat Example 1 assuming the fixed end is replaced with an elastic restraint of k = 50000, as in Fig. C2.2c. This must be solved by successive trials.

Trial 1: Assume P_{cr}= $.8\pi^2EI/4L^2$ = 4399
Then j = $\sqrt{EI/P}$=$\sqrt{10.5 \times 10^6(.191)/4399}$
=21.35 and L/j = 1.405

Then 50000 - $\frac{4399(.50)(30)}{1 - .5(1 - 1.405ctn1.405)}$
= -56849 ($\neq$ 0)

* See Art. C2.16

After several more trials it is found that when P is 2622 the equation is satisfied, so this is the critical load, as follows:

$$j = \sqrt{10.5 \times 10^6 (.191)/2622} = 27.656$$

$$L/j = 30/27.656 = 1.0848$$

$$50000 - \frac{2622(.5)(30)}{1 - .5(1 - 1.0848 \, ctn \, 1.0848)}$$

$$= -4.7 \quad \text{which is essentially zero.}$$

So this particular elastic restraint has reduced the critical load from 9148 for a fully fixed end to only 2622 lbs.

C2.3a The Effect of Shear on Buckling Stress

Equations (1) and (2) of Art.C2.1 consider only the bending stiffness of columns. When a beam bends because of applied transverse loads and the resulting bending moments, the usual deflection formulas consider only the bending moment. There is, however, an additional deflection due to shear. For example, a simply supported beam of uniform EI having a load, Q, at mid-span will have a maximum deflection given by

$$y = QL^3/48EI + nQL/4AG$$

The first term is due to bending and the second term is due to shear, where n is a form factor which depends upon the shape of the cross-section. This is usually negligible, but as n increases due to a thin or perforated or otherwise more flexible web it can become significant.

For a column there is no applied transverse load, but a shear load is generated by the axial load as the column takes on a bent (buckled) shape, as shown in Fig.C2.2d
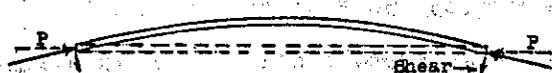
Fig. C2.2d Generation of Shear in a Column

At any station the bending moment is M = Py and the shear in the member is

$$V = dM/dx = Pdy/dx$$

where dy/dx is the slope of the bent shape. Hence, for the uniform simply supported column the shear varies from a maximum at the ends to zero at the

middle where dy/dx, the slope, is zero. Consequently there is a shear in the member which, in effect, makes the column more flexible and thereby reduces the buckling load or stress.

As discussed in Ref.5, for uniform columns the buckling load, considering shear, is

$$P'_{cr} = \frac{\sqrt{1 + 4nP_{cr}/AG} - 1.0}{2n/AG}$$

where P_{cr} is the buckling load ignoring shear, n is the form factor for the cross-section, A is the cross-sectional area and G is the shear modulus of elasticity ($G = E/2(1 + \mu)$) where μ is Poisson's ratio. The values of n for several cross-sections are shown in Table C2.2.

Table C2.2 Cross-Section Form Factors

Cross-Section	n
Rectangle	1.200
Solid Circle	1.100
Thin Round Tube	2.000
I-Beam or Rectangular Tube	Area/Web Area

n can be calculated for other cross-sections as

$$n = (A/I) \int_A Q \, dA/b$$

where A is cross-sectional area, Q is the static moment of area beyond dA about the neutral axis and b is the width at the neutral axis. For columns having latticed struts (trussed columns or "batten" plates) or having perforated webs see Ref.5. It is when the web becomes thin or otherwise has less shear stiffness that the column buckling load is significantly reduced.*

C2.3b Multispan Columns

Unfortunately, this and most other textbooks do not discuss columns having more than one span. Such columns are easily checked for stability by applying a 1 in-lb couple at any "joint" (support) not having full fixity and carrying out the moment distribution procedure as discussed and illustrated in Art. A11.13 - A11.14 and its example problems. If the successive carry-over moments at all joints become smaller (converge) the column is stable. The larger the axial load the "slower" the convergence. If they diverge at any joint the column is unstable. The critical load is that for which they do neither, found only by successive trial analyses, varying the axial load used in each moment distribution.

* For varying EI columns the tables in Art.C2.6b can be amended to account for shear, see Ref.4.

There are some helpful techniques for doing this in Ref. 4, including some "quick checks" for detecting instability sometimes without the above procedure. Ref. 4 also contains numerous example problems for multispan columns including those on elastic or otherwise deflecting supports, those having free-ended members and those having varying loads and EI values within the spans.

The alternative to doing the moment distribution analysis is to conservatively assume that each span is simply supported and check each span individually. This is accurate only when all spans are identical, the two ends are simply supported and the axial load is constant.

"Quick Check" Instability Criteria

1) The following can be done when each span is uniform and the axial load does not vary along the span (j is constant). If any span has a value of L/j greater than shown in Table C2.3 the column is known to be unstable. If less than these values it may or may not be unstable, but a moment distribution analysis is required.

Table C2.3 Instability Criteria[**]

Type of End Suport	$(L/j)_{max}$
A. One end elastically restrained, one end free	$\pi/2$
B. Both ends simply supported	π
C. One end simply supported, one elastically restrained	4.49+
C. Both ends elastically restrained	2π

Elastic restraint is provided by an adjacent span in a multispan column or by a torsion spring as in Fig.C2.2c

2) If at any joint the sum of the stiffness factors, ΣSF, is negative the column is unstable (see the footnote for Art. All.15b).

The Two-Span Column

The following applies not only to a two-span column but to any number of spans meeting at a common joint (support) If the outer ends of the members are either simply supported or fully fixed *or free* (no elastic supports) the column is known to be stable if at the common joint ΣSF is positive.[*] If it is negative the column is known to be unstable. No moment distribution is, therefore, required so the analysis is quite simple. The criti-

* And if criteria (1) above is met

** The listed L/j values are for $P = P_{cr} = C\pi^2 EI/L^2$

[*] For any 3-span column, ABCD, having fixed and/or pinned ends (p.15) the stability can be checked as follows. If $DF_{BC} COF_{BC} DF_{CB} COF_{CB} < 1.0$ the column is stable and vice versa. If span BC is uniform then $COF_{BC} = COF_{CB}$

cal load is that for which $\Sigma SF = 0$, found by successive trial values of the axial load.[*]

Example Problem 1

Is the three-span column shown in the sketch below stable or unstable?
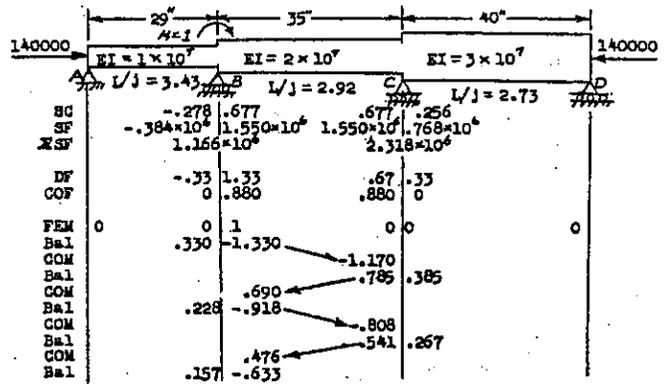
The analysis is carried out as shown, applying a 1 in-lb couple to the joint at B. Note that the SC, SF and COF are omitted at the ends, A and D, since they are simply supported and no initial moments (FEM's) are present there.[*] As the moment distribution process shows, the successive carry over moments (COM's) at all joints are decreasing. Therefore the column is known to be stable.[***]

Actually, one should always calculate the compressive stress, P/A, for each span and use the corresponding value of E_t (or E_{eff}) in calculating the value of j. Also, Ref. 4 contains extensive tables giving the values of SC and COF to six significant figures (better than Fig.All.46-47).

Example Problem 2

Is the two-span column shown in the sketch below stable or unstable?
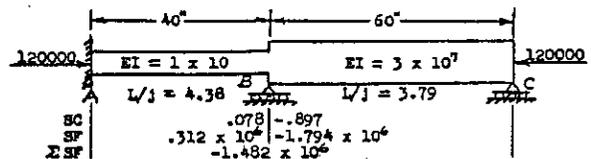
Proceeding as discussed before for the two-span column, it is seen that ΣSF at the common joint, B, is negative. Therefore, the column is known to be unstable.

By successive trials it is found that when the axial load is 93040 lbs $\Sigma SF = 0$, so that is the buckling load.

If the axial load were 168750 to 219600

* For a free-ended column when $m = 1$ (Fig.C2.2a) the S.F. is $-Pj\tan L/j$

** If an end has elastic bending restraint (e.g., a torsion spring) use its k value as its SF and include this end as another joint in the moment distribution procedure (k being the spring constant)

ΣSF would be positive, indicating stability, but this would not be applicable because L/j for span BC would exceed the maximum (4.49+) allowed in Table C2.3. This is why the Table C2.3 criteria should always be checked first, before proceeding with any other analyses.

In summary, the moment distribution procedure can be used to check any multi-span column for stability. But before doing this instability can be detected quickly per the criteria of Table C2.3 and if at any joint ΣSF is negative. Then, for any two-span column if ΣSF is positive at the common joint the column is known to be stable if criteria (1) is met.

Uniform Two-Span Column Formula

For the special case of a uniform member on three simple supports an approximate formula for the buckling load is

$$P_{cr} = \pi^2 EI(2 - b/a)/a^2$$

where a is the longer span and b is the shorter span. When a = b (=L/2) the formula is exact. When b becomes zero (i.e. as a becomes L) the error is only 2.44% and is conservative (one end becomes essentially fixed as a becomes L).

The formula can be verified numerically by calculations for a two-span column as previously illustrated, or theoretically as in the book "Theory of Limit Design" by J.A. Van Den Broek (J. Wiley and Sons).

C2.6a Stepped Columns

These are a special case for which formulas (buckling equations) are available as discussed in Ref. 7. Formulas are presented for the cases of simply supported members having one, two and three steps in EI. For more than three steps the formulas become too lengthy for practical useage, so a simple tabular calculation form is presented with an example problem shown.

Since the equations are transcendental in form, a successive trials procedure is necessary to determine the critical load. This consists of assuming a value for P (and E_t), calculating any associated parameters and using these values in the equations. When the assumed P is P_{cr} the equation will be satisfied.

F_{cr} (= P_{cr}/A) should be calculated for each step to be sure that the values used for E_t (Fig.C2.16) or E_{eff} (Art.C2.16) correspond to F_{cr}, which they must.*

Since it is possible for more than one value of P to satisfy the equations (quite different values), it is best to use a length-weighted average EI, calculate a corresponding value for P_{cr} as $\pi^2 EI/L^2$ and use this as the initially assumed value for P. For the special cases of one-step and symmetrical two-step columns graphical plots are available in Fig. C2.21 and C2.22 for a direct determination of P_{cr}.

One-Step Column *

Fig.C2.18a One-Step Column
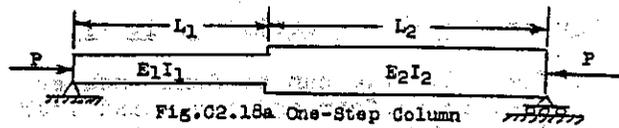
$$\frac{\tan L_1 \sqrt{P/E_1I_1}}{\tan L_2 \sqrt{P/E_2I_2}} = -\sqrt{E_2I_2/E_1I_1}$$

Two-Step Column

Fig.C2.19a Two-Step Column

$$\frac{\sqrt{\frac{E_1I_1}{E_3I_3}}\tan\phi + \sqrt{\frac{E_2I_2}{E_3I_3}}\tan\sqrt{\frac{E_1I_1L_2}{E_2I_2L_1}}\phi}{1 - \sqrt{\frac{E_1I_1}{E_2I_2}}\tan\phi\tan\sqrt{\frac{E_1I_1L_2}{E_2I_2L_1}}\phi}$$
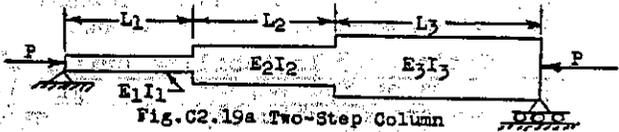
$$= -\tan\frac{L_3}{L_1}\sqrt{\frac{E_1I_1}{E_3I_3}}\phi$$

where $\phi = L_1\sqrt{\frac{P}{E_1I_1}}$

Two-Step Symmetrical Column

Fig.C2.20a Two-Step Symmetrical Column
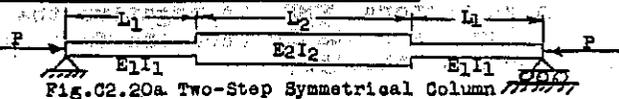
$$\tan(L_1\sqrt{P/E_1I_1}) \times \tan(L_2\sqrt{P/E_2I_2}/2)$$

$$= \sqrt{E_2I_2/E_1I_1}$$

Three-Step Column

Fig.C2.20b Three-Step Column
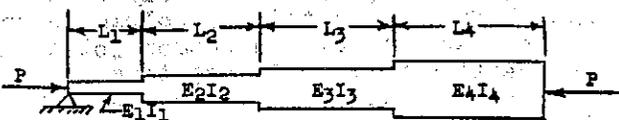
* These equations are easily programmed for rapid solution by computer or suitable calculators.

** An alternative helpful buckling equation is that for stability
$$\frac{1}{j_1}\cot\frac{L_1}{j_1} + \frac{1}{j_2}\cot\frac{L_2}{j_2} > 0$$

$$\frac{\dfrac{\tan\phi_1}{\beta_1} + \dfrac{\tan\phi_2}{\beta_2} + \dfrac{\tan\phi_3}{\beta_3} - \dfrac{\beta_2}{\beta_3}\tan\phi_1\tan\phi_2\tan\phi_3}{1 - \dfrac{\beta_2\tan\phi_1\tan\phi_2}{\beta_1} - \dfrac{\beta_3\tan\phi_1\tan\phi_3}{\beta_2} - \dfrac{\beta_3\tan\phi_2\tan\phi_3}{\beta_3}}$$

$$= -\frac{\tan\phi_4}{\beta_4}$$

where $\beta_n = \sqrt{P/E_n I_n}$ and $\phi_n = \beta_n L_n$

The equations are easily programmed for rapid evaluation using a suitable calculator (or computer). The derivation of the equations is available in Ref. 7.

Columns Having More than Three Steps

For these cases (and also for 2 or 3 steps) the following tabular numerical procedure can be used, as illustrated in Table C2.4. It, too, is a successive trials procedure (successive tables). One assumes a value for P (and E) as suggested later and carries out the tabular calculations as shown. When the assumed P is P_{cr} the value in Col. 6 for the last segment, N, will be equal to the value in Col. 8 for the segment N-1 multiplied by -1. Any number of segments can be used. The example below shows the last of several successive trials with different values for P, the last being 79200 lbs.

As discussed previously, to start with a reasonable value for P a length-weighted average EI should be used and P calculated as $\pi^2 EI/L^2$. When Col. 6_N is less than $-$Col. 8_{N-1} a larger value for P should be assumed for the next trial and vice-versa for $6_N > -8_{N-1}$.
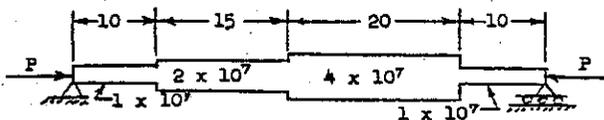
Fig.C2.20c Data for Table C2.4 Example Problem

Table C2.4 Stepped Column Analysis

① Segment a	② EI Data	③ $\sqrt{②/P}$ j	④ L Data	⑤ tanL/j tan(④)/③	⑥ jtanL/j ③ x ⑤	⑦ (tanL/j)/j ⑤/③	⑧ $\frac{⑥ + ⑥_{n-1}}{1 - ⑥_{n-1}x⑦}$
1	1 x10⁷	11.237	10	1.2344	13.871	.10985	13.871
2	2 x10⁷	15.891	15	1.3806	21.938	.08688	-174.582
3	4 x10⁷	22.407	20	1.2321	27.719	.05476	-13.907
4	1 x10⁷	11.237	10	1.2344	13.871		

Since ⑥4 ≈ -⑧3, $P_{cr} = P_{assumed} = 79,200$ lbs

Since $⑥_4 \approx -⑧_3$, $P_{cr} = P = 79200$ lbs.

As discussed for the formulas in Art. C2.6a, the proper values of E must be used for each segment.*

C2.6b Numerical Column Analyses

Except for those cases discussed in Art.C2.1 through C2.3, Fig.C2.21 through

C2.27 or other similar type data, a numerical analysis is required to determine the critical load or stress. Art.C2.6a presented a numerical solution for the special case of stepped columns on simple supports. The following presents a procedure for any variation in shape and for simple and fixed supports.

These procedures are in tabular form, rather than as computer programs, since this gives a better understanding of what is being done. The procedures are, of course easily programmable for solution by computer. As before, the critical load is determined by successive trials, which means successive tables of calculations. Example problems illustrate the procedures.*

The basic procedure uses the method of discrete elastic weights (also called "Mohr's Method" and the "Conjugate Beam Method") to replace the M/EI diagram and calculate deflections and is due to Newmark, Ref. 6. The formulas for the elastic weights are discussed in Ref. 4.

Simply Supported Columns

Referring to Fig.C2.20d and Table C2.5, the procedure is as follows.

1. Divide the column into several equal length segments, S, at least five or six segments, but ten or more will give a more accurate value of P_{cr}.

2. Assume (sketch) an initial buckled (deflected) shape. Any initial shape will do (even two straight lines), but the more realistic it is the sooner the effort will be completed.

3. At the station in (2) above which has the largest deflection, y, let its deflection be taken as 1", and let the deflections at the other stations be proportional to this (per the sketch).

4. Let P be one lb. Then at any station, n, the bending moment will be $M_n = Py_n = y_n$, so the values in (3) above are entered in Col. 2. Positive deflections are upward and positive bending moments produce compression in the upper surface, hence the minus sign used in the headings for Col. 2 and 4.

5. At each station enter the value of EI in Col. 3. If there is a "step" in EI an adjustment is made to EI at the station nearest to the step, discussed later, and its EI is "flagged" with an asterisk to indicate this adjustment.

---

* To check for stability under a given load, P, use that load. If $6_N < -8_{N-1}$ the column is stable, and vice-versa. A similar check can be made with the formulas.

Tapered portions can be subdivided into several stepped portions

* These (and other) tables are easily programmed for rapid solution by computer or suitable calculators.

6. The "equivalent concentrated elastic loads" ("elastic weights") are then calculated per the formulas below the table for each station and are entered in Col. 5. These formulas are discussed in Ref. 4.

7. The tabular operations are then carried out as shown, and a range of P_{cr} values is obtained in Col. 10. If the axial load is below this range the column is stable, and if above it the column is unstable. An average value for P_{cr} is calculated as shown, 44,150 lbs. Note that several checks are made to detect any errors made after the Col. 5 data are calculated. Column 9 (and 8) defines a new shape which will be different from that assumed in Col. 2.

8. Using the deflections in Col. 9 or in Col. 8, let the largest of these be one inch and get the others by dividing their deflections by the largest deflection. Enter these in a second table's Col. 2 and complete the table.

9. Repeat (8) as needed until the range of P_{cr} values is quite small, and P_{cr} can then be taken as the average of the values in Col. 10.

10. If at any station F_{cr} ($=P_{cr}/A$) is significantly above the proportional limit stress (or above any local buckling stress) the value of E_t (or E_{eff}) used in the term EI must correspond to F_{cr} (or to the local buckling stress), which can require more successive trial tabular calculations (Art.C2.16).

Tables C2.5 through C2.7 illustrate the procedure. Three or four tables are usually sufficient. For the example shown $P_{cr} = 45000$ lbs per Table C2.7, (actually between 44200 and 45900 lbs). If the applied load were less than 39300 the column would be known to be stable after only the first table. Or, if more than 47600 it would be known to be unstable, without further effort. Using ten segments instead of five results in a more accurate value of $P_{cr} = 44200$ lbs. The values of E_t and of E_{eff} at any stress level are obtained as discussed in Art.C2.16.

Adjustment for a Step in EI

Referring to Fig.C2.20e, this is done to keep the tabular operations simple.

Fig.C2.20e Adjustment for a Step Geometry

1. Let the station nearest to the step be "n" and that on the other side of the step be "m".

2. Calculate

$$EI_{av} = 2(\frac{E_n I_n \times E_m I_m}{E_n I_n + E_m I_m})$$

3. Calculate.

$$R = EI_{av} - E_n I_n$$

4. Calculate

$$(E_n I_n)_{eff} = E_n I_n + (1-2a/S)R$$

5. Use $(E_n I_n)_{eff}$ in Column 3 for station n. Note that if the step is midway between n and m, $(E_n I_n)_{eff} = E_n I_n$ so no adjustment is necessary. If a = 0 then $(E_n I_n)_{eff} = EI_{av}$.

Example

For the column in Fig.C2.20d station 3 is nearest to the step, which is between stations 3 and 4, a = 3.8" and S = 9.4". Therefore, EI at station 3 is adjusted as follows where n = 3 and m = 4 in the above formulas. $E = 10.5 \times 10^7$.

1. n = 3 and m = 4

2. $EI_{av} = 2(\frac{1.5(10^7) \times .5(10^7)}{1.5(10^7) + .5(10^7)}) = \underline{.75 \times 10^7}$

3. $R = .75(10^7) - 1.5(10^7) = \underline{-.75(10^7)}$

4. $E_3 I_{3eff}$

   $= 1.5(10^7) + (1-2 \times 3.8/9.4)(-.75)(10^7)$

   $= \underline{1.36 \times 10^7}$

5. Therefore 1.36×10^7 is entered in Table C2.5 for EI at station 3.

Column Fixed at the Left End

The following procedure is used for a column fully fixed at it left end. If the right end is fixed, rotate the column so that it becomes the left end. The procedure is the same as before except that a longer table is needed to account for the fixed end moments at the left end. The table is shown as Table C2.8.

The data in the table are for the member shown in Fig.C2.20d except that the left end is fully fixed. Therefore,

Assumed Deflected Shape
EI = .4 x10⁷

EI = 1.5 x 10⁷   S = 9.4"

P → 0   1   2   3   4   5 ← P

EI = .5 x10⁷

9.4

20 ——— 12 —— 15
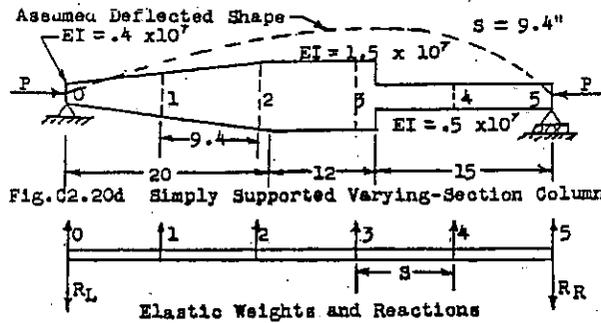
Fig. C2.20d Simply Supported Varying-Section Column

0   1   2   3   4   5

R_L S R_R

Elastic Weights and Reactions

N = No. of Segments = 5
S = Length of Segment = 9.4

$\dfrac{S^2}{12} = 7.36$

Table C2.5   Determination of P_{cr} (First Trial)

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
Sta.	$M = -Py$	EI	$-\dfrac{M_Q}{EI}$	Eq. Conc.* El. Loads	Mom. of Loads	Unit Slope	Unit Def.	True Def.	P_{CR}
n	Data	Data	-②/③	④in Eqs.	⑤x①	$R_L - \Sigma⑤_n$	$\Sigma⑦_n$	⑧x $S^2/12$	-②/⑨
	P = 1#	x 10⁻⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	
0	0	.40	0	1.03	0		0	0	
						15.17			
1	- .40	.92	.435	4.91	4.91		15.17	101.7	39,300
						10.26			
2	- .80	1.43	.559	6.76	13.52		25.43	187	42,800
						3.50			
3	-1.00	1.36**	.736	9.59	28.77		28.93	213	46,900
						- 6.09			
4	- .80	.50	1.600	16.73	66.92		22.84	168	47,600
						-22.82			
5	0	.50	0	4.43	22.15		.02	0	

*See formulas below

**Adjusted for step

Σ = 43.45   136.27

4 | 176,600

$P_{CR_{AV}}$ = 44,150

$R_R = \dfrac{\Sigma⑥}{N} = \dfrac{136.27}{5} = 27.25$ $R_L = \Sigma⑤ - R_R = 43.45 - 27.25 = 16.20$

CHECKS:

$-⑦_{N-1} + ⑤_N = R_R$

$⑧_N = 0$

EQUIV. CONC. EL. LOADS OF COL. ⑤

a) At Ends, Sta. O & N,

$⑤_O = 3.5 \times ④_O + 3.0 \times ④_1 - .5 \times ④_2$

$⑤_N = 3.5 \times ④_N + 3.0 \times ④_{N-1} - .5 \times ④_{N-2}$

b) At Other Stations, n,

$⑤_n = ④_{n-1} + 10 \times ④_n + ④_{n+1}$

True slope = Unit slope x $S/12$
Slope at left end = R_L x $S/12$
Slope at right end = R_R x $S/12$

Beam Sign Convention

(+) Loads act upward
(+) Reactions act downward
(+) Deflections are upward
(+) Slope is up to the right
(+) M puts top in compression
(+) Axial load is compression

The development of the calculation tables is shown in Ref. 4

Table C2.6 Determination of P_{cr} (Second Trial)

N = No. of Segments = 5
S = Length of Segment = 9.4"

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
Sta.	$M = -Py$	EI	$-\dfrac{MQ}{EI}$	Eq. Conc.* El. Loads	Mom. of Loads	Unit Slope	Unit Def.	True Def.	P_{CR}
n	Data	Data	-②/③	④ in Eqs.	⑤×①	$R_L - \Sigma$⑤$_n$	Σ⑦$_n$	⑧ × S²/12	-②/⑨
	P = 1#	x 10⁻⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	
0	0	.40	0	1.25	0		0	0	
						16.14			
1	- .478	.92	.519	5.80	5.80		16.41	121	39,500
						10.34			
2	- .879	1.43	.613	7.29	14.58		26.75	197	44,600
						3.05			
3	-1.000	1.36**	.736	9.55	28.65		29.80	219	45,700
						- 6.50			
4	- .790	.50	1.580	16.54	66.16		23.30	171	46,200
						-23.04			
5	0	.50	0	4.37	21.85		.26	0	

* Use applicable formula Σ = 44.80   137.04
** Adjusted for step

$$R_R = \frac{\Sigma ⑥}{N} = \frac{137.04}{5} = \underline{27.41}$$

$$R_L = \Sigma ⑤ - R_R = 44.60 - 27.41 = \underline{17.39}$$

$4\,|\,176,000$

$P_{CR_{AV}} = 44,000$

CHECKS:
Same as before

Table C2.7 Results of Third Table of Calculations

Station	0	1	2	3	4	5
Py	0	-.553	-.900	-1.000	-.781	0
P_{cr}	-	44200	44700	45200	45900	-

when sketching the assumed initial buckled shape its slope at the left end should be zero, to be realistic. The unit values (due to the left end fixity) in
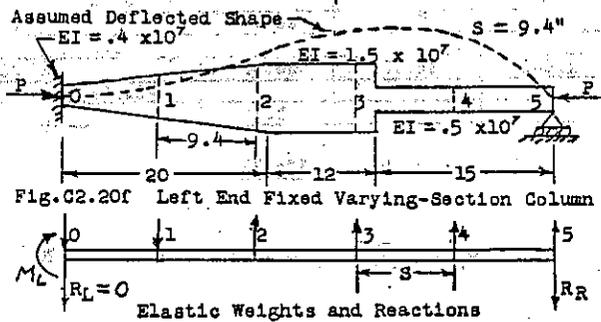
Fig.C2.20f Left End Fixed Varying-Section Column

Elastic Weights and Reactions

Table C2.8 Determination of P_{cr} (First Trial)

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯
Sta.	$M=-Py$	M_{M_L}	EI	-M/EI	-M_L/EI	Eq. Conc.* Loads	Eq. Conc.* Loads	Mom. of ⑦	Mom. of ⑧	M_L Loads	Total Loads	Unit Slope	Unit Def.	True Def.	P_{CR}
n	Data	Unit	Data	-②/④	-③/④	⑤ in Eqs.	⑥ in Eqs.	⑦[N-①]	⑧[N-①]	⑧×M_L	⑦+⑪	-Σ⑫	Σ⑬	⑭×S²/12	-②/⑮
			x 10⁻⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	
0	0	1.0	.40	0	-2.50	.43	-11.15	2.17	-55.75	-5.64	- 5.20		0	0	
												5.20			
1	- .20	.8	.92	.218	- .87	2.60	-11.62	10.40	-46.48	-5.88	- 3.28		5.20	38.3	52,100
												8.48			
2	- .60	.6	1.43	.420	- .42	5.15	- 5.36	15.45	-16.08	-2.71	2.44		13.68	101	59,300
												6.04			
3	-1.00	.4	1.36**	.735	- .29	9.57	- 3.72	19.14	- 7.44	-1.88	7.69		19.72	145	69,000
												- 1.65			
4	- .90	.2	.50	1.800	- .40	18.74	- 4.29	18.74	- 4.29	-2.17	16.57		18.07	133	67,600
												-18.22			
5	0	0	.50	0	0	5.03	- 1.04	0	0	- .52	4.51		- .15	0	

Σ = 41.52   65.90   -130.04   -18.80   22.73

$$M_L = \frac{-\Sigma ⑨}{\Sigma ⑩} = \frac{- 65.90}{-130.04} = .506$$

$R_L = 0$ $R_R = \Sigma ⑫$

$4\,|\,248,000$

$P_{CR_{AV}} = 62,000$

CHECKS: $\Sigma ⑦ + \Sigma ⑪ = \Sigma ⑫$;   ⑬$_{N-1}$ - ⑫$_N$ = -Σ⑫;   ⑭$_N$ = 0

41.52 - 18.80 = 22.73 ;   -18.22 - 4.51 = -22.73 ;   -.15 ≈ 0

Note that Mom. of ⑦ (and ⑧) is calculated differently for this case (about the right end).

Table C2.9   Determination of P_{cr} (Second Trial)

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯
Sta.	M =	M_{M_L}	EI	-M/EI	$-M_L/EI$	Eq. Conc.* Loads	Eq. Conc.* Loads	Mom. of ⑦	Mom. of ⑧	M_L Loads	Total Loads	Unit Slope	Unit Def.	True Def.	P_{CR}
			$\times 10^{-7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	$\times 10^{7}$	
0	0	1.0	.40	0	-2.50	.60	-11.15	3.00	-55.75	-6.20	-5.60		0	0	
												5.60			
1	-.26	.8	.92	.28	-.87	3.29	-11.62	13.16	-46.78	-6.46	-3.17		5.60	41.2	63,100
												8.77			
2	-.70	.6	1.43	.49	-.42	5.91	-5.36	17.73	-16.08	-2.98	2.93		14.37	105.7	66,200
												5.84			
3	-1.00	.4	1.36**	.73	-.29	9.63	-3.72	19.26	-7.44	-2.07	7.56		20.21	148.7	67,200
												-1.72			
4	-.92	.2	.50	1.84	-.40	19.13	-4.29	19.13	-4.29	-2.39	16.74		18.49	136.1	67,600
												-18.46			
5	0	0	.50	0	0	5.16	-1.04	0	0	-.58	4.58		.03	0	

* See Table C2.5   Σ = 43.72   72.28 -130.04 -20.68 23.04   4|264,100

** "   " $M_L = \dfrac{-\Sigma ⑨}{\Sigma ⑩} = \dfrac{-72.28}{-130.04} = .556$ Make same checks as before $P_{CR_{AV.}} = \underline{66,025}$

Columns 3, 6, 8, and 10 do not change in successive tables. For any station, n, the entry in column 3 is 1 - n/N where N is the number of segments used. Hence, these decrease uniformly from 1.0 for station 0 to zero for station N. Columns 1 through 10 are completed, then M_L is calculated as shown and the rest of the table is completed. For the member in Fig. C2.20f using five segments P_{cr} is found to be 66025 after two tables are completed. A third table would reduce the spread in the Col. 16 values for P_{cr}.

Column Fixed at Each End

The procedure is the same as for the previous left end fixed case except that additional columns are needed to account for the fixed right end. The initial assumed buckled shape should be sketched in with zero slope at each end to be realistic. Table C2.10 shows the procedure.

The values entered in col.3,4,7,8,10, 11,13 & 14 do not change in successive tables. For any station, n, the entry in Column 4 is n/N, where N is the number of segments used. Hence, these entries increase uniformly from zero at station 0 to 1.0 at station N. Columns 1 through 14 are completed; then M_L and M_R are calculated and the rest of the table is completed. Using five segments the buckling load, P_{cr}, is found to be 172250 lbs after two tables are completed. More tables would give more accuracy. The suggested checks should be made to detect any errors made after Column 11.

These tables, with a minor change, are also used to determine the bending moments in beam-columns with a varying EI as discussed in Art. C3.18. The value of P_{cr} for the member as a column can also be calculated as shown in Table C3.6*.

* See footnote on p.14.

Other Uses of the Tables

For a complete discussion of the tabular method development, the "equiv-concentrated elastic loads" and additional examples see Ref. 4 (described in Art. A18.27a) which also discusses the following applications.

1. Axial loads between the ends

2. A column consisting of two pieces connected by a torsion spring (which could also be a splice).

3. Multispan columns having one or more spans of a varying EI

4. Free-ended columns having a varying EI

5. The numerical determination of carry-over factors and stiffness factors

6. Multispan columns on elastic supports which may be present as either discrete isolated supports or another beam or column.

C2.6e Columns Having an Initial Bent Shape

When a column has an initially bent shape as in Fig. C2.40 the axial load will generate a bending moment along the column in the amount $M = Py$, where y is the deflection of the bent shape at any station. The column may be uniform or it may have a varying EI.
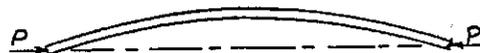

Fig.C2.40 Column With Initial Bent Shape

Therefore, the column is actually a beam-column, as discussed in Art.C3.18, Beam-Columns Having an Initially Bent Shape" except that there are no trans-
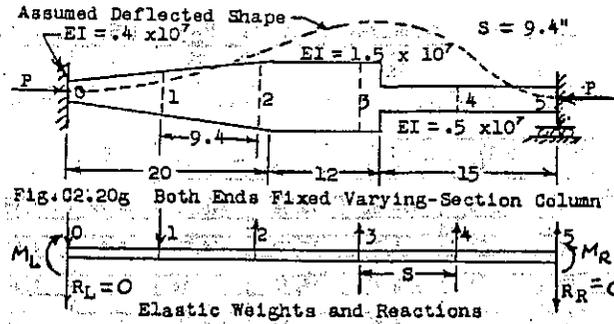
Fig. C2.20g Both Ends Fixed Varying-Section Column

Elastic Weights and Reactions

N = No. of Segments = 5
S = Length of Segment = 9.4"

Table C2.10 Determination of P_{cr} (First Trial)

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑
Sta	M=-P$_y$	M$_{M_L}$	M$_{M_R}$	EI	$-\frac{M}{EI}$	$-\frac{M_L}{EI}$	$-\frac{M_R}{EI}$	Equiv. Conc. Loads	Equiv. Conc. Loads	Equiv. Conc. Loads	Mom. of ⑨	Mom. of ⑩	Mom. of ⑪	⑩ x M$_L$	⑪ x M$_R$	Total Loads	Unit Slope	Unit Def.	True Def.	P$_{CR}$
n	Data	Unit	Unit	Data	$-\frac{②}{⑤}$	$-\frac{③}{⑤}$	$-\frac{④}{⑤}$	⑥ in Eqs.	⑦ in Eqs.	⑧ in Eqs.	⑨×①	⑩×①	⑪×①	⑩ x M$_L$	⑪ x M$_R$	$\frac{⑨·⑮}{+⑯}$	-Σ⑰	Σ⑱	⑲ x S²/12	-②/⑳
				x 10⁻⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	
0	0	1.0	0	.40	0	-2.50	0	.73	-11.15	.51	0	0	0	-3.20	-.26	-2.73		0	0	—
																	2.73			
1	-.3	.8	.2	.92	.326	-.87	-.217	3.75	-11.62	-2.45	3.75	-11.62	-2.45	-3.33	-1.26	-.84		2.73	20.09	149,000
																	3.57			
2	-.7	.6	.4	1.43	.489	-.42	-.279	5.95	-5.35	-3.45	11.90	-10.70	-6.90	-1.54	-1.77	2.64		6.30	46.37	151,000
																	.93			
3	-1.0	.4	.6	1.36	.735	-.29	-.441	8.84	-3.76	-6.29	26.52	-11.28	-18.87	-1.08	-3.23	4.53		7.23	53.21	188,000
																	-3.60			
4	-.5	.2	.8	.50	1.000	-.40	-1.600	10.74	-4.29	-18.44	42.96	-17.16	-73.76	-1.23	-9.48	.03		3.63	26.72	122,000
																	-3.63			
5	0	0	1.0	.50	0	0	-2.000	2.63	-1.05	-11.58	13.15	-5.25	-57.90	-.30	-5.95	-3.62		0	0	—
									Σ =	32.64	-37.22	-42.72	98.28	-56.01	-159.88	-10.68	-21.95	-.01			4 670,000

$$M_L = \frac{\Sigma⑫ - \Sigma⑨ \times \frac{\Sigma⑭}{\Sigma⑪}}{\Sigma⑩ \times \frac{\Sigma⑭}{\Sigma⑪} - \Sigma⑬} = \underline{.287}$$

$$M_R = \frac{\Sigma⑫ - \Sigma⑨ \times \frac{\Sigma⑬}{\Sigma⑩}}{\Sigma⑪ \times \frac{\Sigma⑬}{\Sigma⑩} - \Sigma⑭} = \underline{.514}$$

CHECKS: 0 = Σ⑨ + M$_L$ x Σ⑩ + M$_R$ x Σ⑪ ; $P_{CR_{AV.}}$ = 167,500

0 = Σ⑨ + Σ⑮ + Σ⑯ ; 0 = Σ⑰ :
0 = 32.64 + (-10.68) + (-21.95) 0 = -.01
0 = ⑱$_{N-1}$ - ⑰$_N$: 0 = ⑲$_N$
0 = 3.63 - (-3.62) 0 = 0

*, ** See Table C2.5

Table C2.11 Determination of P_{cr} (Second Trial)

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑
n	Data	Unit	Unit	Data	$-\frac{②}{⑤}$	$-\frac{③}{⑤}$	$-\frac{④}{⑤}$	⑥ in Eqs.	⑦ in Eqs.	⑧ in Eqs.	⑨×①	⑩×①	⑪×①	⑩ x M$_L$	⑪ x M$_R$	$\frac{⑨·⑮}{+⑯}$	-Σ⑰	Σ⑱	⑲ x S²/12	-②/⑳
				x 10⁻⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	x 10⁷	
0	0	1.0	0	.40	0	-2.50	0	.93	-11.15	.51	0	0	0	-3.94	-.26	-3.27		0	0	—
																	3.27			
1	-.38	.8	.2	.92	.410	-.87	-.217	4.72	-11.62	-2.45	4.72	-11.62	-2.45	-4.11	-1.26	-.65		3.27	24.05	158,000
																	3.92			
2	-.87	.6	.4	1.43	.610	-.42	-.279	7.24	-5.35	-3.45	14.98	-10.70	-6.90	-1.89	-1.77	3.58		7.19	52.90	165,000
																	.34			
3	-1.00	.4	.6	1.36	.730	-.29	-.441	8.91	-3.76	-6.29	26.73	-11.28	-18.87	-1.33	-3.23	4.23		7.53	55.40	180,000
																	-3.89			
4	-.50	.2	.8	.50	1.000	-.40	-1.600	10.73	-4.29	-18.44	42.92	-17.16	-73.76	-1.52	-9.48	-.27		3.64	26.80	186,000
																	-3.62			
5	0	0	1.0	.50	0	0	-2.000	2.84	-1.05	-11.58	13.30	-5.25	-57.90	-.37	-5.95	-3.68		.02	0	—

M$_L$ = .354   M$_R$ = .515   Σ = 35.17 -37.22 -42.72 102.15 -56.01 -159.88 -13.16 -21.95 .06 $P_{CR_{AV.}}$ = 172,250

Make same checks as above.

verse loads and their initial bending moments, M_0. Thus, the column would be analyzed as discussed there using an equivalent transverse loading such as that in Fig. C3.33 or thereabouts.

Actually, no column is perfectly straight although this is assumed in using the numerous buckling load formulas and data for P_{cr}. Because of this many analysts and designers maintain a small positive margin of safety when the margin is based on using P_{cr}.

Therefore, an alternative approach is to assume an initial bent shape having a "bow" of L/800 inches or thereabouts, or of what the drawing specifies such as "straight within X inches" where X is usually on the order of L/800 or so. X is actually a tolerance for deviation from straightness of ±X inches, so the mean would be ±X/2 and this would be used to show a zero or positive margin of safety.

Then a check is made using X to be sure
that there is not a negative margin
of safety greater than -.15 or -.25 (per
Art.C1.13b). Sometimes X, rather than
X/2, is used to show a positive margin,
which is a conservative procedure. In
any case a beam-column analysis is made.

C2.7a Design Column Curves for Columns with Non-Uniform Cross-Sections

For columns with other steps the
procedures in Art.C2.6a are used. For
columns whose taper does not meet the
requirements of Fig. C2.23 or C2.24 ei-
ther a conservative assumption (adjust-
ment) for the taper must be used or a
numerical analysis as in Art. C2.6b is
required.

C2.8a Column Fixity Coefficients C for Use with Columns with Elastic Side Restraints and Known End Bending Restraints

Fig.C2.25a and C2.26a provide the
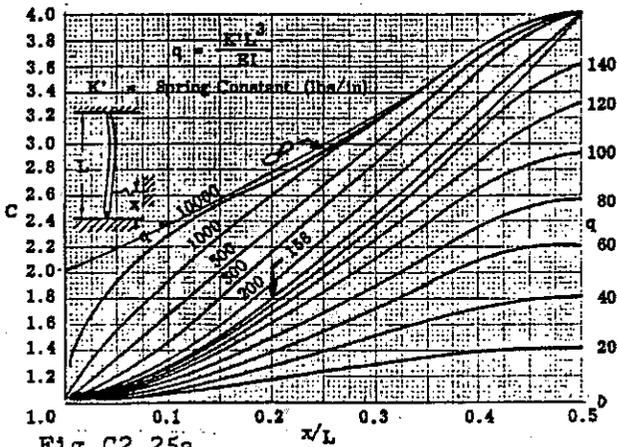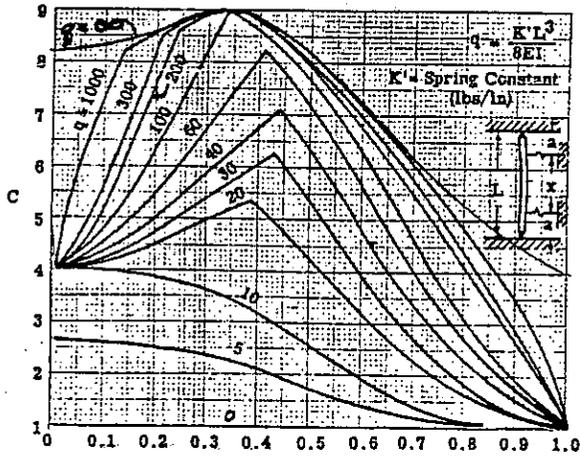envelopes (for q = ∞) for Fig.C2.25 and
C2.26.

Fig.C2.25a

Fig.C2.26a

C2.10a Solution Without Using Column Curves

The inside scales for Fig. C2.17
are not shown in the textbook. Fig.C2.17a
shows the inside scales for the ordinate
and for the abscissa.

It must be understood that, like a
column curve, Fig.C2.17 (and C2.17a) can-
not be used when determining the critical
load requires using a parameter which is
also a function of E. This occurs, for
example, with Fig.C2.25, C2.26, C2.27
(and C2.27a) where the parameter C is a
function of E. This also occurs for
other such data. In these cases a suc-
cessive trials procedure must be used
(as in Art.C2.12, Case 2 Inelastic Fail-
ure, Portion 2). That is, the value of E
used in determining P_{cr} per the figures
must also be the value of E corresponding
to $F_{cr} = P_{cr}/A$ when the stress is in the
plastic range (E is E_t) or when local in-
stability is present (E is E_{eff}). E_t and
E_{eff} are discussed in Art.C2.16.

C2.13a Column Strength With Known End Restraining Moments

Fig.C2.27a is much more useful than
Fig.C2.27 since it provides curves for
numerous values of k and k_1, where the
symbol "k" is "u" in Fig.C2.27 and in Art
C2.12. The curves can be obtained by us-
the moment distribution procedure.

Referring to the example shown for
Fig.C2.34, for each of the restraining
members, AC, AE and AF the value of k is
calculated as k = 4SC(EI)/L where SC is
obtained as C in Fig.All.47, conserva-
tively using the "far end pinned" curves.
for tension or compression in the member.
The total restraint at end A of the mem-
ber AB will then be

$$k_A = k_{AC} + k_{AE} + k_{AE}$$

The same thing would be done at end B for
members BF, BG and BD to obtain k_B.
Then having the values of k P_{cr} for mem-
ber AB is obtained by using Fig.C2.27a.
Note in Fig.All.47 when L/j exceeds π
for compression members C becomes neg-
tive for the pinned end case.

This procedure is more accurate than
that in Art.C2.13, but it is still an
approximate one. For more exactness the
procedure discussed in Art.All.15b should
be used. Many trusses are designed assu-
ming pinned joints which is generally
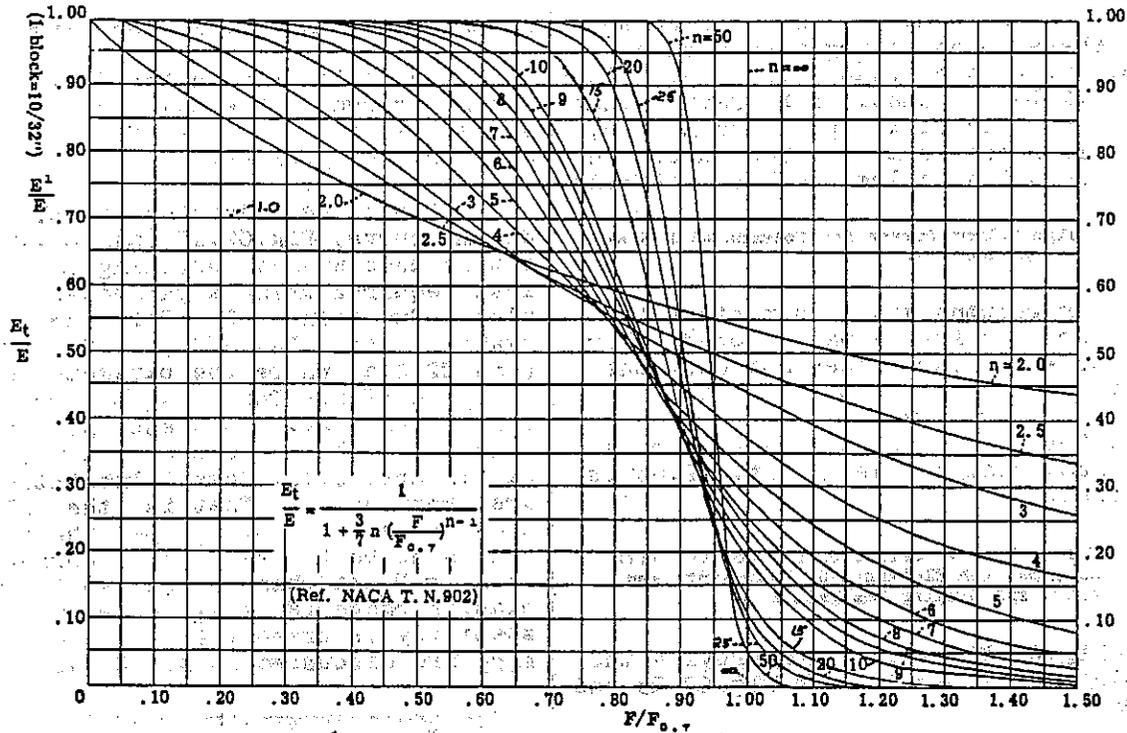conservative as discussed in All.15b.

$$\frac{E_t}{E} = \frac{1}{1 + \frac{3}{7} n \left(\frac{F}{F_{o.7}}\right)^{n-1}}$$

(Ref. NACA T.N.902)

Fig.C2.16a Dimensionless Tangent Modulus Curves

Use Outside Scale

Use Inside Scale

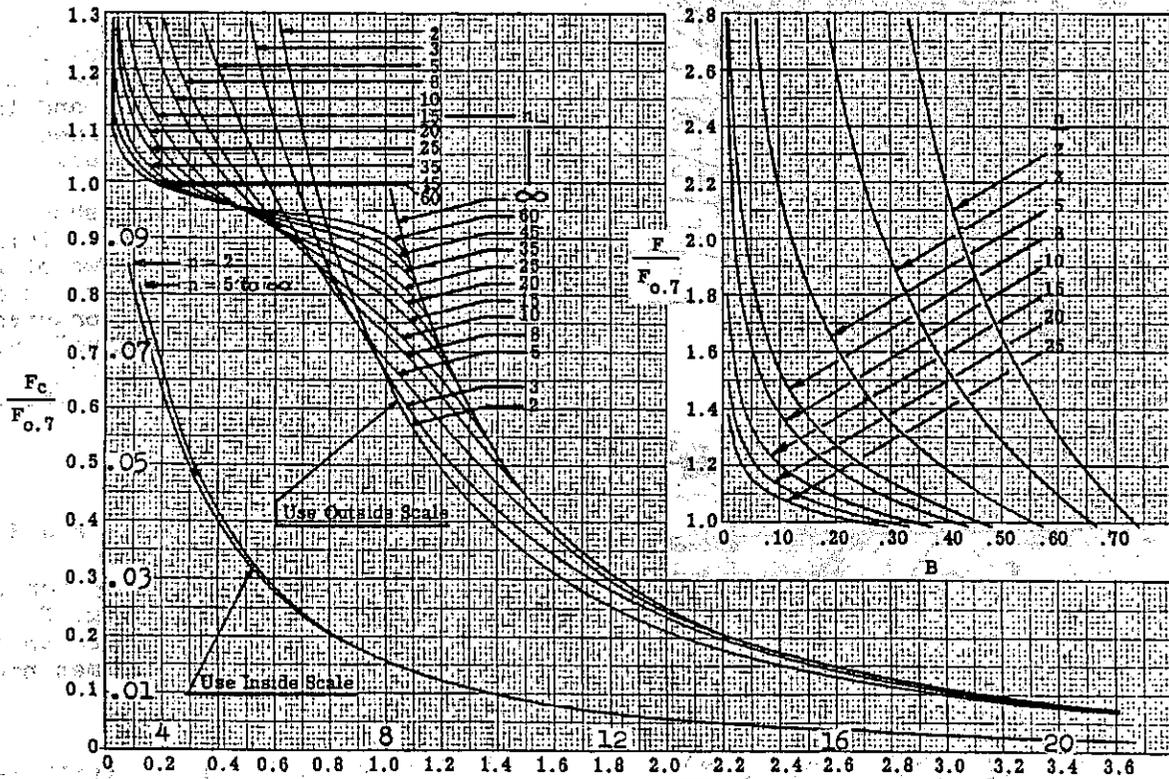Fig. C2.17 $\qquad B = \frac{1}{\pi} \sqrt{\frac{F_{0.7}}{E}} (L'/\rho)$

Fig.C2.17a Non-Dimensional Column Curves

B is also $\sqrt{F_{0.7}/F_{cr}}$ where $F_{cr} = \pi^2 E/(L'/\rho)^2$, E being Youngs Modulus (not E_t)

Example Problem

Proceeding as discussed, recalculate F_{cr} for member AB of Fig.C2.34 assuming that the loads in the restraining members at ends A and B are due to an applied upward load of 3,000 lbs at joint D, reacted at A and B. The following table shows the calculations for k at ends A and B.

Table C2.12 Generation of Stiffness Factors, k

Member	Load	$\frac{EI}{x10^{-6}}$	J	L	L/J	SC	k = 4SCEI/L
AC	90000	1.121	11.16	30.0	2.69	.30	448,000
AE	4243T	.805	13.77	42.4	3.08	1.13	858,000 Σ=1,984,000
AF	30000	.697	15.24	30.0	1.97	.73	678,000 =k_A
BD	30000	1.121	19.33	30.0	1.55	.62	927,000
BF	4243T	.805	13.77	42.4	3.08	1.13	858,000 Σ=2,463,000
BG	30000	.697	15.24	30.0	1.97	.73	678,000 =k_B

Using Fig.C2.27a, $k_1 = k_B$ (the larger k) and $k = k_A$.

$k_1 L/EI = 246300(30)/1,121,000 = 6.59$ so $k/k_1 = .80$ and C is obtained from Fig. C2.27a as 2.2.

For this member D/t = 1.25/.058 = 21.6 and per Fig.C4.9 its crushing (crippling) strength is quite high, 67500 psi. Therefore, the column curve of Fig.C2.3 for RT can be used without modification. For member AB

$L' = L/\sqrt{C} = 30/\sqrt{2.2} = 20.2$
$L/\rho = 20.2/.422 = 47.9$

Then, per the column curve, for member AB $F_{cr} = 53,000$. This is slightly less than obtained per the Art.C2.13 procedure.

If pinned ends were assumed for all joints then C = 1.0, $L/\rho = 30/.422 = 71.1$ and $F_{cr} = 43,000$ (too small), but words about bending failure in Art.A11.15b also applies here. If the truss has members subject to local instability see Art. C2.16. Also if the members' b/t were large, say 9 or more, and of open section, torsional buckling might be critical (Art.C7.31).

C2.16 The Use of E_t and E_{eff}

The Tangent Modulus, E_t

As the axial stress in a column becomes increasingly greater than the proportional limit stress, the tangent modulus which is the slope of the stress-strain curve becomes successively smaller. This reduction in E_t is shown in Fig.B1.5 (the curves on the right being E_t) and also in the following sketch,
As discussed in Art.A18.8, Shanley

has shown and experimental data has verified (Fig.A18.11 and A18.12) that the use of E_t is justified for determining the buckling stress of columns. It is also used for beam-columns having significant axial stresses. Hence, the use of E_t in Art.C2.1 and subsequent articles is understood.

However it must be understood that E_t is applicable only for columns of stable cross-sections (reasonably thick flanges etc.). That is, there must be no flange having a local buckling stress smaller than the column's buckling stress

If there is then E_t does not apply and an "effective" modulus, E_{eff}, must be used instead. It is smaller than E_t at any L'/ρ value.

The Effective Modulus, E_{eff}

When any flange has a local buckling stress smaller than F_{cr} for the column, assuming a stable cross-section, an "effective" value for E, E_{eff}, must be used. E_{eff} is obtained as follows.

A column curve is constructed as discussed in Art.C7.25 and illustrated in Art.C7.26. Method 1 there is the most frequently used, followed by Method 2. Having this adjusted column curve which accounts for the reducing effect of local instability, F_{cr} can be obtained for any value of L/ρ.

However, when the buckling stress is determined for other than the above simple case it is necessary to use E_{eff} which can be gotten as follows. For any value of F_{cr} the value of L'/ρ is obtained from the column curve and E_{eff} is calculated as

$$E_{eff} = F_{cr}(L'/\rho)^2/\pi^2$$
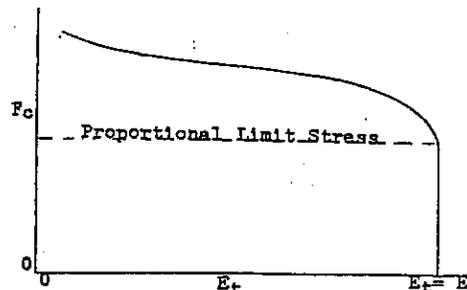
It is for cases where F_{cr} is determined using a "constant" which is a function of E that E_{eff} must be determined and used. Examples of such cases are Fig.C2.25, C2.26, C2.27, C2.41 etc. In these cases a successive trials procedure is needed

(just as would be if E_t were applicable). That is, one assumes a value for E_{eff}, determines F_{cr} and then determines the value of E_{eff} corresponding to this F_{cr} per the above formula. If it is not the same (essentially) as the assumed E_{eff} another value for E_{eff} is assumed and the procedure is repeated. This is repeated as necessary until the assumed value is essentially the value corresponding to F_{cr}. This procedure is similar to that required when using E_t as discussed in Art.C2.10a. E_{eff} is not used with beam-columns (only E_t is) since the beam-column allowable stress considers any local buckling effect when Method 2 therein is used. However, with Method 1 E_{eff} would be used when local instability is present, see Art.C3.18.

C2.17 Additional Buckling Load Data

This article provides additional buckling load data for various types of columns. It is generally self-explanatory.

$\beta = k/a$ lbs/in per inch

$P_{cr} = \pi^2 E_t I/(L')^2$; L' from table below

$a \leq L'/3$
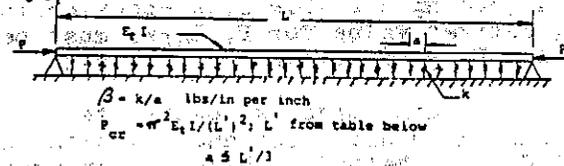
$\beta L^4/16E_tI$	0	1	3	5	10	15	20	30	40	50	75	100
L'/L	1	.927	.819	.741	.615	.537	.483	.437	.421	.406	.376	.351
$\beta L^4/(16EI)$	200	300	500	700	1000	1500	2000	3000	4000	5000	8000	10^4
L'/L	.286	.263	.235	.214	.195	.179	.165	.149	.140	.132	.117	.110

Fig.C2.41 Column On Elastic Foundation

$\beta = k/a$ lbs/in per inch

$(qL/4)_{cr} = \pi^2 E_t I/(L')^2$; L' from table below

$a \leq L'/3$
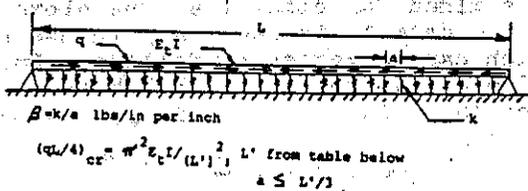
$\beta L^4/16E_tI$	0	5	10	15	22.8	56.5	100	162.8	200	300	500	1000
L'/L	.696	.524	.443	.396	.363	.324	.290	.259	.246	.225	.204	.174

Fig.C2.42 Column On Elastic Foundation With a Distributed Axial Load

Fig. C2.43 Column With Intermediate Load

Note that the intermediate load, P_2, in Fig.C2.43 must be located at the step, if one exists.* The buckling equation is

* See "Formulas for Stress and Strain", Roark and Young, 5th Edition, for rapid solution for numerous cases and end conditions.

$$\frac{k_4^2}{k_1^2} - \frac{k_1^2 L + k_4^2 L_1}{k_1 \tan k_1 L_1} = \frac{k_2^2}{k_3^2} + \frac{k_3^2 L - k_2^2 L_2}{k_3 \tan k_3 L_2}$$

where $k_1^2 = \dfrac{P_1}{EI_1}$ $k_2^2 = \dfrac{P_2}{EI_2}$ $k_3^2 = \dfrac{P_1+P_2}{EI_2}$ $k_4^2 = \dfrac{P_2}{EI_1}$

The critical load combination, called P_1' and P_2' must be in the same ratio as the applied loads P_1 and P_2 and are found as follows. For the given loads calculate $a = P_1/P_2$. Assume P_2' is P_2 and per the formulas find by succesive trials the value of P_1' which satisfies
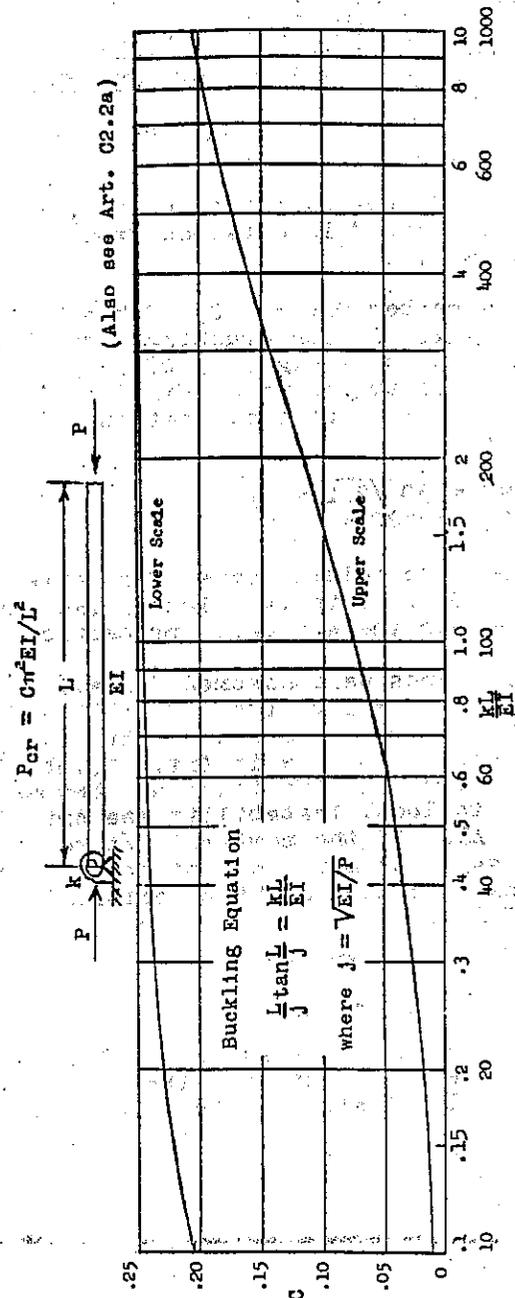
$P_{cr} = C\pi^2 EI/L^2$

Buckling Equation

$\dfrac{L}{j}\tan\dfrac{L}{j} = \dfrac{kL}{EI}$

where $j = \sqrt{EI/P}$

Lower Scale

Upper Scale

(Also see Art. C2.2a)

(Art.C2.2a)

$\dfrac{kL}{EI}$

Fig.C2.44 Free-Ended Column Having an Elastic Restraint and m = 1.0

the equation and then calculate a' = P_1'/P_2. If a' ≠ a assume a different value of P_2, calling it P_2', and repeat. Repeat as necessary until a' = a. P_1' and P_2' are then the critical load combination.[**] The margin of safety is then

M.S. = P_1'/P_1 - 1.0   (or P_2'/P_2 - 1.0)

If F_{cr} is in the plastic range for either portion then the value of E_t must be used, and the value of E_t corresponding to F_{cr} must be the same , essentially, as the value used in calculating it.(successive trials). If local instability is present E_{eff} would be used instead of E_t. The procedure is, of course, much simpler for the special case where there is no step (EI$_1$ = EI$_2$), or when $P_2 = 0$.

$$P_{cr} = C\pi^2 EI/L^2$$

$$\frac{k_1 L}{E I} = \pi\sqrt{C} \cot \frac{\pi\sqrt{C}}{E}$$

$$\frac{k_1 L}{E I} = \frac{\pi^2 C}{\pi\sqrt{C} \cot \pi\sqrt{C}-1}$$
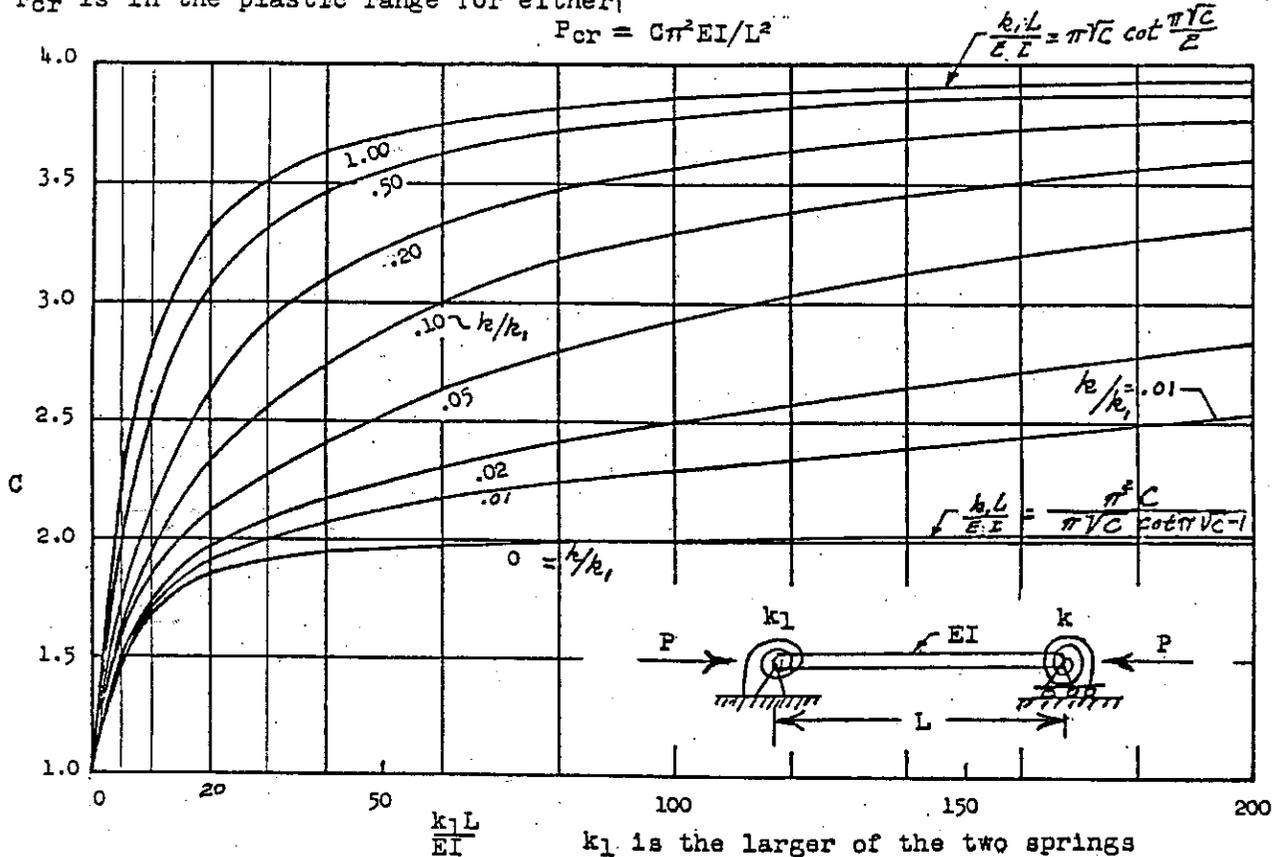
Fig. C2.27a Constant Section Column Having Elastically Restrained Ends

Note that interpolation for C "between the lines" is non-linear. For an exact value here, or for $k_1 L/EI > 200$, P_{cr} can be found by successive trials, as follows.

1. Use the figure to get an approximate value of C and calculate P_{cr}.

2. Get the corresponding values of j, L/j COF and SF (= 4SCEI/L).

3. Enter the values in the following buckling equation (see Ref. 4 for derivation of the equation).[*]

$$SF^2 (COF)^2/((k_1 + SF)(k + SF)) = 1.0$$

4. If the left side of the equation

is < 1.0 assume a slightly larger value for P_{cr} and repeat steps (2)-(4); if > 1.0 assume a smaller value.

5. Repeat steps (2)-(4) until the equation is satisfied and P_{cr} is as assumed.

The value used for E must correspond to E_t for F_{cr} when F_{cr} is in the plastic range, or to E_{eff}.

To check a column's adequacy under a given load enter its values of SF and COF in the equation. If the left side is < 1.0 it is stable; if > 1.0 it is unstable. See A11.13a for SC and COF values. The k/k$_1$ curves in the above figure were generated using the buckling equation.[*]

[*] Derived by using the moment distribution procedure.

[*] If k$_1$ = ∞ (fully fixed) the buckling equation is SF + k = 0, so for stability L/j < 2π and SF+ k > 0

[**] or directly with an error of < 1% for the special case where E$_1$ = E$_2$ = E and L$_1$ = L$_2$ with n = I$_2$/I$_1$ and m = (P$_1$ + P$_2$)/P$_1$ (Ref. 5, p.100)

$$P_1' + P_2' = \frac{(\pi^2 EI_2/L^2)(m+1)}{m + \frac{6}{\pi^2}(\frac{m-1}{m})^2 - \frac{6(m-1)}{\pi^2} + n\left[\frac{1}{m} + \frac{6}{\pi^2}(\frac{m-1}{m})^2 + \frac{6(m-1)}{\pi^2 m}\right]}$$

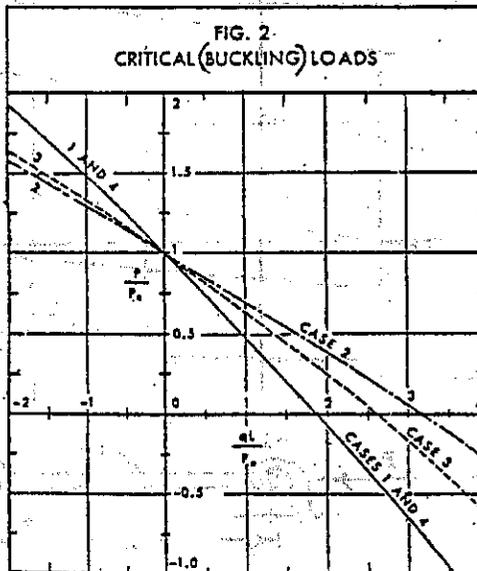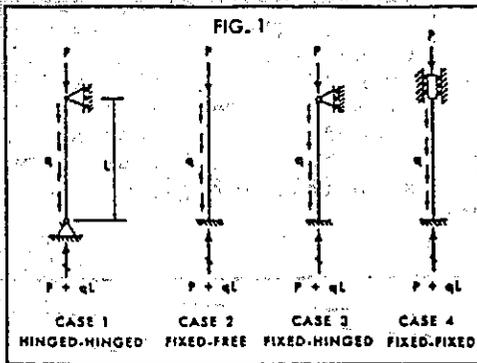Table C2.13 Uniform Column with Distributed Load and End Load*

FIG. 1

CASE 1 HINGED-HINGED   CASE 2 FIXED-FREE   CASE 3 FIXED-HINGED   CASE 4 FIXED-FIXED

FIG. 2
CRITICAL (BUCKLING) LOADS

$\frac{qL}{P_e}$	$\frac{P}{P_e}$			
	CASE 1	CASE 2	CASE 3	CASE 4
-4	2.743	2.113	2.204	2.766
-3	2.332	1.848	1.932	2.365
-2	1.933	1.575	1.643	1.939
-1.5	1.712	1.435	1.491	1.715
-1.0	1.483	1.292	1.333	1.484
-0.5	1.246	1.147	1.170	1.246
0	1	1	1	1
0.25	0.874	0.925	0.913	0.874
0.50	0.746	0.850	0.824	0.746
0.75	0.616	0.774	0.733	0.616
1.0	0.483	0.697	0.640	0.484
1.5	0.212	0.542	0.449	0.215
2	-0.067	0.384	0.250	-0.061
3	-0.645	0.059	-0.173	-0.635
4	-1.257	-0.279	-0.629	-1.234
5	-1.892	-0.629	-1.117	-1.855
6	-2.548	-0.992	-1.635	-2.496
8	-3.914	-1.740	-2.748	-3.825
10	-5.337	-2.584	-3.940	-5.204
P_e	$\frac{\pi^2 EI}{L^2}$	$\frac{\pi^2 EI}{4L^2}$	$\frac{20.191\,EI}{L^2}$	$\frac{4\pi^2 EI}{L^2}$
$\frac{P_e}{EI/L^2}$	$\begin{matrix}9.8696\\ \pi^2\end{matrix}$	$\begin{matrix}2.4674\\ \pi^2/4\end{matrix}$	$\begin{matrix}20.191\\ 2.046\pi^2\end{matrix}$	$\begin{matrix}39.478\\ 4\pi^2\end{matrix}$
$\frac{(qL)_{cr}}{P_e}$ for $P=0$	1.881	3.176	2.660	1.890

TABLE 1
CRITICAL (BUCKLING) LOADS

The above data are used as follows. For a given P, the critical value of q is found. Or, for a given value of q the critical value of P is found. Positive values for the loads act as shown; negative values act in the opposite direction. If $P > P_e$ then q_{cr} will be negative. If $q > q_{cr}$ (for $P = 0$) then P_{cr} will be negative.

For a given q P_{cr} is found as follows.

1. Compute P_e using the equation in Table 1 (20th row)
2. Compute qL/P_e observing the proper sign for q
3. Obtain P/P_e from either Table 1 (interpolating) or Fig. 1
4. Compute $P_{cr} = P_e (P/P_e)$

For a given P q_{cr} (the maximum allowable value of q) is found as above, but using P/P_e in step (2), qL/P_e in step (3) and computing $q_{cr} = P_e/L \times (qL/P_e)$ in step (4).
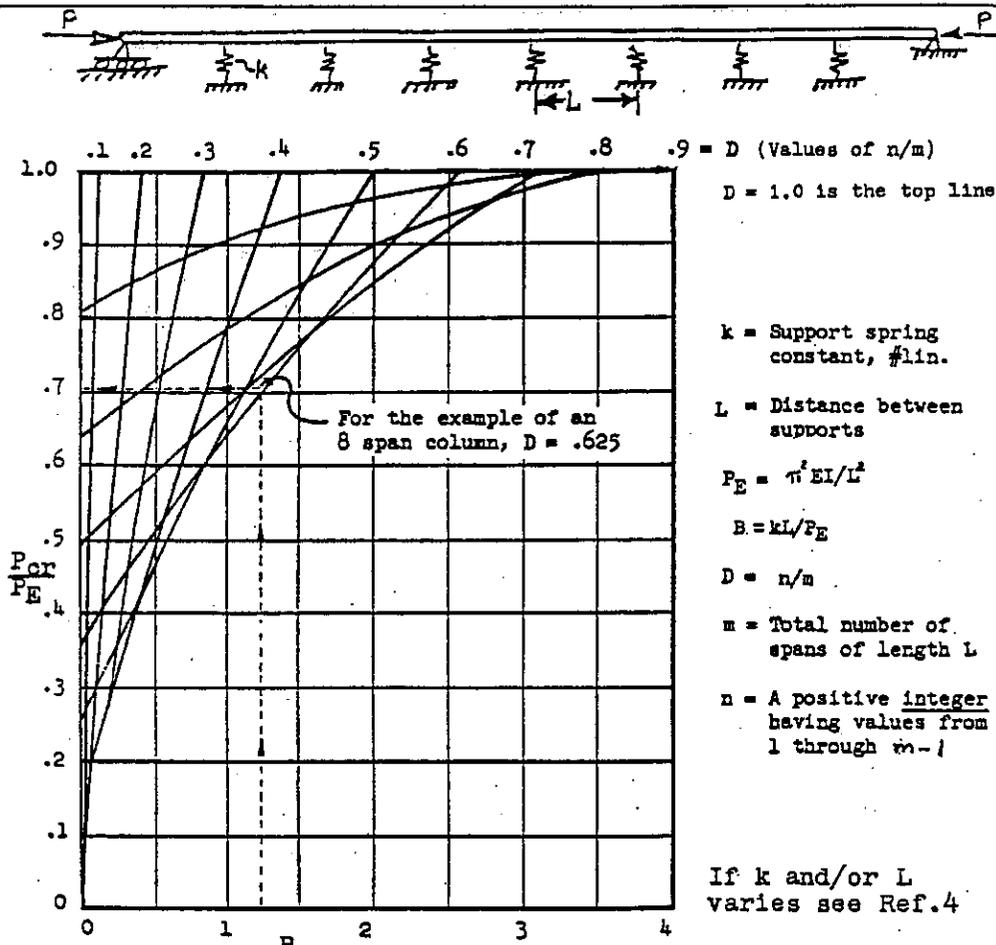
Example 1 (For all cases L=50, EI=10⁷)
P=50000, Case 3. What is q_{cr}? P_e=2.04
($\pi^2 EI/L^2$)=80773, P/P_e=.619. Per Fig.2
qL/P_e=1.05. So q_{cr}=1.05(80773)/50=__1696__

Example 2
P=-30000, Case 1. What is q_{cr}?
P_e=$\pi^2 EI/L^2$=39478, P/P_e=-.76. Per Table
qL/P_e=3.17. So q_{cr}=3.17(39478)/50=__2503__

Example 3
q=1000, Case 1.   What is P_{cr}?
P_e=39478, qL/P_e=1.64. Per Fig.1
P/P_e=.34. So P_{cr}=.34(39478)= __13423__

Example 4
P = 133000, Case 3.   What is q_{cr}?
P_e=80773. P/P_e=1.65. Per Table 1
qL/P_e=-2.02. q_{cr}=-2.02(80773)/50=__3263__

* For many cases of a varying q see Roark (p.26 footnote).

For the example of an 8 span column, D = .625

D = 1.0 is the top line

k = Support spring constant, #/in.

L = Distance between supports

$P_E = \pi^2 EI/L^2$

$B = kL/P_E$

D = n/m

m = Total number of spans of length L

n = A positive _integer_ having values from 1 through m-1

If k and/or L varies see Ref.4

To Determine P_{cr}:

1. Compute value of B.
2. Compute all possible values of D.
3. Interpolating between the above plotted values of D with the actual values of D in (2) and the value of B, find the smallest value of P_{cr}/P_E.
4. Compute $P_{cr} = (P_{cr}/P_E)_{min}(P_E)$

NOTE: In doing step (3) above it is easiest to first simply find which one of the plotted values of D give the smallest P_{cr}/P_E. Then consider only the 2 actual values of D that are closest to this for interpolating.

A quick conservative estimate can be obtained by only using B and the lower "envelope" of the plotted D values.

This data is used to determine the minimum support spring constant required, k_{min}, to obtain simple support throughout.

$k_{min} = (k_{min}L/P_e)(P_e/L)$

No. of elastic supports, m-1.
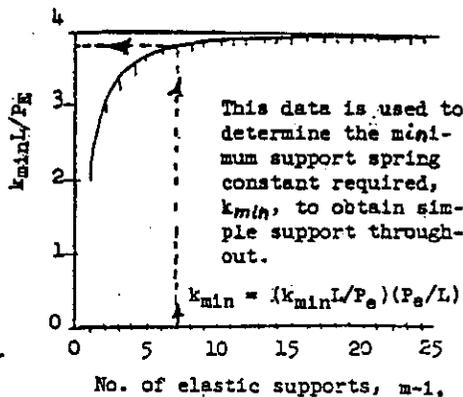
Fig.C2.45   Uniform Column on Equally Spaced Elastic Supports Having Simply Supported Ends

Example

For an eight span column having L = 20", EI = 10^6, k = 1510 lbs/in what is the buckling load? Proceeding as outlined;

$P_e = \pi^2 (10)^6 /20^2 = 24674$

B = 1510(20)/24674 = 1.22

m=8, so D=1/8, 2/8, 3/8, · · · · · 7/8.

Per the above figure, P_{cr}/P_e = .705

Therefore, P_{cr} = 24674(.705) = 17395

To obtain simple support throughout k_{min}

= 3.82(24674)/20 = 4713 (then $P_{cr} = P_e$).

C2.18 End Friction Effects

For pin-ended columns the presence of end fixity due to friction will affect the axial load carrying ability in two different ways. One is to increase it and the other is to decrease it. Such columns typically have an end fitting which includes either a plain (or spherical) bearing or a roller (or ball) bearing with a connecting bolt or pin. With plain or spherical bearings the end friction can be quite significant, whereas with ball or roller bearings it is essentially negligible.

The effect depends upon the manner in which the column functions. If it is a stationary column with no end rotation relative to its supporting structure (such as a column in a testing machine) the effect is to increase the buckling load. If it is part of a mechanism or structure where such a relative rotation at the ends occurs the effect is to generate a bending moment which reduces the axial load carrying ability.

Stationary Columns

For these the effect is to oppose any rotation at the ends (which occurs when a column buckles). Therefore, the buckling load increases, but this cannot be used in design or analysis since it is not reliable.

Moving Columns (End Rotation)

These cases must consider the end friction since it causes end moments which reduce its strength. Fig.C2.46 illustrates the two possibilities here.
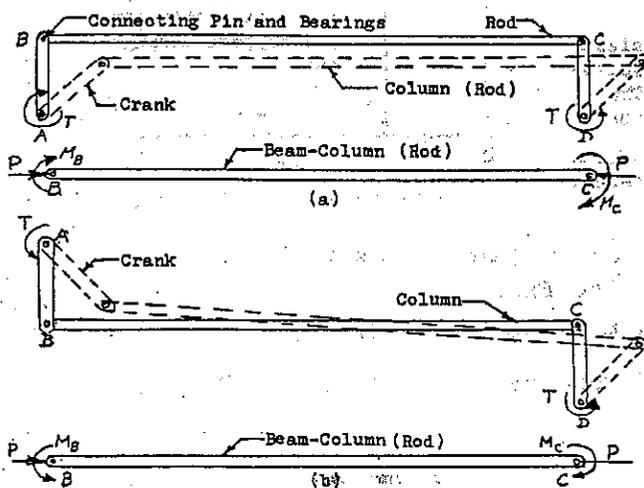
Fig.C2.46 Column as Part of a Mechanism

The two cranks and the rod, BC, are a mechanism which moves as shown by the broken lines. For each case, (a) and (b) the "input" torque, T, on crank AB causes the mechanism to move to the right and is reacted by the "output" torque at D. This puts rod BC in compression. The broken lines show the relative rotation between the rod and the cranks. The axial load, P, and the end moments, M, due to friction are shown for each case. Note that case (b) is more severe than is case (a). The magnitude of the moments are calculated as

$$M = P(uD/2)$$

uD/2 is the radius of the "friction circle" where

     u = coefficient of friction between the pin and the bearing
     D = Diameter of the connecting pin

For most cases $u \approx .20$ but can be much higher if high-friction materials are used. The axial load, P, actually acts tangent to the radius of the friction circle as shown in Fig.C2.47 for the above two cases.
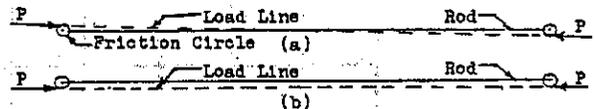

Fig. C2.47 Load Line Tangent to Friction Circle

Hence, the rod BC is a beam-column, due to the friction end moments, and therefore will fail before its buckling load, P_{cr} can be attained. The bending moment along the rod can be gotten per Case I (or II) in Table A5.1, and the stress analysis made per Art.C3.18. If the friction effects are ignored there will be a bad "surprise" when an earlier than predicted failure occurs, particularly when P approaches P_{cr}.

References: (Add to those on p.C2.18)

4) Engineering Column Analysis, (see Art.A18.27a)

5) Theory of Elastic Stability, Timoshenko,S.P.and Gere,J.M., McGraw Hill Co.

6) Numerical Procedure for Computing Deflections, Moments and Buckling Loads, Newmark,N.W.,Trans. ASCE, Vol.108,1943

7) "Critical Loads of Columns of Varying Cross Section", Thompson, W.T., Journ. of App.Mechanics, June, 1950

C3.4a The Cozzone Simplified Procedure

The following presents a correction and an addition to Fig.C3.8.

1. The value of K for the tube in the figure should be 1.27 to 1.7.

2. The first two sentences of the final paragraph are revised as follows.

If the calculated value of K is greater than the ranges shown or greater than, say, 2.0 for combinations an error has been made. For the concave diamond shown in Fig.C3.7a,if the shape is given as $y = \pm ax^n$ (for the left side) then $K = (9n + 3)(4n + 2)$. For example, if $n = 1$ (a diamond) then $K = 2.0$; if $n = 1.2$ (a slight concavity) then $K = 2.03$; if $n = 2$ (a large concavity) then $K = 2.1$; if $n = \infty$ (the maximum,but impractical,concavity) then $K = 2.25$, the maximum value. A four-pointed star would have similar values. The Fig.C3.7a data should be added below the diamond in Fig.C3.7.

C3.7a Example Problems in Finding Bending Strength

The following should be added after the end of Solution 1 of Example Problem No. 3.

32,750 in-lbs not the predicted bending strength of the member. It is the first approximation. This is because the compression and tension loads (due to the compression and tension stress distributions) are not equal. They must be equal since no applied axial loads are present (see Art.C3.3, second paragraph, second sentence). In this case the stress distributions produce a compression load of 32,780 lbs on the portion above the N.A., but a tension load of only 23,350 lbs on the portion below the N.A. Therefore more calculations are needed assuming the N.A. is farther up from the section's centroid which was assumed to be the N.A. After additional trials, it is found that when the N.A. is assumed to be .42" down from the top, the compression and tension loads are essentially equal, and the allowable bending moment is 31,080 in-lbs.

This applies to all allowable bending moment determinations when the cross-section is not symmetrical (or when the tension and compression stress-strain curves are not assumed to be identical).* This discussion also applies to the solution of Example Problems 3 and 4.

In doing the plastic bending analyses the allowable compressive unit strain is $\epsilon = F_{cc}/E$, and this is at the mean line of the compression flange.

However, a more realistic and larger prediction of the bending strength for members like the above cases is presented in Art.C10.15b. It is based upon experimental data and does not base failure only on the flange allowable stress.

C3.10a Unsymmetrical Section With No Axis of Symmetry

If the procedure in Art C3.10 does not give a positive margin of safety, the more exact procedure outlined in Art. C3.11a should be tried.

C3.11a Alternate More Exact Method for Complex Bending

The steps used in carrying out the more exact procedure suggested in Art. C3.11 are as follows (for an unsymmetrical section with no axis of symmetry) as shown in Fig.C3.27a. Referring to Fig. C3.27a, xx is the axis about which the applied bending moment is given.
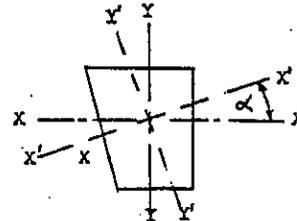

Fig.C3.27a Unsymmetrical Section

1. Assume a neutral axis position, α.

2. Find the allowable plastic bending moment about axis x'x'. This will require several iterations, moving x'x' parallel to itself until the tension and compression loads on the cross-section are essentially equal, as in Art.C3.7a. This gives the allowable bending moment about x'x', $M_{all\ x'x'}$.

3. Find the moment of the stresses in (2) about axis y'y'. This gives the corresponding allowable moment about y'y', $M_{all\ y'y'}$.

4. Resolve the moments $M_{all\ x'x'}$ and $M_{all\ y'y'}$ into moments about axes xx and yy to get $M_{all\ xx}$ and $M_{all\ yy}$.

$$M_{all\ xx} = M_{all\ x'x'}\cos\alpha + M_{all\ y'y'}\sin\alpha.$$

$$M_{all\ yy} = M_{all\ x'x'}\sin\alpha + M_{all\ y'y'}\cos\alpha.$$

Fig.C3.7a
Concave Diamond   2.00 to 2.25

* Also see Art.C3.3

The left hand rule, shown in Fig.C2. 27b, is used for any set of axes.

5. Plot the point M_{allxx}, M_{allyy} as shown in Fig.C2.27b.

6. Repeat steps (1) - (5) for several other assumed values of (one of which can be $\alpha = 0$) to establish an allowable curve of M_{allxx} vs. M_{allyy} as in Fig.C2.27b. It is only necessary to obtain that portion of the curve (the solid line) wherein the applied moments are acting, as shown by the point m_x and m_y in the figure.

7. Using this plot, for any applied moments, m_{xx} and m_{yy}, the margin of safety can be determined as

$$M.S. = ob/oa - 1.0$$

or,

$$M.S. = ob'/oa' - 1.0$$
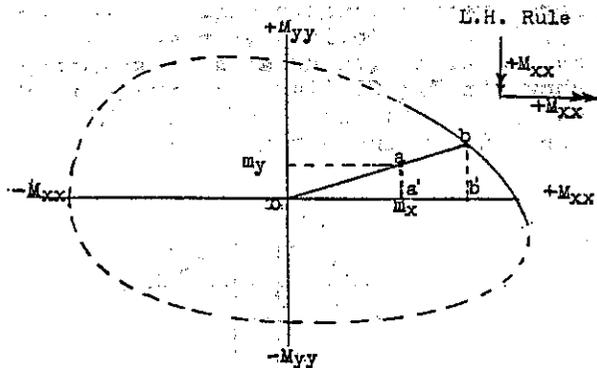
M.S. = ob/oa - 1 = ob'/oa' - 1

Fig. C3.27b M.S. for Unsymmetrical Sections

C3.12a Flexural Shear Stress in the Plastic Range

In Art.C3.2 it was stated that in the plastic range the equation for the shear stress is CVQ/It. In the elastic region $C = 1.0$, but with plastic bending it is larger than 1.0 in the neutral axis region and less than 1.0 near the outer fibers. The procedure in Art.C3. 12 for calculating C is an approximate one. This is because flexural shear is $\Delta M/\Delta X$, and when M changes in the plastic region f_m and f_o also change, which the Art.C3.12 procedure does not consider. Following is the more exact procedure.

For a given bending moment at a given beam station one determines the corresponding values of f_m and f_o by successive trials as previously shown (f_b is calculated as Mc/I). Or, for a symmetrical section one calculates $f_b = Mc/I$ and then assumes a strain, ϵ, obtains f_m and

f_o and calculates $f_b = f_m + (K - 1)f_o$. This is repeated until the value of f_b equals that calculated as Mc/I. The proper values of f_m, f_o, f_b and ϵ are then known for the applied bending moment, M.

Then, at the point f_m and ϵ on the f_m curve one draws a straight line which is tangent to the curve and which intersects the ordinate, calling the value of f_m at the ordinate f_m'. This is repeated using f_o and the f_o curve calling the value of f_o at the ordinate f_o'. This procedure is illustrated in Fig.C3.28c.
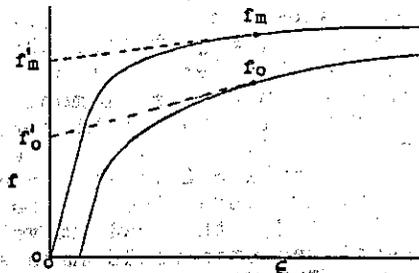

Fig. C3.28c Determining f_m' and f_o'

The corresponding value of f_b' is then calculated using f_m' and f_o' in the previous formula. One then calculates

$$\Delta f_m = f_m - f_m', \quad \Delta f_o = f_o - f_o' \quad \text{and} \quad \Delta f_b = f_b - f_b'$$

Fig.C3.28d illustrates all of the above stresses (along with Fig.C3.28e).
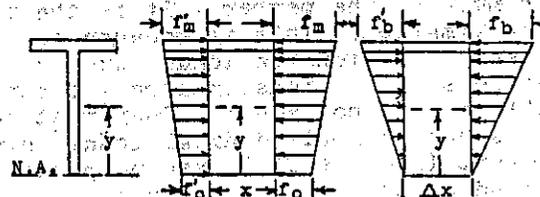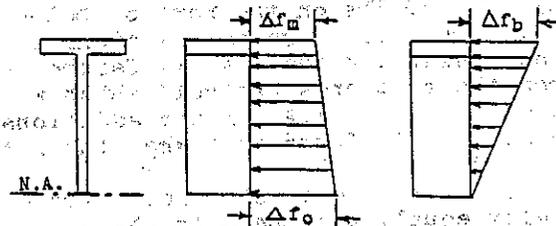

Fig. C3.28d Plastic and Linear Stresses

Fig. C3.28e Net Plastic and Linear Stresses

One then calculates the axial load on the section (on one side of the N.A.) due to the Δf_m and Δf_o stress distributions, calling this load P_a and repeats this using the Δf_b and $\Delta f_b'$ stress distribution, calling this load P_b. C is then calculated as

$$C = P_a/P_b$$

Example Problem

Using the data from Example Problem 2 on p.C3.10 and its associated curves in Fig.C3.19, calculate the shear stress at the N.A. given in Fig.C3.28 and also at the intersection of the web and flange.

Per the example f_m = 35,800, f_o = 19700 and ϵ = .0222. Constructing the straight lines tangent to the f_m and f_o curves at ϵ = .0222, these intersect the ordinate at f'_m = 23,000 and f'_o = 13,000. f_b = 39150 (p. C3.10) and

$$f'_b = 23000 + (1.17 - 1)(13000) = 25,210$$

Using the above stresses as previously discussed,

$$\Delta f_m = 35,800 - 23,000 = 12,800$$
$$\Delta f_o = 19,700 - 13,000 = 6,700$$
$$\Delta f_b = 39,150 - 25,210 = 13,940$$

These are used as in Fig.C3.28d to calculate the axial loads. At the N.A.,

$$P_a = 1.375(.125)(12,800 + 11,930)/2 + .875 (.125)(11,930 + 6,700)/2$$
$$= 3,143$$

$$P_b = 1.375(.125)(13,940 + 12,198)/2 + .875(.125)(12,198 + 0)/2$$
$$= 2,913$$

Therefore, C = 3,143/2,913 = __1.08__

This is slightly smaller than the 1.09 value obtained using the approximate procedure (p.C3.11). However, for other sections and other materials C is frequently much larger than when the approximate procedure is used.

At the web to flange intersection,

$$P_a = 1.375(.125)(12,800 + 11,930) = 2,125$$

$$P_b = 1.375(.125)(13,940 + 12,198) = 2,246$$

Therefore, C = 2,125/2,246 = __.946__

C3.15 Yield Stress Bending Modulus

At limit load there must be no detrimental yielding (Art.C1.14) which generally means limiting the applied stress to the yield stress, F_{ty} or F_{cy}, determined as shown in Fig.B1.1. This allows the use of a yield bending modulus, F_{by}, which will be slightly larger than the yield stress. For the materials listed in Table C3.2 F_{by} can be calculated as

$$F_{by} = f_m + f_o(K - 1)$$

where f_m and f_o are the values listed in the table under "Yield". These are the values at the unit strain, ϵ, corresponding to the yield stress on a f_m and f_o vs ϵ plot.

For a material not included in Table C3.2 (or not in any other similar available tables) the basic f_m and f_o vs ϵ curves are needed. F_{by} can then be determined by locating the values of F_{ty} or F_{cy} on the f_m curve and dropping vertically from this point to obtain the corresponding value of f_o on the f_o curve. F_{by} is then calculated as previously shown using these f_m and f_o values (f_m here is the yield stress, F_{ty} or F_{cy}).

C3.16 Residual Stresses Following Plastic Bending

When a beam is loaded so that the bending stresses are in the plastic range and the applied loads are then removed, there will remain a residual stress and a residual strain in the beam. This will be largest at the extreme fibers. Those fibers which were loaded in compression will have a tensile residual stress, and vice-versa for those which were loaded in tension. The residual stresses can be of importance when doing fatigue or fracture analyses and can be determined as follows

It is necessary to have a "K-curve" where K is the shape factor (2Qc/I) for the cross-section being analyzed. For such a curve see Fig.C2.19 where the curve for K = 1.17 is shown. It is also necessary to have the f_m (stress-strain) and f_o curves. The K-curve is generated as follows for any selected value of K.

1. Select a unit strain value, ϵ.

2. Obtain the f_m and f_o values at the selected ϵ.

3. For the selected K value calculate the bending modulus at this strain as ss

$$F_b = f_m + f_o(K - 1)$$

4. Repeat steps (1) - (3) for each of several values of ϵ.

5. Plot the points F_b, ϵ, draw a curve through them and label it K = (selected value). This is shown in Fig.C.29 (the f_m curve is for K = 1.0).

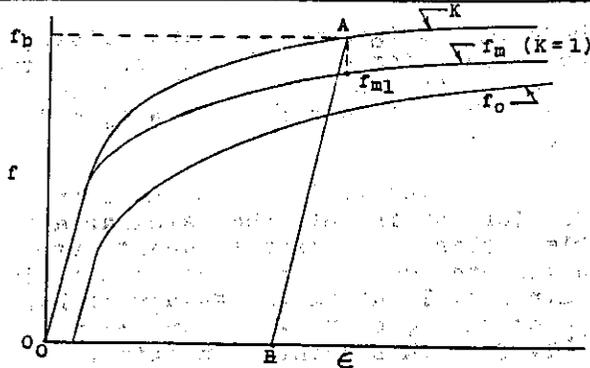For this K-curve the residual stress and strain in the outer fibers can then be determined as follows.

Fig.C3.29 Determination of Residual Stress

Symmetrical Cross-Sections

Referring to Fig.C3.29, calculate the bending stress $f_b = Mc/I$, enter the figure with f_b and go across to the K-curve establishing the point A. Draw the straight line AB parallel to the linear portion of the stress-strain curve and establish the point B. Then go down from point A to establish f_{m1} on the stress-strain curve. The residual stress is

$$f_{res} = f_{m1} - f_b$$

The residual strain, ϵ_{res}, is that at point B. These are the outer fiber values, the largest values. The same procedure would establish the smaller values at any inner fiber.

Unsymmetrical Cross-Sections

Referring to Fig.(b) of Art.C3.7, more effort is required since the neutral axis is not the centroidal axis, and a successive trials procedure is therefore needed, as follows.

1. Assume an outer fiber strain, ϵ_1, for the portion with the most depth from the centroid, y. ϵ_2 is then known for the other portion as shown in the Fig.

2. Proceed as discussed for Example Problem 3 in Art.C3.7 and also in Art.C3.7a to determine $M = m_1 + m_2$ (finding the correct neutral axis). This requires successive trials.

3. Repeat steps (1) and (2) for each of several other assumed values of ϵ_1 so that a curve of M vs ϵ_1 can be drawn.

4. Enter this curve with the applied moment and obtain the corresponding value of ϵ_1. ϵ_2 will then also be known (step 1).

5. Enter the appropriate plastic bending curve with ϵ_1, go vertically to intersect the applicable K-curve to estab-

lish point A. Then, in the same manner as for the symmetrical section, draw the line AB and determine the residual outer fiber stress and strain for portion 1 of the cross-section. Then repeat step (5) using ϵ_2 for portion 2 of the cross-section.

C3.18 Beam-Column Analyses

This article presents the procedure for doing the stress analyses for uniform and also varying section members.

Uniform Single-Span Members

For uniform single-span members numerous formulas for the bending moments along the span are presented in Tables A5.1 and A5.1a. For any case not available there (or by superposition of those cases), the bending moments can always be calculated by using the tabular procedure presented later for beam-columns of non-uniform spans. Allowable stresses and margins of safety are discussed later.

Multispan Members of Uniform Spans

For multispan members where the spans are uniform but EI may vary from span to span, the moment distribution procedure with axial load is used, as illustrated in Art.A11.14, to obtain the bending moments at the ends of each continuous span. The bending moments within any span are then obtained by using these bending moments as applied loads (e.g., Case II, Table A5.10) together with any applicable load case (e.g., Case III, V etc.), using superposition of the results (for the same axial load).

Varying-Section Single-Span Members

When EI varies along the span the formulas for uniform members in Table A5.1 and A5.1a cannot be used. In such cases a numerical procedure is required to determine the moments within the span. This is done by using the same tables of calculation as for varying-section columns in Art.C2.6b (Tables C2.5, C2.8, and C2.10), except that the bending moments, M, along the span due to the applied loads are used in Col.(2) of the first table of calculations. At this point the reader should review Art.2.6b as to how the tables and data are used there.

For the beam-column the difference is that instead of using an assumed shape for the first table one enters in Col.(2) the bending moment at each station due to the applied lateral loads and any end mo-

ments. These bending moments are deter-
mined assuming simply supported ends even
though end fixity may actually be present
The procedure is as follows and applies
for each type of table.

1. Calculate the bending moment at each
   station assuming simply supported ends
   and enter these moments in Col.(2) of
   the first table, calling them M_Q since
   they are for the applied lateral loads

2. Complete the table (as discussed in
   Art.C2.6b) but eliminate the last col-
   umn for P_{cr}.

3. Multiply the true deflection at each
   station by the axial load, P, and en-
   ter this moment in Col. (2) of the
   next table, Table I, reversing the
   sign (because of the sign convention)

4. Carry out another table of calcul-
   ations, Table II, as in (2) and (3).

5. Repeat again, Table III, etc.

After several tables are completed the
final bending moment at each station, n,
can be computed as[*]

$$M_n = M_Q + M_I + M_{II} + \cdots M_N/(1-M_{N+1}/M_N)$$

This is a geometric series where the sub-
scripts refer to the calculated table, Q
being the first and N being the last.
The value of M is taken from Col. (2) of
each table, and M_{N+1} is obtained by mul-
tiplying the true deflection in the last
calculated table, N, by the axial load.
Usually three or four tables are adequate
Unless the axial load is quite large the
deflections decrease fairly rapidly in
the successive tables (if P is greater
than P_{cr} the deflections will increase
and are meaningless). If the axial
stress, P/A, on any segment is greater
than the proportional limit stress the
tangent modulus, E_t (not E_{eff}) must be
used. The geometric series converges
only if $P < P_{cr}$ as a column.

The procedure is illustrated for a
simply supported member in the following
example. For members with end fixity the
procedure is the same except that the
table will be longer.[**]

Example Problem

The member in Fig.C3.32 is a beam-
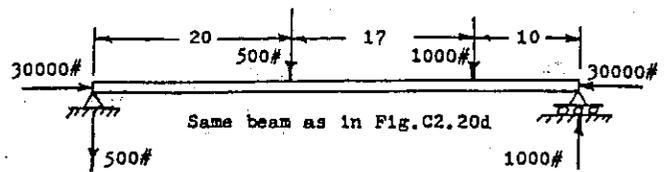column subject to the applied loads as
shown.

Fig.C3.32 Beam-Column

The bending moments at the six beam sta-
tions, 0 - 5, are, from statics

$M_0 = 0$ $M_2 = 9,400$ $M_4 = 9,400$

$M_1 = 4,700$ $M_3 = 10,000$ $M_5 = 0$

These values are entered in Col. (2) of
Table C3.3 and the table is completed as
shown. Note that this table is of the
same form as Table C2.5 (Art.C2.6b) ex-
cept that the above moments are in Col.
(2) and Col. (10) is eliminated. The de-
flections in Col.(9) are then multi-
plied by the axial load, 30,000 lbs, and
these moments are entered in Col.(2) of
Table C3.4, reversing the sign, and that
table is completed as shown.

Table C3.3 Beam-Column Numerical Analysis, First Table

① Sta	② M_Q	③ EI	④ $\frac{M}{EI}$	⑤ Eq. Conc. El. Loads	⑥ Mom of Loads	⑦ Unit Slope	⑧ Unit Defl.	⑨ True Defl.
n	Data	Data x10⁷	-②/③ x10⁷	④ in Eqs. x10⁷	⑤ x 1 x10⁷	$R_L-\Sigma$⑤n x10⁷	Σ⑦n x10⁷	⑧ x s²/12 in.
0	0	.40	0	- 1.21	0		0	0
						-17.17		
1	4700	.92	- .511	- 5.77	- 5.77		-17.17	-.126
						-11.40		
2	9400	1.43	- .657	- 7.82	-15.64		-28.57	-.210
						- 3.58		
3	10000	1.36	- .735	- 9.89	-29.67		-32.15	-.237
						6.31		
4	9400	.50	-1.880	-19.54	-78.16		-25.84	-.190
						25.85		
5	0	.50	0	- 5.27	-26.35		0	0

See Table C2.5 for calculation notes and procedures. (Art.C2.6b)

Table C3.4 Beam-Column Numerical Analysis, Second Table

① Sta	② M_P	③ EI	④ $\frac{M}{EI}$	⑤ Eq. Conc. El. Loads	⑥ Mom of Loads	⑦ Unit Slope	⑧ Unit Defl.	⑨ True Defl.
n	$-PT_Q$	Data x10⁷	-②/③ x10⁷	④ in Eqs. x10⁷	⑤ x 1 x10⁷	$R_L-\Sigma$⑤n x10⁷	Σ⑦n x10⁷	⑧ x s²/12 in.
0	0	.40	0	- 1.01	0		0	0
						-11.95		
1	3780	.92	- .411	- 4.55	- 4.55		-11.95	-.088
						- 7.40		
2	6300	1.43	- .441	- 5.34	-10.68		-19.35	-.142
						- 2.06		
3	7110	1.36	- .523	- 6.81	-20.43		-21.41	-.158
						4.75		
4	5700	.50	-1.140	-11.92	-42.68		-16.66	-.123
						16.67		
5	0	.50	0	- 3.16	-15.80		0	0

See Table C2.5 for calculation notes and procedures (Art.C2.6b)

Two more tables were completed and the
results for all four tables are summar-
ized in Table C3.5, showing only the va-
lues of M and true deflection for each
station.

Table C3.5 Results of Tabular Calculations

Sta	Table Q		Table I		Table II		Table III	
	M_Q	Defl.	M_I	Defl.	M_{II}	Defl.	M_{III}	Defl.
0	0	0	0	0	0	0	0	0
1	4700	-.126	3780	-.088	2640	-.059	1770	-.040
2	9400	-.210	6300	-.142	4260	-.095	2850	-.063
3	10000	-.237	7110	-.158	4740	-.105	3150	-.070
4	9400	-.190	5700	-.123	3690	-.081	2430	-.053
5	0	0	0	0	0	0	0	0

The final bending moments at each
station are calculated using the geomet-
ric series, as shown in Table C3.6.
Col.(10) shows the calculation of P_{cr},
discussed later.

Table C3.6 Determination of Final Moments and P_{cr}

Sta	M_Q	M_I	M_{II}	M_{III}	M_{IV}*	M_{final}**	$P_{cr} = P(M_{III}/M_{IV})$
0	0	0	0	0	0		
1	4700	3780	2640	1770	1200	16617	44300
2	9400	6300	4260	2850	1890	28417	45300
3	10000	7110	4740	3150	2100	31309	45000
4	9400	5700	3690	2430	1590	25875	45700
5	0	0	0	0	0	0	--

* See text   ** See text   Average $P_{cr} = 45075$

End Fixity

If one or both ends are fixed the
same procedure is used with the longer
calculation tables, like Table C2.8 and
C2.10*

Critical Axial Load

The critical axial load for a beam-
column is the same load as if it were a
column (no bending moments). The maximum
allowable axial load for a beam-column is
less than the critical load since earlier
failure will occur by bending due to the
applied lateral loads or moments. The
critical load for the above member is
45000 lbs and the axial load is 30000. If
it were larger the bending moments would
increase, and as it approached the criti-
cal load the moments would approach infin-
ity. Of course, bending failure would oc-
cur before this could occur.

Calculating P_{cr} from Beam-Column Data

The data in the beam-column calcu-
lation tables can also be used to easily
and quickly calculate P_{cr} as follows. At
any station

$$P_{cr} = P(M_N/M_{N+1})$$

where N is from the last calculation Table
and M_{N+1} is as discussed before. For the
above example P_{cr} is calculated in the
last column of Table C3.6 and is, for ex-
ample, at station 2

$$P_{cr} = 30,000(2850/1890) = 45,300 \text{ lbs}$$

---
* Which can also be used to calculate the SF, COP and FEM's as
illustrated in the book of Art.A18.27a

Note that the small range in P_{cr} values
is similar to that in Table C2.7. The
formula for P_{cr} is discussed in Ref.3
(Art.A18.27a) and applies only when all
segments of the member have the same
value of E (i.e., in the elastic range),
for P/A).

Salvaging Tabular Calculations for Changes in the Applied Loads.

The results of the tabular calcu-
lations can be used for changes in ap-
plied loads as long as two conditions
are met.

1. E is the same for all segments (P/A
   is in the elastic range).

2. All lateral loads change by the same
   factor.

This can save much effort by not having
to repeat the tabular calculations. The
procedure is as follows.

1. Let the final moments from the tabular
   calculations be

$$M_Q, M_I, M_{II}, \cdots M_N$$

2. Let the factor for the change in (all)
   lateral loads be L

3. Let the factor for the change in the
   axial load be K

4. The new bending moments along the span
   at each station will then be

$$M'_Q = LM_Q \quad M'_{II} = LK^2M_{II} \quad M'_{IV} = LK^4M_{IV}$$
$$M'_I = LKM_I \quad M'_{III} = LK^3M_{III}$$

Or, for any Table, n, starting with Q
as n = 0

$$M'_n = LK^nM_n$$

These are used to determine the new
final bending moments (i.e., by re-
replacing the values in Table C3.6).

Example Problem

Repeat the previous example problem
if P is increased to be 39,000 lbs and
the lateral loads are increased by a fac-
tor of 1.2. For this case L = 1.2 and
K = 39000/30000 = 1.3.

Applying these factors in the spec-
ified manner to the bending moments in
Table C3.6, the new final bending moments
become the much larger values shown in
Table C3.7. Note that although the ap-
plied loads have been increased by an

Table C3.7 Bending Moments Due to Increased Applied Loads

Sta	M_Q	M_I	M_{II}	M_{III}	M_{IV}	M_{final}	P_{cr}
0	0	0	0	0	0	0	
1	5640	5897	5354	4666	4113	25670	Same
2	11280	9828	8639	7514	6478	43739	as in
3	12000	11092	9613	8305	7197	48207	Table C3.6
4	11280	8892	7483	6406	5449	39510	
5	0	0	0	0	0	0	–

average factor of only 1.25, the bending moments for those four stations affected by the axial loads have increased by a much larger average factor of 1.61.

Beam-Columns Having an Initial Bent Shape

Sometimes for various reasons a beam-column may not be "straight" even before any loads are applied. For uniform members, for which various formulas apply as in Table A5.1 and A5.1a, the member should simply be considered to be straight and a lateral loading applied which produces the same bending moment along the span (assuming simple supported ends) as does the axial load times the bent shape deflections at the stations. This is in addition to any actual lateral loading. Proper signs must be observed in doing this. That is, downward (-) deflections result in a positive bending moment. Fig.C3.33 illustrates the procedure. A single bend is shown in (a), a reversed bending in (b) and a smooth continuous bend in (c). The "equivalent" loads for a straight beam are shown beneath each of these. That in (c) is a good approximation. Thus, the loads consist of the equivalent loads and the applied loads, and the formulas of Tables A5.1 and A5.1a apply.*

For the case of a varying section member it is best to complete the first table (for the lateral applied loads). Then the bent shape deflections at each station are added (+ or -) to the true deflections calculated and their totals are multiplied by P to obtain the bending moments for Col.(2) of the second table. This is done only once, for the second table. Additional tables are completed in the routine manner.

Approximate Formula for Bending Moments

When there are no end moments the following formula can be used to estimate the bending moments along the span for a uniform, simply supported beam-column. At any station

$$M_{final} = M_Q/(1 - P/P_{cr})$$

P_{cr} is the critical load if the member were a column. If F_{cr} ($=P_{cr}/A$) is in the

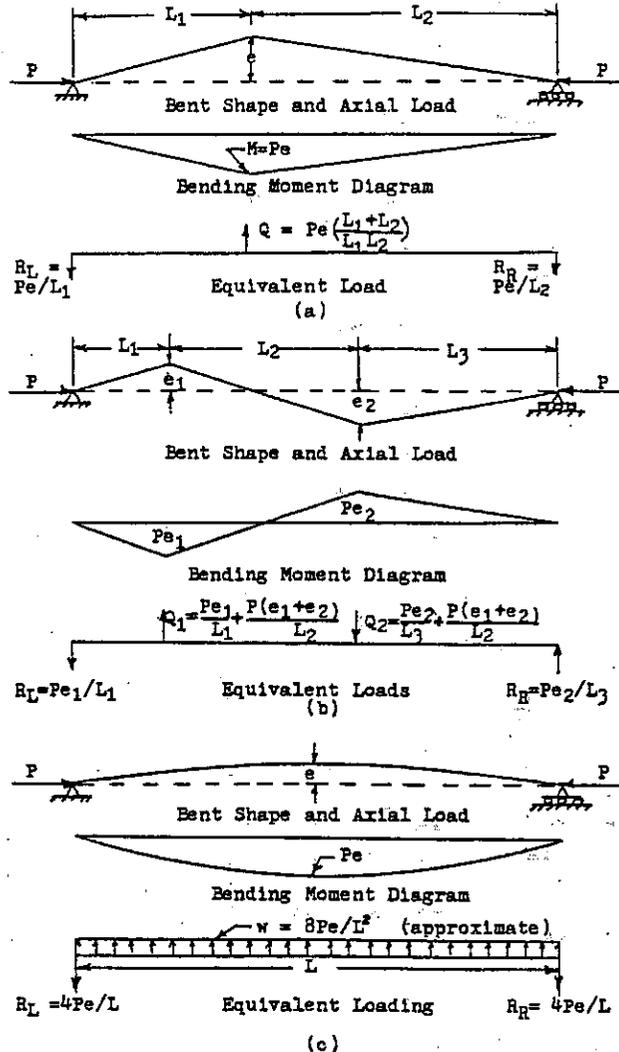* Since there is no actual transverse loading $M_Q = 0$, so $y_{final} = -M_{final}/P$ at any station.

Fig.C3.33 Bent Shapes and Equivalent Loads

plastic range E_t is applicable (but not E_{eff}), hence a column curve can be used, but not one having any crippling adjustment. M_Q is the moment due to the lateral loads only. The formula is most accurate for a uniformly distributed load and least accurate* for a concentrated load.

The formula can also be used when the axial load is tension, adjusted as shown.

$$M_{final} = M_Q/(1 + P/P_{cr})$$

A tensile axial load reduces the moments.

Other Beam-Column Considerations

There are numerous other considerations which affect the bending moments generated in a beam-column. These are discussed in detail with example problems in Ref.3 (Art.A18.27a) and include the following topics.

* But conservative

1. Axial loads within a span

2. Elastic (rotational) end fixity

3. Members with internal (flexible) splices

4. Multispan beam-columns with ends spliced together, affecting fixed end moments, carry over and stiffness factors

5. Multispan beam-columns having varying EI spans require numerical evaluation of fixed end moments, carry over and stiffness factors

6. Multispan beam-columns on elastic supports and on sagging supports

7. Free-ended beam-columns

8. Beams in tension having a varying EI; the tabular procedure can be used but requires modifications

Allowable Loads or Stresses and Margins of Safety

Following are two different procedures for calculating the margin of safety for a beam-column. For a given case the larger of the two should be used.

1. The following interaction equation (from tests of circular tubes) is

$$P/P_{cr} + M/M_{ult} = 1.0$$

where P is the axial load, P_{cr} is the buckling load as a column, M is the final beam-column bending moment and M_{ult} is the allowable bending moment per Art.C4.17, C3.4 or C10.15b. The apparent M.S. (Art.C1.13a) is then

$$M.S. = 1/(P/P_{cr} + M/M_{ult}) - 1.0$$

2. An alternate procedure is

$$M.S. = F_c/(P/A + Mc/I) - 1.0$$

where P and M are as above, F_c is the outer fiber allowable compressive stress, determined as follows, and A is the cross-sectional area

a) If the beam section shape factor, K, is 1.1 or less then F_c is the proportional limit stress* or that in (d) if smaller

b) If K is 1.5 or more then F_c is F_{cy}

c) If K is between 1.1 and 1.5 then F_c

* The prop. limit stress can be found as where $F_o/F_{0.7}$ for the n curve is tangent to the n -curve in Fig.C2.17a

is determined by interpolating linearly between (a) and b) above.

d) If the section has a local buckling stress (Art.C5.4, C5.5 and C6.4) less than in (a) - (c) then F_c is the outer fiber stress corresponding to the local buckling stress at the flange's meanline, and see p.48 foot note.

e) For cases where no permanent set is allowed at some particular load level, such as at proof load for actuators, F_c is the proportional limit stress.* Method 1 above is not applicable for this case.

The margins of safety as calculated above are apparent ones. The true M.S. is calculated per Art.C4.23a and C1.13a.

C4.20a Torsional Modulus of Rupture Curves

Art.C4.20 discussed torsion stresses for only the case of circular cross-sections. For other cross-sections plastic torsion and a torsional modulus of rupture also occur for ductile materials. Following are methods for determining the ultimate strength in torsion for such members. The formulas, data and discussions in Art.A6.4 through A6.7 and in Table A6.3 apply only when the shear stress is in the elastic range.

Torsion in the plastic range is discussed in Ref.4 and 5. For non-circular cross-sections the ultimate torsional strength is proportional to the volume of dry sand (or table salt) that can be heaped upon the cross-section. If the cross-section has holes a special technique is required, as discussed later.

This volume of sand can be calculated for only three types of cross-sections, a rectangle, a circle and a triangle, as shown in Fig.C4.31.
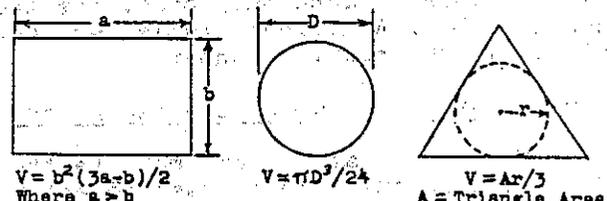

$V = b^2(3a-b)/2$
Where $a \geq b$

$V = \pi D^3/24$

$V = Ar/3$
A = Triangle Area

Fig. C4.31 Plastic Torsion Data

The equation for calculating the ultimate torsional strength, T_{ult}, when no local buckling can occur, as with very thin tubes etc, is

$$T_{ult} = 2VF_{rs}$$

where F_{rs} is a reference stress which can be taken as F_{su} for the material or calculated per Table C4.9.   V is the sand heap volume in cu. in.

For other cross-sections without holes a cardboard template of the actual cross-section is made and sand is slowly poured onto the template until any additional sand runs off. The sand is then weighed and the volume is calculated as V = weight/weight per cu in of the sand. Having V, T_{ult} can then be calculated per the formula.

If the cross-section has holes the following is done to determine V. Snug fitting thin right cylinders made from thin paper are inserted in the holes, long enough to project above the volume of sand that can be piled on. The sand is then poured on as above, and the paper cylinders slowly pulled downward until their edges become contour lines at at the max. elevation.(a bit of practice is helpful here). That is, none of the side area of the paper cylinders will be exposed. The weight of the heaped sand is then determined. To this weight of of sand must be added the weight of sand required to fill the cylinders from the template up to their tips. The sand volume can then be calculated as discussed previously and T_{ult} is then calculated. It is generally unconservative to determine V simply by deducting from the strength of the cross-section without its holes the strength of solid sections having the cross-section of the holes, but this is sometimes done for rough preliminary estimates.

Instead of using F_{su} for F_{rs} in calculating T_{ult}, F_{rs} can be determined as follows. For the alloys in Fig.C4.17 through C4.30 the torsional modulus of rupture, F_{st} for solid circular cross-sections can be obtained at D/t = 2. Then, since $T_{ult}= 2VF_{rs}$, $F_{st} = T_{ult}R/J$, $J = \pi R^4/2$ and $V = \pi D^3/24$ one can solve for F_{rs} as a function of F_{st}. By algebraic manipulation

$$F_{rs} = .75F_{st}$$

Table C4.9 shows the values of F_{st}, F_{rs}, and F_{su} for several alloys from the Figures shown. F_{su} is from MIL-HDBK-5.

Table C4.9   Comparison of F_{rs} and F_{su}

Figure	Alloy	F_{st}	$F_{rs} = .75F_{st}$	F_{su}
C4.17	95 ksi Steel	71.4	53.5	55.0
C4.20	180 ksi Steel	142.5	106.9	109.0
C4.30	7075-T6 Forging	58.7	44.0	45.0
C4.28	6061-T6 Tubing	34.8	26.1	27.0
C4.27	2024-T4 Tubing	49.3	37.0	37.0

The values of F_{st} were obtained from Art. C4.20. They could also be gotten by doing torsion failure tests of rods having a circular cross-section.

C4.23a Illustrative Problems Involving Combined Bending and Compression

In Art.C4.22 Equation C4.14 does not give the true margin, but rather an apparent one (see Art.1.13a). Therefore, in Art.C4.23 the calculated M.S. of .09 is not the true margin which will be closer to zero (but not negative). To find the true M.S. one must find, by successive trials, the common factor by which all applied loads must be multiplied so that the calculated M.S. is zero. Calling this factor F, the true margin is F - 1.0 This applies to any beam-column, or to any other case where the internal loads or stresses do not vary linearly with the applied loads.

C5.7a Buckling of Flat Rectangular Plates Under Shear Loads

Add the following to Art.C5.7.

The use of the secant modulus for shear buckling stresses in the plastic range has no theoretical basis; it simply happens to match experimental results.

It is helpful to redefine the shear buckling coefficient as $K_s = k_s\pi^2/12(1-\nu^2)$ Then Eq.(5) becomes

$$\tau_{cr} = K_sE(t/b)^2 \text{ or } \tau_{cr} = E/(b/t\sqrt{K_s})^2$$

The abscissa in Fig.C5.13 will then be either of the above divided by $F_{0.7}$.
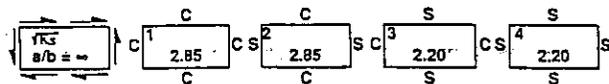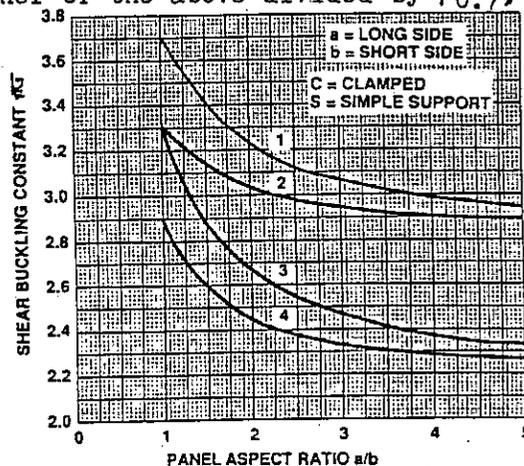

Fig.C5.11a Shear Buckling Coef., $\sqrt{K_s}$

The value of $\sqrt{K_s}$ is given in Fig.C5.11a. Fig. A11. gives F_{scr} ($=\tau_{cr}$) for several common materials and includes the effect of plasticity. Note that "cut-off" lines are used. These are at shear stresses of approximately $.5F_{0.7}$ (or $\approx .5F_{cy}$). This is a fairly common conservative practice.

For other materials Fig.C5.13 can be used entering with $K_s E(t/b)^2/F_{0.7}$ or with $E/(b/t\sqrt{K_s})^2/F_{0.7}$, obtaining $F_{scr}/F_{0.7}$ and calculating $F_{scr} = F_{0.7}(F_{scr}/F_{0.7})$. Since n and $F_{0.7}$ are needed to do this they are obtained from Table B1.1, or for other materials n can be calculated per Art. B1.1 or read from Fig.B1.13 (obtaining $F_{0.7}$ and $F_{0.85}$ from the material's stress strain curve per Fig.B1.12.

C5.8a Buckling of Flat Rectangular Plates Under Bending Loads

Useful data for two cases of plates subject to bending stresses are shown in Fig.5.14a and Fig.5.14b. That in (a) is for all edges simply supported with K_B being the value $k\pi^2 E_c/12(1-\nu^2)$. The buckling stress is calculated as $F_{Bcr} = K_B E_c(t/b)^2$, where E_c is the compressive value of Young's Modulus. If F_{Bcr} is in the plastic range one calculates

$$F_{Bcr}/F_{0.7}$$

enters Fig.C5.8 with this and obtains $F_{cr}/F_{0.7}$. The corrected value of F_{Bcr} is then calculated as $F_{0.7}(F_{cr}/F_{0.7})$. For a/b values less than .30, K_B can be calculated as

$$K_B = \frac{(1+a^2/b^2)(1+4a^2/b^2)(1+9a^2/b^2)(b^2/a^2)}{.0576(1+a^2/b^2)^2 + .04938(1+9a^2/b^2)^2}$$
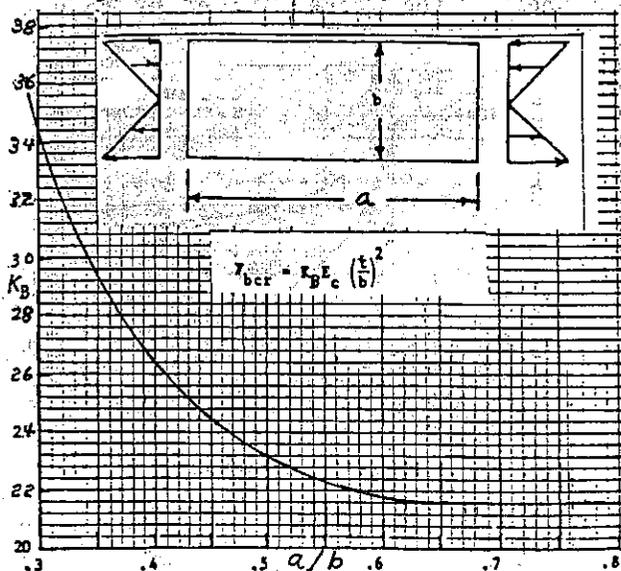
Fig.C5.14a Flat Plate Compression Buckling Coefficient, K_B

Fig.5.14b is for a plate in bending and compression (not tension), with the compression (upper) edge free and the other three edges simply supported. This can also be useful, for example, in estimating the buckling stress for the upstanding free edge of a T-beam in bending with the upper edge in compression. The buckling stress is calculated as

$$F_{c_{cr}} = \left[k\pi^2 E_c/12(1-\nu^2)\right](t/b)^2$$

If F_{cr} is in the plastic range it is corrected as discussed for the previous case Note that the figure shows cases ranging from pure bending to pure compression (b/h = 2 to b/h = 0). For tension and bending b/h > 2 and is not covered by the data in the figure. h is the distance from the free edge to the line of zero stress

It should be noted that for this case the compressive buckling stress depends upon h, or the location of the line of zero stress. Therefore, it depends upon the relative magnitudes of the bending stress and the compressive stress, or upon M and P. So for a given case one must determine f_b and f_c and then find the value of h and b/h in order to enter the figure and obtain k. This is unlike other plate buckling stress which are for only a single stress f_s, f_b or f_c. Two examples will illustrate the procedure.
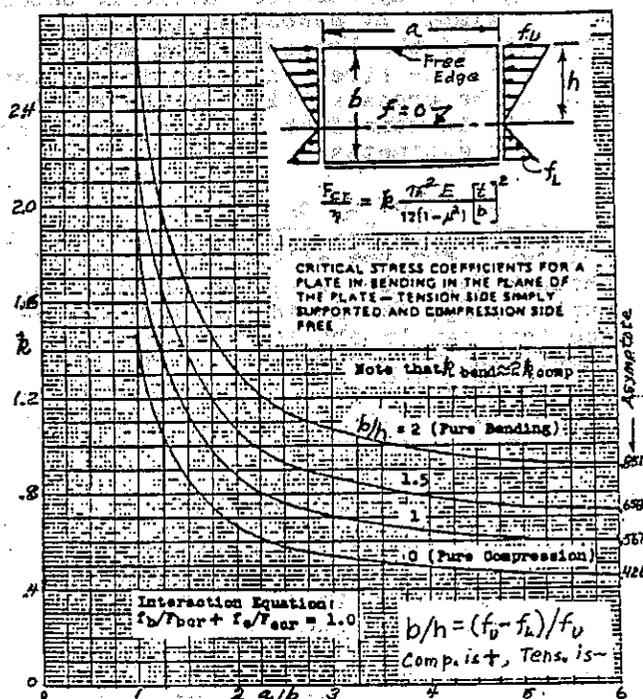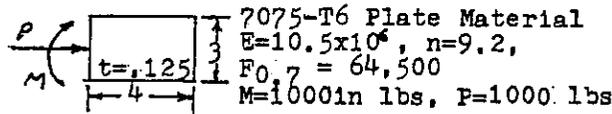

Fig.C5.14b Flat Plate Compression-Bending Buckling Coefficient, k

What is the buckling margin of safety for the plate shown below?

7075-T6 Plate Material
$E = 10.5 \times 10^6$, $n = 9.2$,
$F_{0.7} = 64,500$
$t = .125$
$M = 1000$ in lbs. $P = 1000$ lbs

$A = 3(.125) = .375$, $I = .125(3)/12 = .281$
$f_b = 1000(1.5)/.281 = 5338$;
$f_c = 1000/.375 = 2667$
$f_u = 5338 + 2667 = 8005$ (comp.)
$f_L = 5338 - 2667 = 2671$ (tens.)
$b/h = (8005 + 2671)/8005 = 1.334$
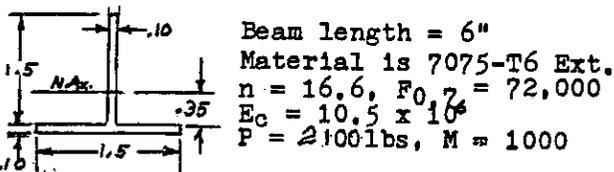$a/b = 1.333$; Per Fig.C5.14b $k = 1.4$

$F_{cr} = 1.4(\pi)^2 (10.5 \times 10^6)(.125/3)^2/12(.89)$
$= 23,584$ (not in plastic range)

Buckling M.S. $= 23,584/8005 - 1 = \underline{1.95}$[*]

Example Problem 2

What is the buckling margin of safety for the upstanding leg of the T-Beam below?

Beam length = 6"
Material is 7075-T6 Ext.
$n = 16.6$, $F_{0.7} = 72,000$
$E_c = 10.5 \times 10^6$
$P = 2100$ lbs, $M = 1000$
$N.Ax.$ $.10$ 1.5 $.35$ 1.5 $.10$

$A = .30$ in, $I = .0763$ in, $c_u = 1.15$ in,
$c_L = .35$ (to bottom of upper leg)

$f_{bu} = 1000(1.15)/.0763 = 15072$ (comp.)
$f_{bL} = 1000(.35)/.0763 = 4587$ (tens.)
$f_c = 2100/.30 = 7000$ (comp.)
$f_u = 22072$ (comp.), $f_L = 2413$ (comp.)

$b/h = (22072 - 2413)/22072 = .89$ (Fig. C5.14b)
$a/b = 6/1.5 = 4$
Per Fig.C5.14b $k = .62$

$F_{cr} = .62(\pi)^2 (10.5 \times 10^6)(.1/1.5)^2/12(.89)$
$= 26,738$ (not in plastic range)

Buckling M.S. $= 26738/22072 - 1 = \underline{.21}$[*]

Had F_{cr} been in the plastic range for this case, Fig.C5.7 would be used.

C7.10a Illustrative Problems in Calculating Crippling Stresses

The previous Methods 1 and 2 show only a uniform thickness for the cross-section and do not discuss how to account for different element thicknesses. One approximate way to do this where angle units are involved is as follows. First, assume the two elements to have the thickness of the thinner leg and compute F_{cc}. Then assume them to have the larger thickness and compute F_{cc}. Then calculate the average of these and con-

sider this to be F_{cc}. However, a recommended Method 3 is provided in Art.C7.30.

C7.30 METHOD 3. For Crippling Stress Calculations

The following Method 3 for predicting crippling stresses is recommended, since it is more representative of what is used in the aerospace industry. It consists of calculating F_{cc} for each element of the cross-section and obtaining the weighted average of these as the crippling stress for the cross-section. The crippling load, P_{cc}, is then calculated as this average F_{cc} times the actual area of the cross-section. This is done in a tabular manner as discussed later.

Crippling Stress of Elements[*]

For any ductile alloy at any temperature the crippling stress for each element of the cross-section is calculated as follows.

a) For one edge free elements

$$F_{cc} = .566 F_{cy}^{.60} E^{.40} /(b/t)^{.80}$$

b) For no edge free elements

$$F_{cc} = 1.425 F_{cy}^{.60} E^{.40} /(b/t)^{.80}$$

The manner in which b is obtained is shown in Fig.C7.37. For clad material the bare thickness and the secondary modulus are used. Also see "cut-off" stress discussion.

Use bare thickness and secondary modulus for clad material to get F_{cc}

When $t_2 > t$
$t_x = t/2$

When $t_2 < t$
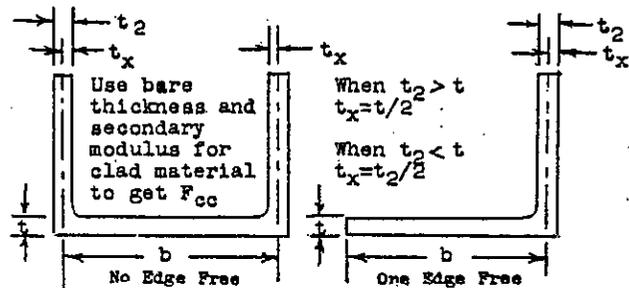$t_x = t_2/2$

No Edge Free   One Edge Free

Fig. C7.37 Crippling Element Geometry

Table C7.2 shows the calculation procedure. The example in the table is for the zee section shown in Fig.C7.38. For this case, 7075-T6 Alc. the applicable properties and other data are shown in

Table C7.2   Crippling Stress and Load Calculations

Element	b	t	b/t	Free Edges	F_{cc}	bt	btF_{cc}
1	.60	.046	13.0	1	34026	.0276	939
2	1.25	.046	27.2	0	47457	.0576	2729
3	.70	.046	15.2	0	62000	.0322	1996
4	.28	.046	6.1	1	62000	.0129	800
						$\Sigma = .1303$	6464

$F_{cc} = 6464/.1303 = \underline{49609}$ psi
$P_{cc} = 49609(.123) = \underline{6102 \text{ lbs}}$

---

[*] For ultimate bending (only) strength see p.48, "U-Sections"

[*] The crippling strength of built-up (attached) members is more than that of the separate members, see Ref.14

the figure.*

7075-T6 Alclad
$E_{secdy} = 9.7 \times 10^6$
$t_{bare} = .046$
Bend Radius = .09
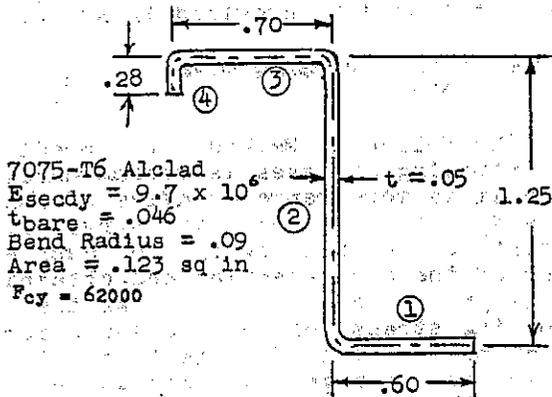Area = .123 sq in
$F_{cy} = 62000$

Fig. C7.38 Crippling Example Geometry

There are other considerations which may be present. These concern the ability of an element to be able to provide simple support for its adjacent element. There are three cases here, as follow.

Bulb Supporting Element

This case is discussed in Art.C7.9, in Fig.C7.10 and in Fig.C7.12, and in Example 10 on p.C7.9. If the bulb is not large enough to do this, a reduced crippling stress can be estimated as illustrated for a short flane (lip), using D_{bulb} instead of b_f, A_{bulb} instead of b_1t_1, F_{cy} for F_{cc} and (D/D_{min}) instead of (b_f/b_{fmin}).

Effect of Short Outstanding Flanges (Lips)

As an outstanding flange is made progressively shorter, it will eventually be unable to provide simple support for its adjacent element. This flange length, b_f, can be determined as follows, referring to Fig.C7.39. The minimum flange length for providing simple support is that which satisfies the following equation.

$$.91(b_f/t_w)^3 - b_f/t_w = 5b_w/t_f$$

where b_w, t_f and t_w are known and b_f can be found by successive trials. Fig.C7.11 applies only when $t_f = t_w$.
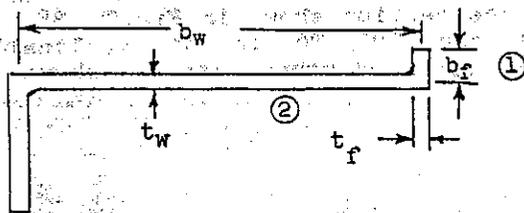
Fig. C7.39 Minimum Flange Geometry

* For joggled flanges see Fig.C.45 (p. B41).

Example Problem

In Fig.C7.39 let $b_w = 1.25$, $t_w = .046$, $t_f = .046$. What is the smallest value of b_f which will provide simple support for element 2?

After several trials when $b_f = .247$ the above equation is satisfied, as

$$140.88 - 5.37 \approx 135.87$$

Hence, .247 is the least value for b_f that will provide simple support for b_w.

Reduction in F_{cc} for Short Flanges

When a flange is too short to provide simple support for its adjacent element, a reduced value for F_{cc} for the two elements (1 and 2 in Fig.C7.39) can be determined as follows.

1) Assume that b_f has the minimum value required and calculate an average F_{cc} for the two elements as follows.
$$F_{cc1} = F_{cc2} = (b_1t_1F_{cc1} + b_2t_2F_{cc2})/(b_1t_1 + b_2t_2)$$

2) Calculate an F_{cc} for element 2 assuming it has one edge free.

3) Using the actual value of b_f, interpolate "cubically" between the F_{cc} values in (1) and (2) above to get the final value for F_{cc1} and F_{cc2}, that is,
$$F_{cc1} = F_{cc2} = (b_f/b_{fmin})^3 (F_{cc(1)} - F_{cc(2)}) + F_{cc(2)}$$

4) Use F_{cc} in (3) for elements 1 and 2 in the table for crippling calculations (i.e., in Table C7.2).

Example Problem

What is the crippling stress and the crippling load for the member in Fig.C7.38 if the length of element 4 is only .15"?

As illustrated previously, the minimum length of element 4 which will provide simple support for element 3 is found to be $b_3 = .205$". Proceeding as outlined and using F_{cc} data from Table C7.2,

1) $F_{cc3} = F_{cc4} = (800 + 1996)/(.0129 + .0322) = 62000$

2) F_{cc3} (for one edge free) = 30026

3) $F_{cc3} = F_{cc4} = (.15/.205)^3 (62000 - 30026) + 30026 = 42552$

4) Using 42552 for elements 3 and 4 in Table C7.2 and .15 for b_4, the reduced values for F_{cc} and P_{cc} are

$$F_{cc} = 42896 \qquad P_{cc} = 5019$$

Outstanding Flanges not Perpendicular to Adjacent Elements*

On occasion a supporting flange must be inclined from the perpendicular direction, as shown in Fig.C7.40.
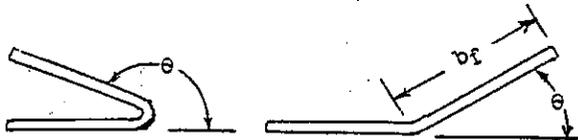

Fig. C7.40 Flanges at Small Angles*

In such cases the "effective" values, b_{eff} and t_{eff}, must be used when checking to see if it has adequate supporting length for its adjacent element, as discussed previously. These are calculated as follows.

$$b_{eff} = b \sin\theta \qquad t_{eff} = t/\sin\theta$$

t_{eff} is then used for t_f in the cubic equation to determine the minimum flange length. If b_{eff} is less than this then b_{eff} is used in step (3) in place of b_f. The actual flange length, b_f, and thickness, t_f, are used to calculate F_{cc} for the two elements in step (1). It is recommended that θ be kept within the range of 20° to 160°. If θ is either quite small or large, the least I will be quite small for an angle section and this will, of course, result in a small buckling load for the member as a column.

Example Problem

Repeat the Table C7.2 example problem assuming that element 4 is at an angle of 25° rather than at 90°.

$$b_{eff} = .28 \sin 25° = .118$$
$$t_{eff} = .046/\sin 25° = .109$$

using .109 for t_f in the cubic equation, after several trials, when b_f is .156 the equation is (essentially) satisfied. Therefore, b_{eff} is not large enough to provide simple support for element 3. Using .118 for b_f in the previous step (3) and the value of .156 for b_{min} gives

* Per NACA WRL 28 (1944) such angles can be considered to be 90° for calculating F_{cc}, so the following procedure is conservative and not necessary for calculating F_{cc}.

$F_{cc3} = F_{cc4} = (.118/.156)^3 (62000-30026) + 30026 = 43864$

This results in $F_{cc} = 43277$ and $P_{cc} = 5323$ for the cross-section.

Large Curved Elements

The previous crippling calculation methods do not include data for cross-sections with large curved elements as in Fig.C7.41.
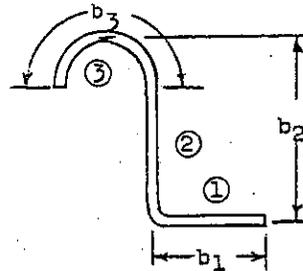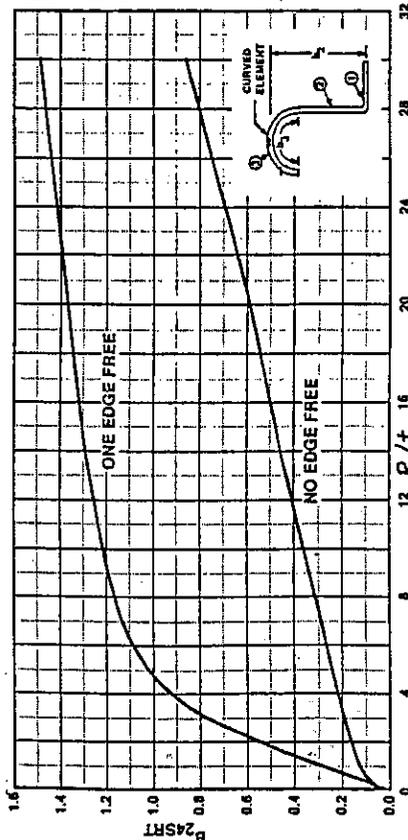

Fig.C7.41 Large Curved Element

Fig.C7.42 provides such data for one edge free and no edge free curved elements. The procedure would be the same as in Table C7.2, but with the following restriction. No elements in the cross-section are allowed to have a crippling stress greater than that of the curved element. That is, the curved element's

To determine F_{cc}:
1. Enter figure with R/t and obtain $B24SRT$
2. Calculate $B = B24SRT\sqrt{F_{0.7}/.00475E_c}$, $F_{0.7}/.00475E_c$
3. Enter Fig.C2.17 with B and obtain $F_c/F_{0.7}$
4. Calculate $F_{cc3} = F_{0.7}(F_c/F_{0.7})$

Fig.C7.42 Calculating F_{cc} for Curved Elements

crippling stress is also a "cut-off", or maximum, crippling stress for all other elements. The reason for this is that tests show that when the large curved element buckles failure of the section will follow almost immediately.

Crippling "Cut-Off" (Maximum) Stresses

In using the formulas for crippling stresses, when b/t is very small the value for F_{cc} becomes unrealistically large exceeding F_{tu} (=F_{cu}) for the material. Therefore, it is necessary to use a realistic maximum or "cut-off" value for F_{cc}. There are three main ways that this has been done in the aerospace industry over the years.

1. $F_{cc_{max}} = F_{cy}$

2. $F_{cc_{max}} = F_{co}$ (per Art.C4.4 and Tables C4.3 and C4.2)

3. $F_{cc_{max}} = F_{tu}$

Using F_{cy} (item 1) is the most conservative, but has probably been used by most aerospace companies and is used in the examples of this Supplement.

These cut-off values are also used for $F_{c_{max}}$ for columns not subject to crippling or local buckling (stable cross-sections), and also for columns subject to torsional buckling, discussed below.

C7.31 Torsional Buckling

Conventional (bending) buckling is a type of general instability which assumes that the buckled shape is due to bending only, as in Fig.C2.2. The buckling stress or load for a uniform column is as defined in equations (3), (5) and (6) of Art.C2.2 for stable cross-section shapes.

There is another type of general instability called "torsional" buckling for which the buckled shape involves twisting although there is no applied twisting moment. Torsional buckling is likely to be critical for members having open type cross-sections with relatively thin walls In addition, it is usually most likely to be critical when the column is relatively short, that is, short and intermediate length column range. It is not a problem for closed cross-sections such as tubes, because of their high resistance to twisting deflections. It is not likely to be critical when the b/t (thinness) of no member of the cross-section is more than about 8.0 (see Fig.C7.43). Examples

of such cross-sections are zees, channels angles, tees, I-sections etc. The buckled shape is either a pure twisting or a combination of twisting and bending about one or two axes, as follows.

1. For a cross-section having two axes of symmetry or point symmetry it is a pure twisting only.

2. For one axis of symmetry it is a combination of twisting and of bending about the axis of symmetry.

3. For no axis of symmetry it is a combination of twisting and of bending about each principal axis.

For case (1) one computes the torsional buckling load and the conventional buckling load about the minor principal axis. The smaller of these is the critical load. For case (2) it is the smaller of the torsional buckling load and the conventional buckling load about the axis of non-symmetry. For case (3) the torsional buckling load is always critical. As the column length increases it will approach the conventional buckling load as calculated about the minor principal axis. Fig.C7.43 and C7.44 show for the cases of an equal leg angle and a channel section how torsional buckling can become critical. Note that as t decreases (and b/t increases) the loss in strength due to torsional buckling can become very large. For "thick" sections it will not be critical (b/t about 8 or less).

The previous discussion is for "free" struts. For restrained struts such as stringers attached to skin (as for wing structures) torsional buckling involves both twisting and bending, and may be less than the conventional buckling load.

Practical methods for calculating the torsional buckling stress of free struts and restrained struts are present- in Ref.14 (see Art.A18.27a).

Ref. 15,16 and 17 also discuss torsional buckling. Ref.15 shows a comparison with test results for the channel shown in Fig.C7.44, case (a). Ref.16 also shows some test results. Ref.17 has data for stringers attached to skins.[*]

Note:
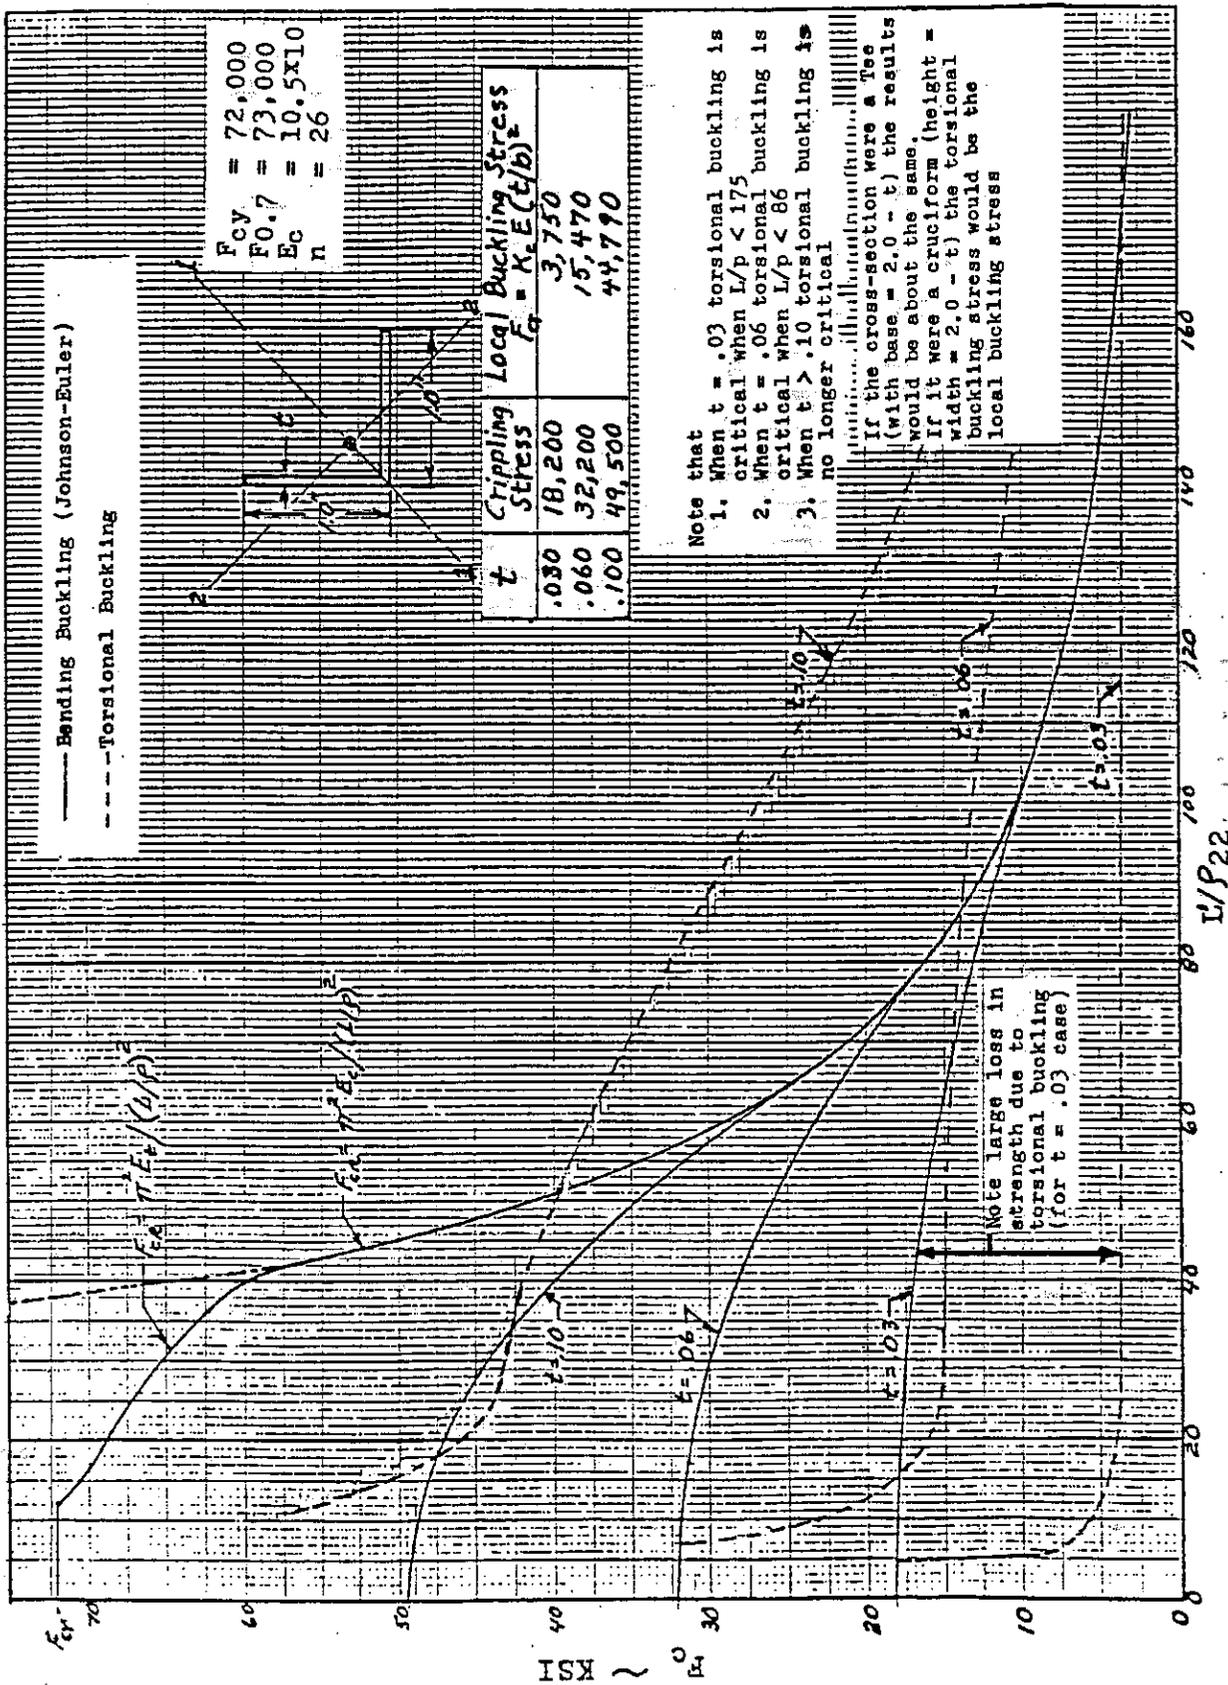Chapter C8 articles are located after Chapter C11 articles.

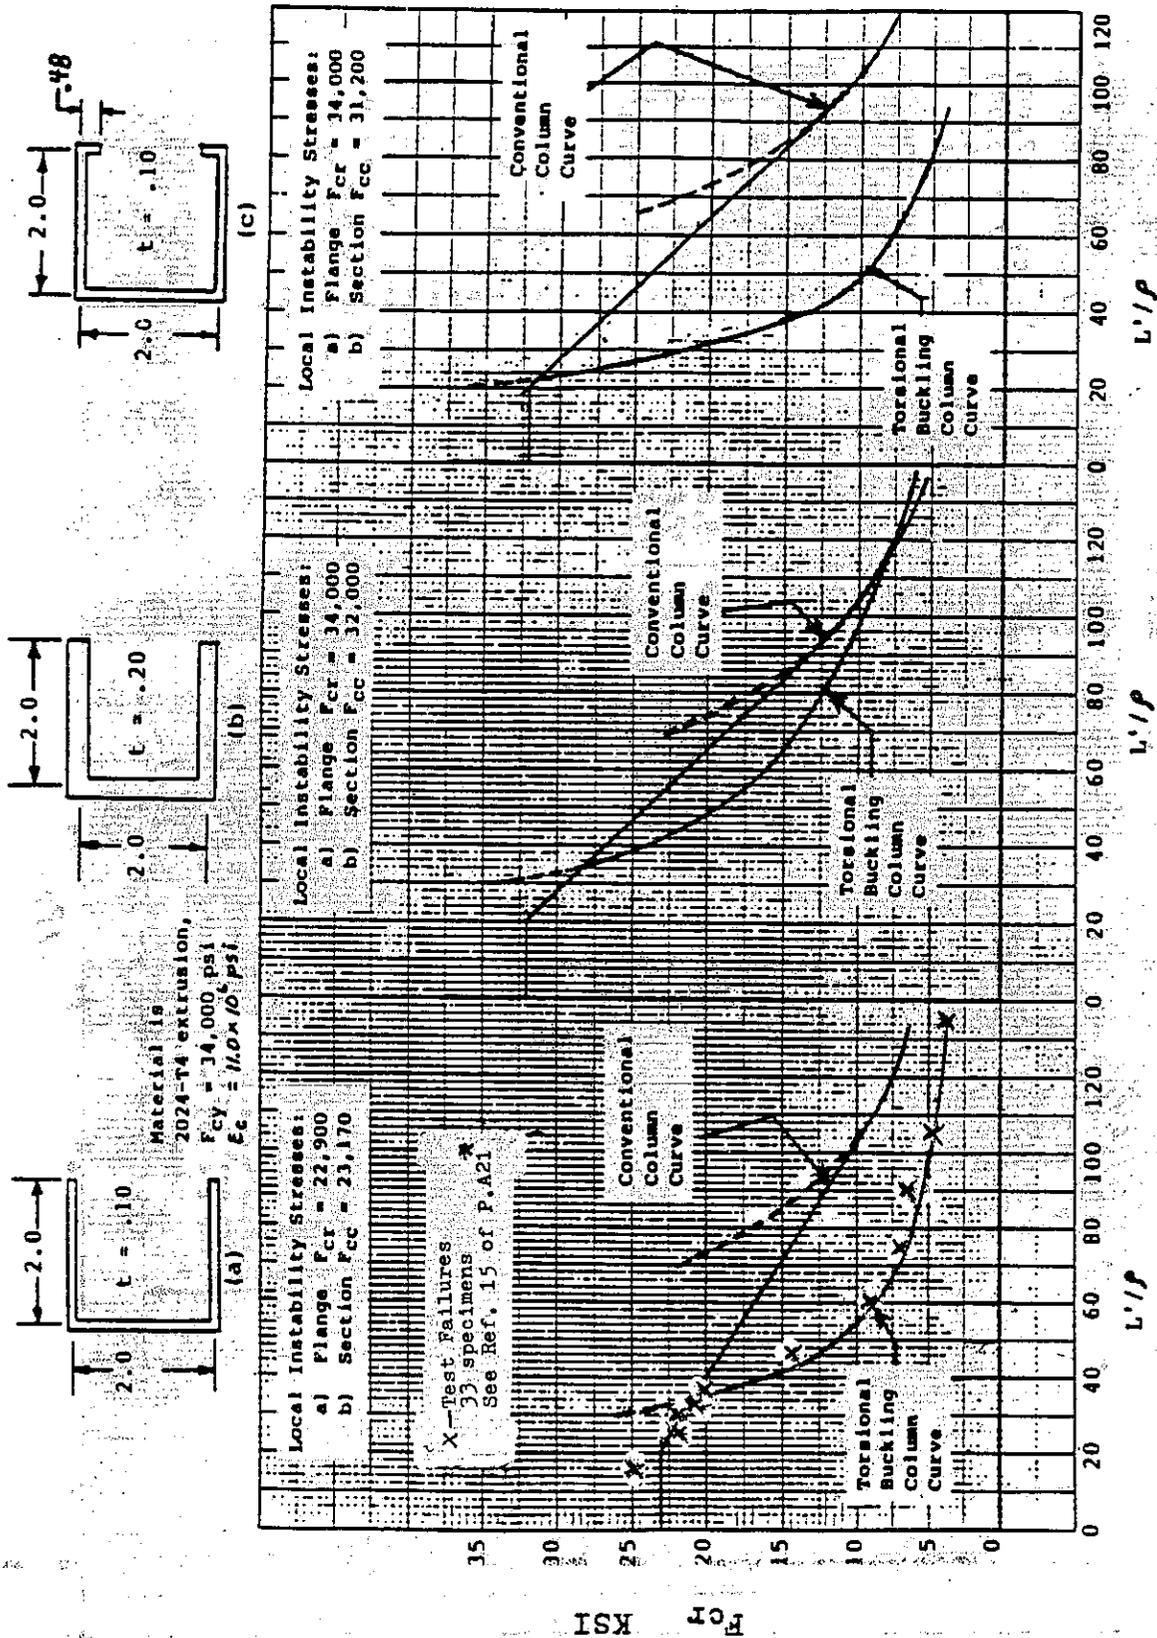Figure C7.43 Buckling of an Equal Leg Angle Column

Figure C7.44 Buckling of Channel Struts

* "Airplane Structures" Vol. 2, 1943
Niles and Newell, John Wiley & Sons,
or NACA TN 733

C9.13a Calculation of General Instability

Art. C9.13 presents an equation (C9.7) for the required EI of light circular frames so that they will provide simple support for the stringers without collapsing (as illustrated in Fig. C9.7b), called "Shanley's Criteria" which is apparently greatly based upon work by N.J. Hoff. For elliptical frames it is suggested that for preliminary sizing purposes or checks the following be done. For a bending moment about the x-axis, M_x, let D in equation C9.7 be 2b. For bending about the y-axis, M_y, let D be $2b^2/a$, referring to Fig. C9.9.
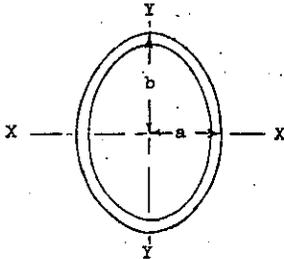
Fig. C9.9 Elliptical Frame

The frames must also have enough stiffness so that there will be no instability due to the shear in the skin panels, per Fig. C11.39.

Shanley's criteria applies only for a bending moment acting on a shell of stringer construction. When there is tension field action due to shear loads this will generate additional compression loads in the stringers. (Art. C11.31-.32). To account for the effect of this additional stringer loading it is recommended that the right side of equation C9.7 be multiplied by the factor $(P_c + P_{DT})/P_c$ where P_c is the most highly stressed stringer load due to M, and P_{DT} is the largest of the diagonal tension loads in this stringer and in the stringers on each side of it (3 stringers). The diagonal tension load in a stringer is calculated as

$$P_{DT} = .5(kf_s htcot\alpha)_a + .5(kf_s htcot\alpha)_b$$

as discussed in Art. C11.32, item 3. a and b are the panels on each side of the stringer being considered.

C10.15b Analysis of Thick-Web Beams

This textbook and others do not discuss the strength prediction for thick-web, shear resistant beams. These are quite commonly used in areas other than in the primary structure, such as for supporting numerous types of equipment.

There are two types of beams, thin-web and thick-web.

Thin-Web Beams

Thin web beams are shown in Fig. C10.1, C10.2 and C10.3. For these the web thickness is much smaller than that of the flanges. Thin-web beams may have either a non-buckling ("shear resistant") web, as in Chapter C10 or a buckling web ("semi-tension field") as in Chapter C11, Fig. C11.3 and C11.4. In general the deeper the beam relative to its length the more likely it is that the tension field type will be the lightest. Although a trade study is really needed to determine which is lightest, Wagner proposed that the following rough criteria for this be used. When the "index" $K = \sqrt{V}/h$ is more than eleven the shear resistant type is probably lightest, and when the index is less than seven the semi-tension field type is probably the lightest. In the index V is the shear in lbs and h is the beam depth between the flange centroids in inches.

The shear resistant type is usually the simplest from a manufacturing consideration, particularly if the web needs cut-outs or holes to allow wire bundles, rods etc. to pass through it (Fig. C10.19, C10.22 and D3.27). For thin-web beams the crippling strength of the compression flange is used in calculating the margin of safety, Art. C10.3, C10.5 and C10.15 on p.C10.13 (but too conservative for thick-web types as discussed later). However, if the beam's deflection (stiffness) is of importance, the initial buckling stress of the flange's outstanding legs should be used at limit load. This is because when such buckling occurs the beam's I will be become much smaller as to additional loads, so much stiffness will be lost. See Art. C6.1-C6.4 for initial buckling.

Thick-Web Beams

Thick-web beams have webs which are of about the same thickness as that of the flanges. Examples of thick-web beam cross-sections are shown in Fig. C10.15a.
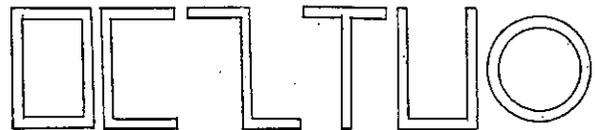

Fig. C10.15a Some Thick-Web Beam Cross-Sections

In general, thick web beams are of one piece and are shaped by forming sheet metal, by extruding or by machining.

When subjected to bending the allowable compressive stress for strength calculations is frequently taken as the crippling stress of the flange, but this usually gives a quite conservative estimate, as bending tests of such members show. When deflection or stiffness is important, the flange's initial buckling stress (and limit load) should be used as discussed for the thin-web beam. For the cases of cee, zee and U sections the ultimate bending strength can be more accurately determined by using the following empirical formulas. These are based upon bending strength tests made by the Curtiss-Wright Co. and reported in their Report R-162. In these the thickness was uniform, the two flanges had the same width and the zee section was prevented from deflecting laterally.*

Cee and Laterally Restrained Zee Beams

These are shown in Fig.C10.15b below.
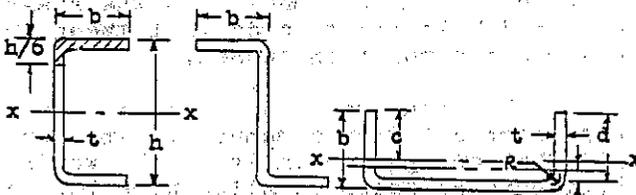
Fig.C10.15b Channel and Zee Beam Data

For aluminum alloy having $F_{cy} = 39,000$ and $E_c = 10.7 \times 10^6$

$$F_{bu} = 450,000 (b/h)^{.27} / (b/t)^{.79}$$

so,

$$M_{all} = F_{bu} I/c$$

For other alloys F_{bu} is multiplied by a factor of $(F_{cy}/E_c)^{.50} / .0604$ where the prime marks refer to the other alloy's properties. Unsupported compression flanges must also be checked for lateral buckling, assuming a web height of $h/6$ to be integral with them when doing this.

U-Section Beams (Also for T-Sections)

For the same alloy as above

$$F_{bu} = 730,000 / (b/t)^{1.17}$$

where b is the smaller of c and d. The formula is for compression in the outstanding flange. If it is in tension then $F_{bu} = F_{tu}$. For other alloys the same correction factor as for cees and zees is used. The formulas can be used also for extruded and machined shapes if they have a uniform thickness and the flanges of cees and zees are of the same widths.

* When a compressive load is also present these are beam-columns with M.S. per p.38, but do not use Method 2d for U or T-Sections. Use Fig. C5.14b to obtain F_c.

Cee and Zee Members Attached to a Skin in Tension

For these cases the following formulas can be used to calculate the allowable bending moments for any materials and at any temperature if $h \leq 8"$ and the beam spacing is 5" or more. The skin thickness, t, does not appear since the skin is assumed to take all of the tension load. The bending moment therefore is calculated about the base of the beam. The skin is in tension and the free flange of the beam is in compression.

For $h/t \leq 79$:

$$M_{all} = \left[.684t^2 h(b'/t)^{.25} (F_{cy}E_c)^{.50}\right] x \left[-.00303(h/t) + 1.20\right]$$

For $h/t \geq 79$:

$$M_{all} = \left[.684t^2 h(b'/t)^{.25} (F_{cy}E_c)^{.50}\right] x \left[-.0005(h/t + 1.00\right]$$

where $b'/t = (b + 0.7h)/2t$. Attachment to a skin provides lateral restraint for the beam.

Cee and Zee Members Attached to a Skin in Compression

For these cases the following formula can be used for any temperature and material if $8 \leq b/t \leq 20$ and the beam and skin are of the same material. If they are different materials the skin thickness, t, must be converted into an effective thickness, t_s, using the beam's material. The equation is valid for $.50 \leq t/t_s \leq 2.0$.

$$M_{all} = \left[ht_s^2(F_{cy}E_c)^{.50} /b/t)^{.278}\right] x \left[.816(E_c/F_{cy})^{.25} + .462(b/t)^{.723} (t/t_s)^2\right]$$

Unequal Flange Widths

When one flange is shorter than the other, use the shorter width for b (and d) in the previous formula.

Other Flanged Beams Symmetrical About the X-X Axis

With extruded or machined members the flanges might be thicker than the webs, and with an I-beam there is a flange portion on each side of the web. Although not covered by tests, the following procedure is suggested for an

approximate value for the allowable moment, M_{all}.

1. Determine the crippling load for each compression element outboard of the web and sum these to get P_{cc}.

2. Calculate the allowable bending moment carried by the flanges as

$$M_{flange} = P_{cc}(h - t_{flange})$$

3. Calculate the bending buckling strength of the web as

$$F_{b_{cr}} = K_b E t_{web}^2/(h - t_{flange})^2$$

4. Calculate the allowable moment due to the web as

$$M_{web} = 1.45 F_{b_{cr}} I_{web}/(h/2)$$

$$= 1.45\ f_{b_{cr}} t_{web} h^2/6$$

5. Finally, calculate the beam's allowable bending moment as

$$M_{all} = M_{flange} + M_{web}$$

Fig. C5.14a can be used for obtaining K_b in (3) above. For most thick-web beams $a/b > 1.0$, so $K_b = 21.7$ (web stiffeners could result in smaller values of a/b).*

Other Flanged Beams Unsymmetrical About the X-X Axis

1. If the compression flange area is equal to or smaller than the tension flange area proceed as above (for symmetrical sections)

2. If the compression flange area is larger than the tension flange area proceed as in Art. C3.7, Example Problem 4 (but also see Art. C3.4a). Then assume it to have the same area as the tension flange and proceed as for the symmetrical section above (for different thicknesses). Use the larger of the allowable moments calculated. If the beam is also unsymmetrical about the Y-Y axis, supports will be needed to prevent lateral movement, just as for a zee.

Interaction Effects of Shear and Bending

If shear is present it will promote earlier failure because of web buckling and the ensuing tension field action.

$$M.S. = 1/\sqrt{(f_s/F_{scr})^2 + (M/M_{all})^2} - 1.0$$

The previous formulas do not apply when the web has significant holes,

since the tests did not include such. Holes will reduce the strength but no test data are available. In such cases unless the holes are quite small and near the beam centerline, it is probably best to base the strength upon the crippling stress of the flange, as for thin-web beams.

C11.29a Circular Holes in Flat Tension Field Beams

According to "Stress Analysis Manual", AD-759199, AFFDL-TR-69-42, a single unreinforced, unflanged centrally located circular hole in a web will reduce the strength of the tension field beam's components as follows.

1. The reduced allowable web strength is

$$F_s' = F_s(tD(d-D) + A_{ue}DC_4)/C_5td^2$$

where F_s is the allowable with no hole, C_4 and C_5 are per Fig. C10.17 and .18, D is the hole diameter, d is the upright spacing and A_{ue} is per Art. C11.19, equation (58). The parameter limitations based upon test data are

$.02 \leq t \leq .132$ $7.0 \leq d \leq 18.0$
$.04 \leq t_u \leq .079$ $2.375 \leq D \leq 5.875$
$7.4 \leq h \leq 19.4$

where h is the web height between flange centroids and t_u is the thickness of the upright.

Some aerospace company data indicate that a "small" hole without a doubler results in a reduced web strength of

$$F_s' = F_s(1 - 1.33D/d)$$

with the limitations that $D \leq .75$, $D/d \leq .15$, hole center is located 2.5D away from any fastener line, hole is not in a panel next to an upright introducing a significant load into the beam and the material is either 2000 or 7000 series aluminum or Ti-6Al-4V sheet.

2. The reduced allowable upright (adjacent to the hole) forced crippling stress is

$$F_u' = F_u/(1 + D/d)$$

3. The tension loads in the web-to-upright fasteners due to prying action of the buckled web (Art. C11.24, equation 66) should be multiplied by a factor of $1 + D/d$.

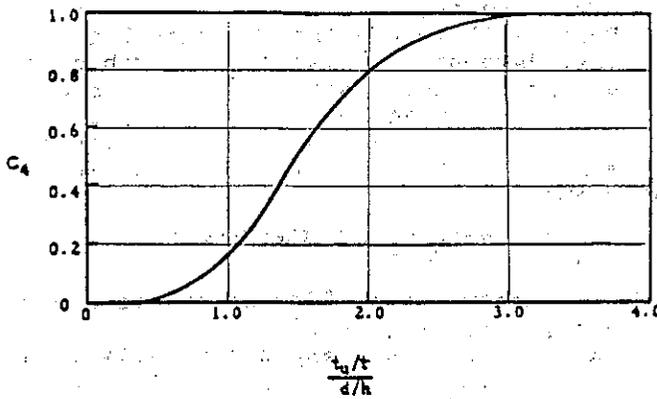The strength of the web (and other compo-

---

* For I-beam type members (flanges on each side of web) of constant thickness a more realistic procedure is as follows:
1) Using the web and 2 flanges (a Cee-section) calculate M_{all}.
2) For the other flange calculate the crippling load, P_{cc}, and then $M_{flange} = P_{cc}(h-t)$.
3) The total moment is then $M_{all} = M_{(1)} + M_{(2)}$.
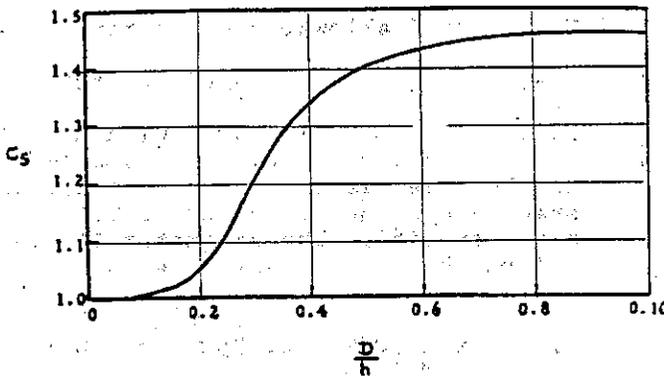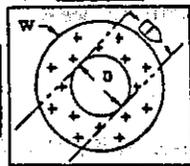
Fig.C10.17 Reduced Web Strength Factor,C4

Fig.C10.18 Reduced Web Strength Factor,C5

nents can be maintained by installing a ring doubler which meets the requirements of Fig.C10.19 and the following limitations.

$D/h_c \leq .50 \quad D/d \leq .67$

$W/D \leq .50$
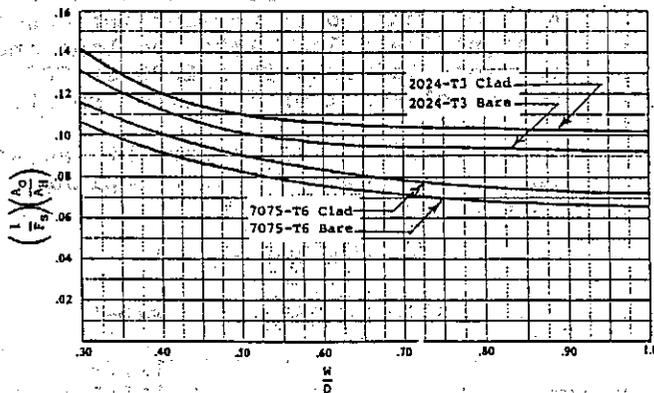
Hole center within $h/8$ from beam horizontal centerline

Fig.C10.19   Circular Hole Doubler Data

The rivet pattern is to be uniform and to

provide a running load strength per inch of $2F_st \times 10$ between tangent lines on each side of the hole.   In the figure

t_r = reinforcing ring thickness

t = web thickness

F_s = Allowable web stress in Ksi

A_o = Cross-sectional area of the reinforcing ring = $2Wt_r$ sq in.

A_H = Cross-sectional area of the web removed by hole = Dt sq in

Using the figure, for a given (required) F_s and hole diameter, D, one can determine by successive trials the required size of the reinforcing ring and the required fasteners. Or, for a given hole, fastener pattern and reinforcing ring one can determine directly the value of F_s. Instead of being a separate piece, the reinforcing ring could be integral with the web (chem-milled or machined).

C11.24a Rivet Design

With a shear resistant (non-buckling) web the skin (or web) does not pry on the rivets and put them in tension. The only tension in the rivet then is that due to the "clamp-up" force, Q, as shown in Fig. D1.43c. When the web or skin buckles, the resulting "folds" try to go across the restraining upright or frame, and this puts the rivets in tension. The more severe the tension field (i.e., the larger the factor k), the larger is the tension in the rivets.

Equations (65) and (66)[*] specify the rivet joint tension strength required to prevent the folds in the buckled web or skin from lifting off of the upright or frame. This criteria was suggested by P. Kuhn in NACA TN 2661. The criteria does not involve the web stress or k, so it must be adequate for a very highly developed tension field, a large value of k Hence, it will be quite conservative for a lesser tension field effect, a smaller k, and for a k of zero the required rivet tension strength (for this effect) would be zero. In view of this, some analysts assume that the above criteria for rivet strength applies down to a k of .50 or so, and then decreases linearly with k for lesser values of k, becoming zero for k = 0 (no web buckling). No further such data was published by the NACA, although some companies have run tests (unpublished) for smaller k values.

* of Art.C11.24

C11.31a General Discussion

On p.C11.30, item 5, at the end of the last sentence add the following: putting the rivets in tension

On p.C11.30, item 2, add: (e) the stringer bending moment (item 3) will increase.

On p.C11.31, R.H.Col., after the end of the 18th line down, add: For the case of stringers a more direct alternative method is in Ref.9, discussed later.

On p.C11.31 revise the "Floating rings sentence, to be as follows: "Floating" rings support only the stringers and are therefore not attached to the skin, so they do not determine the spacing, d.

On p.C11.31, text line 26 down, put an * after A20 and add the footnote: * However, the effective skin area (per Art. A20.3) should be reduced per Eq. (83) as given later in Art.C11.32a.

On p.C11.32, R.H.Col., 4th line up, replace "before" with "assuming no"; put an * after "center" and add the footnote: * or better, at a point 70% of the way up from the lowest stressed edge (stringer) to the highest stressed edge (stringer), see Example Problem 1. Then at the end of the last line add "panel's".

C11.32a Stringer Systems in Diagonal Tension

Remainder of Part 2. Curved Web Systems

Beginning with the first line on p. C11.33, the remainder of Part 2 has been completely rewritten as follows.

compression stress increases more slowly. Thus one can write

$$f_c/f_s = B$$

or

$$f_c = Bf_s \qquad - - - - - - (73)$$

Substituting these formulas for F_{ccr} and f_c back into the interaction formula, (71), one obtains

$$Bf_s/Af_{scr} + (f_s/F_{scr})^2 = 1.0$$

Solving this quadratic for f_s

$$f_s = F_{scr}\left[\frac{-\frac{B}{A} + \sqrt{\left(\frac{B}{A}\right)^2 + 4}}{2}\right] \quad - - (74)$$

where f_s is the actual shear stress at which the panel buckles due to the presence of compression stresses. Calling this stress F'_{scr} and calling the expression in the brackets R_c

$$F'_{scr} = F_{scr}R_c \qquad - - - - - - (75)$$

where

$$R_c = \frac{-B/A + \sqrt{(B/A)^2 + 4}}{2} \quad - - - (76)$$

R_c is always less than 1.0 when compression stresses are present. R_c is calculated for each panel.

Next, consider a panel subject to a shear stress and a tension stress, f_t. For this case it has been experimentally shown, Ref.6, that the interaction formula for buckling is

$$f_s/F_{scr} - f_t/2F_{ccr} = 1.0 - - - - (77)$$

The shear stress, f_s, at which the panel will buckle when tension is present is obtained from Eq.(77) as

$$f_{scr}/F_{scr} = 1.0 + f_t/2F_{ccr}$$

or

$$f_{scr} = (1.0 + f_t/2F_{ccr})F_{scr} - - - (78)$$

Calling the expression in parenthesis in Eq.(78) R_T and calling f_{scr} F'_{scr}

$$F'_{scr} = F_{scr}R_T \qquad - - - - - - (79)$$

where

$$R_T = (1 + f_t/2F_{ccr})F_{scr} - - - - (80)$$

Since R_T is greater than 1.0 the actual shear buckling stress will always be greater than F_{scr} when tension is present and when the tension stress is large enough there will be no buckling.

Just as the compression stress reduces the panel's shear buckling stress, the shear stress also reduces the compressive buckling stress. Therefore, a factor, R'_c, is applied to the panel's effective area (items (1) and (2), p.A20.3) to obtain a reduced effective area (like having a smaller thickness). That is, the reduced compressive buckling stress is

$$f_{ccr} = R'_c F_{ccr} - - - - (81)$$

where

$$R'_c = R_c(B/A) - - - - - (82)$$

so,

$$A'_{eskin} = A_{eskin}R'_c - - - (83)$$

and A_{eskin} is used in all section property calculations and wherever effective skin areas are used (A_{eskin} is per Art.A20.3, items (1) and (2)).

2. Diagonal Tension Factor, k

The next step for each panel is the determination of the diagonal tension factor, k. This is a function of f_s/F'_{scr} where, as discussed above,

$$F'_{scr} = F_{scr}R_c \qquad or \qquad F'_{scr} = F_{scr}R_T$$

depending upon whether compression or tension stresses are present.

For a curved panel the formula for k as determined from many tests, Ref.3, is the empirical relationship

$$k = \tanh \left[(.5 + 300\tfrac{td}{Rh})\log_{10}\tfrac{f_s}{f_{scr}} \right] \quad - (84)$$

with the auxiliary rules that

   a) if d/h > 2 use only 2

   b) if h > d (longeron system) replace d/h with h/d and if h/d>2 use only 2

k can also be found directly from Fig. C11.19.

3. Stringer Loads, Stresses and Strains

As in the case of the plane web system, the total stringer load will consist of the primary axial loads, P_p, due to the applied bending moments and/or axial loads, plus the diagonal tension induced loads, $P_{D.T.}$

$$P_{STR} = P_p - P_{D.T.} \quad - - - - (85)$$

If P_p is tensile it would be a positive number in the above equation. P_p can be determined as in Chapter A20.2 - A20. $P_{D.T.}$ is calculated as follows, referring to Fig. C11.35a
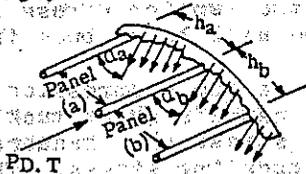
Fig. C11.35a Stringer Diagonal Tension Load

$P_{D.T.}$ is the diagonal tension load in a stringer bounded by panel "a" on one side and by panel "b" on the other. Let the width of panel a be h_a and that of b be h_b (for equally spaced stringers $h_a = h_b$) Let the shear flow in panel a be q_a and that in b be q_b. Then

$$P_{D.T.} = \frac{k_a q_a h_a \cot\alpha_a}{2} + \frac{k_b q_b h_b \cot\alpha_b}{2} \quad - (86)$$

Ref.3 shows that a panel's effective area (at each stringer bordering it) for the diagonal tension load, $P_{D.T.}$, is

$$Ae_{D.T.} = .5ht(1-k)R_c/2$$

Therefore, the stringer stress is

$$f_{str} = f_p - f_{D.T.}$$

where f_p is negative when P is compressive and positive when P is tensile. So,

$$f_{str} = f_p - \frac{(kf_s ht\cot\alpha)_a +}{2A_{str} + .5(ht(1-k)R_c)_a +}$$
$$\frac{(kf_s ht\cot\alpha)_b}{.5(ht(1-k)R_c)_b} \quad - - - - (87)$$

If each panel has identical parameters or if their average values are assumed to be present in each panel Eq.(87) becomes

$$f_{str} = f_p - \frac{kf_s\cot\alpha}{A_{str}/ht + .5(1-k)R_c} \quad - - (88)$$

The two panels can have identical parameters only when part of a circular shell subject only to torsion and compression, not to shear or bending which cause varying stresses, k and R_c values. However, for closely spaced stringers using average values and Eq.(88) is reasonable. The stringer strain, needed to determine α later, is

$$\epsilon_{str} = f_{str}/E_{str} \quad - - - - - - (89)$$

All terms in Eq.(87) and (88) are known except α, which is discussed later.

Per Art.C11.31, item 3, the diagonal tension generates bending of the stringers, bowing them inward. Per Ref.3 the result is a peak bending moment at the center of the stringer and at the ends (at the rings) in the amount

$$M_{str} = f_s ht d^2 k\tan\alpha/24R \quad - - - - - (90)$$

where R is the radius of curvature

This produces tension on the inner surface of the stringer at its middle and compression on the inner surface at the rings. This bending is due to the diagonal tension and is increased when primary compression loads are also present (but not in defined amount, i.e., a beam-column effect).

Per Ref.3 $f_{D.T.}$ is an average stress There is also a peak or maximum stress, $f_{D.T.MAX}$, calculated as

$$f_{D.T.MAX} = f_{D.T.}(f_{D.T.MAX}/f_{D.T.}) \quad -(91)$$

where $f_{D.T.MAX}/f_{D.T.}$ is obtained from Fig.C11.21. $f_{D.T.}$ is the last term in Eq.(88). $f_{D.T.MAX}$ is used for a local strength check (see Example Problem).

4. Stresses and Strains in Rings

There are two types of rings. Conventional rings intersect the stringers and are notched to let them pass through, and are attached to the skin. So-called "floating" rings are located inside of the stringers and are not attached to the

skin. The resulting stresses in these two types of rings are therefore different.

Conventional Rings

Just as the tension field produces a compressive stress, $f_{D.T.}$, in the stringers it also produces a compressive stress f_{rg}, in the rings. For circular shells this is, per Ref.3, for conventional rings

$$f_{rg} = \frac{kf_s \tan\alpha}{A_{rg}/dt + .5(1-k)} \quad ----- (92)$$

Just as for stringers, Eq.(88), this assumes that the panels on each side of the ring have the same parameters (k, f_s, d, t, α). If not, Eq.(92) would be of a form similar to the last term in Eq.(87). However, as for stringers, average values can be used in Eq.(92) when the values are slightly different. The axial strain in the rings will be

$$\epsilon_{rg} = f_{rg}/E_{rg} \quad ------ (93)$$

The strain is used to determine α.

Rings can also have a maximum or peak stress, like stringers (Eq.91), using f_{rg} in place of $f_{D.T.}$ in that equation. However, per Fig.C11.21, f_{rg}/f_{rgMAX} will be 1.0 for typical stringer construction where d/h > 1.0, so there is then no peaking of the stress.

"Floating" Rings

For "floating" rings concentrated radial loads pushing inward on the rings are generated at the stringer locations, Fig.C11.30e. This produces a hoop compression in the circular ring and also a bending moment, since the radial loads are concentrated, not distributed. The axial compression in a floating ring is

$$f_{rg} = \frac{kf_s \tan\alpha}{A_{rg}/dt} \quad ------- (94)$$

Note that there is no "effective" area term for this case. The axial strain in the ring, due to f_{rg}, is

$$\epsilon_{rg} = f_{rg}/E_{rg} \quad ------ (95)$$

The maximum bending moment generated in the ring is

$$M_{rg} = kf_s th^2 d \tan\alpha/12R \quad ----- ((96)$$

It occurs at the ring-stringer junction, producing compression in the outer flange of the ring. There is a secondary bending moment, half as large, midway between the stringers. There is no "peak" stress for floating rings. As for conventional rings, Eq.(94) and (96) assume that the panels on each side of the ring have the same parameters.

Ring Stiffness (EI) Requirements

Since the rings support the stringers against general instability, see Fig.C9.7b, they must have an adequate EI. This value is affected by the diagonal tension loads in the stringers and is discussed in detail in Art.9.13a.

5. Strains in the Skin Panels

The strain in the skin panels is given in Ref.3 as

$$\epsilon_{sk} = \frac{f_s}{E}\left[\frac{2k}{\sin 2\mu} + \sin2\alpha(1-k)(1+\mu)\right] - (97)$$

where μ = Poisson's ratio (.33) and all terms are known except α. Fig.C11.36 is of help, giving the value of the bracketed term

6. Determination of α

For the stringer system (d > h) Ref.3 shows that α is related to the stringer strain, the ring strain and the web or skin strain by the formula

$$\tan^2\alpha = \frac{\epsilon_{sk} - \epsilon_{str}}{\epsilon_{sk} - \epsilon_{rg} + h^2/24R^2} \quad ---- (98)$$

where ϵ_{sk} is a tension (+) strain and ϵ_{rg} and ϵ_{str} are compression (-).

α is determined by successive approximation as follows. The strain equations are (for conventional rings)

$$\epsilon_{rg} = \frac{1}{E_c}\left[\frac{-kf_s \tan\alpha}{A_{rg}/dt + .5(1-k)}\right] \quad (93)$$

$$\epsilon_{str} = \frac{1}{E_c}\left[f_p - \frac{kf_s \cot\alpha}{A_{str}/ht + .5(1-k)R_c}\right] \quad (89)$$

$$\epsilon_{sk} = \frac{f_s}{E}\left[\frac{2k}{\sin2\alpha} + (1-k)(1+\mu)\sin2\alpha\right] \quad (97)$$

f_p is negative when in compression. To determine α for any panel use the values of k, f_s, R_c, t and d for that particular panel in the above strain equations. Also, for ϵ_{str} use the stringer bordering the panel which has the larger compressive value of f_p.

Assume a value for α, say 30° to 35° to start, and compute the values of the three strains. Then enter these into Eq.(98) and compute α. Compare with α assumed. Repeat as necessary until the calculated value of α is essentially the same as that assumed, and α is then known. Note that ϵ_{rg} and ϵ_{str} are negative, being in compression. For "floating" rings Eq.(94) is used in place of Eq.(93). Once α is known all of the stresses

and effects involving it are known.

7. Loads on the Attachments

The only remaining loads to be calculated are those on the attachments. These are of two types: those in the plane of the skins and those normal to the skins which are "prying" forces trying to "pop off" the rivet heads or to pull the skin upward around the rivets. These normal loads are most likely to be critical when countersunk rivets are present and are of small diameter.

The rivet loads due to the applied loads are called "primary" loads and those due to tension field action are "secondary" loads.

a) The secondary rivet shear loads must be considered whenever a shear-buckled skin is spliced or ends along an opening or "cut-out", such as along a stringer or a ring. At a splice or opening along a stringer the load per inch is

$$\text{Lbs/in} = f_{st} \left[1 + k(\frac{1}{\cos\alpha} - 1) \right] \quad - -(99)$$

Along a ring (a vertical direction) the loading is

$$\text{Lbs/in} = f_{st} \left[1 + k(\frac{1}{\sin\alpha} - 1) \right] - -(100)$$

f_s is the total panel shear load and includes any redistribution effects due to a cut-out, as in Fig.D3.21. If the panel is non buckling then k = 0.

b) The normal or "prying" loads are not determinable by any formula from theory, but based on test data Ref.3 recommends the following as the loading on the rivets.

When the skin is continuous across a ring or stringer

$$\text{Lbs/in} = .22tF_{tu} \quad - - - - - (101)$$

When the skin stops along a ring or stringer (due to a cut-out)

$$\text{Lbs/in} = .15tF_{tu} \quad - - - - (102)$$

where t is the skin thickness and F_{tu} is the skin ultimate tensile strength.

These criteria are no doubt conservative and are discussed further in Art.C11.24a. Some data for the strength of rivet-sheet combinations in the normal direction are in Fig. C11.37a, C11.37b and Art.D1.26. Flush heads are most likely to be critical.

1. Stringers

Three methods of stringer analysis are presented

a) A "Quick Method" for preliminary sizing and quick checks.

b) The N.A.C.A. Method which is quite tedious and therefore not recommended

c) The Melcone-Ensrud Method which is the recommended one

The Quick Method

Two analyses are made, one for local strength and one for buckling. The local strength analysis uses the interaction equation

$$f_p/F_{cc} + (f_{D.T.Max}/F_{ST})^{1.5} = 1.0 - -(103)$$

where $f_p = My/I$, F_{cc} is the "natural" crippling stress, Art.C7.2, C7.4 or, better, Art.C7.30, $f_{D.T.Max}$ is per Eq.(91) and F_{ST} is per Fig.C11.38.

The buckling analysis uses the interaction equation

$$f_p/F_{cr} + f_{D.T.}/F_{D.T.cr} = 1.0 \quad - - -(104)$$

where F_{cr} = stringer buckling stress (Art. C7.26) using $A_{e_{skin}}$ in computing ρ_{str} and L' = d. However, torsional buckling is sometimes critical, Art. C7.31.

$F_{D.T.cr}$ = buckling stress due to diagonal tension load using an effective skin area of .5ht(1-k)R_o in calculating ρ_{str} and L' = L/$\sqrt{2}$ when stringer is continuous at both ends or L' = L/$\sqrt{1.5}$ when it is continuous at only one end.

However, in either case an effective skin area is not used in calculating ρ if this results in a larger ρ than for the stringer alone. This is because buckled skin has an undefined reduction effect on the stringer's buckling strength. (Fig.C7.36).

The N.A.C.A. Method

This is discussed only briefly since Method C, next, is recommended. Ref.3 suggests the following analysis.

a) Local Strength Check

Consider the structure to be subject

only to its axial (or bending) applied
loads, not to any shear, and calculate f_P
and F_{cc} for the stringers. Then consider
the structure to be subject only to its
shear and torsion loads (no axial or ben-
ding loads) so that for all stringers
$f_P = 0$. For any stringer the average
shear in the two panels bordering it is
f_s. Then using the last term ($f_{D.T.}$) in
Eq.(88) find by successive trials what
value of f_s results in

$$f_{D.T.Max} = F_{ST}$$

This is a very considerable effort, since
for each assumed value of f_s one must de-
termine numerous parameters k, $\in$'s, α etc.
Then let this value of f_s be called F_{s_o}.
The margin of safety is then found from
the interaction equation

$$f_P/F_{cc} + (f_s/F_{s_o})^{1.5} = 1.0 \qquad - -(105)$$

by using Fig.C4.34 with R_b and R_t there
being replaced with f_P/F_{cc} and f_s/F_{s_o} re-
spectively. In Eq.(105) f_s is the actual
(average) shear stress in the two panels
bordering the stringer.

b) Buckling Check

The same approach as used in (a) ap-
plies, except that the allowable stress
terms are F_{cr} instead of F_{cc} and F'_{s_o} in-
stead of F_{s_o} and are determined as
follows.

Fcr is determined in the same manner
as for Eq.(104). As in (a), by succes-
sive trials find what value of f_s results
in

$$f_{D.T.} = F_{D.T.cr}$$

where $F_{D.T.cr}$ is as defined for Eq.(104)
in (a). Again, this is a very consider-
able effort as mentioned in (a). Then,
let this value of f_s be called F_{s_o} and the
margin of safety is determined from the
interaction equation

$$f_c/F_{cr} + (f_s/F'_{s_o})^{1.5} = 1.0 \qquad - - -(106)$$

and can be found as suggested for
Eq.(105).

The Melcone-Ensrud Method

This method is recommended since it
is much more direct than method (b) and
also considers the torsional stiffness of
the stringer. As shown in Ref.9, the
stringer margin of safety is calculated
as

$$M.S. = \frac{1}{\left[(f_P/F_{cr})^{.25} + ((f'_c + f''_c)/F_c)^{1.25}\right]^{.80}}$$

$$-1.0 \qquad - - - - - - (107)$$

where
f_P = compressive stress in stringer due
to the primary shell loads ($My/I +$
P/A), bending and axial, as present.

F_{cr} = stringer critical load as a column
calculated as discussed for
Eq.(104).

F'_c = buckling strength of the stringer
itself, considering crippling, and
using a fixity of 2 when the string-
er is continuous across rings at
each end and 1.5 when continuous at
only one end.

f'_c = See Table C11.1

f''_c = See Table C11.1

Table C11.1 involves five parameters which
are defined as follows

$$\tau = 1 + (d/R)\left[(I_{str}/J_{str})(t/h)\right]^{.25}$$

where J_{str} = torsional stiffness factor

$$= A_{str}t_{str}^2/3 \text{ for open sections}$$

$$= 4A^2 t_{str}/p \text{ for closed sections}$$

where A = enclosed area

p = perimeter

$$\lambda = 1/(1 + f_{cg}/f_s)^{.25}$$

where f_{cg} = applied primary compressive
stress based on stringer area
plus total skin area (fully
effective). When $f_{cg} = 0$,
$\lambda = 1.0$ (no applied compres-
sive loads). That is, $f_{cg} =$
$My/I_{gross} + P/A_{gross}$.

$$F'_s = (\pi/4S^{.25})(Et/R)$$

where $S = d^2/Rt$

$$F''_s = 5.25E(t/h)^2$$

$$F_{s_{cr}} = F'_s + F''_s$$

Table C11.1   Determination of f'_c and f''_c

$f'_c = 0$ when $f_s < \lambda F_{s_{cr}}$ (no buckling)
$f'_c = \dfrac{\tau(f_s - \lambda F_{s_{cr}})ht}{A_{str}}$ when $f_s \geq \lambda F_{s_{cr}}$
$f''_c = 0$ when $f_s < \lambda F'_s$

(Continued)

Table C11.1 (Con'd)

$$f_c'' = \left(\frac{f_s - \lambda F_s'}{F_s}\right)\left(\frac{\lambda F_s'' dt}{A_{str}}\right)\left(\frac{.053h}{d}\right)^{.333}$$

when $\lambda F_s' \leq f_s < F_{scr}$

$$f_c'' = \frac{\lambda F_s'' dt}{A_{str}}\left(\frac{.053h}{d}\right)^{.333} \quad \text{when } f_s \geq F_{scr}$$

When the value of f_s varies in the panels above and below the stringer use the average, or more conservatively use the larger. If h or t varies use the average.

The following is applicable to all three methods. If a stringer has a negative margin of safety it does not mean failure if the other stringers can carry enough of the shell's applied bending moment to prevent this (see Art.A19.11). However, each stringer must carry its own diagonal tension load, $P_{D.T.}$.

Also, since diagonal tension loads do not vary linearly with the applied loads, the margins of safety as calculated are actually apparent ones rather than true ones (see Art.C1.13a, item 2), but this is not always considered. This also applies to other parts loaded by the tension field action.

It is, of course, best to determine F_{cr} from compression tests of a segment of the shell having four or five stringers, but this is expensive to do although it eliminates uncertainties.

2. Rings

Rings have allowable stresses similar to those for stringers. For conventional rings the margin of safety is obtained using the equation

$$\text{M.S.} = \frac{1}{f_p/F_{cc} + f_{rgMax}/F_{rg}} - 1.0 \quad --(108)$$

where f_p is the largest compressive stress in a flange due to any primary loading on the ring (bending and compression) if any, and F_{cc} is the crippling stress for that flange.
f_{rgMax} is f_{rg} (no peaking here for the stringer system), Eq.(92).
F_{rg} is the allowable forced crippling stress for the ring, per Fig.C11.38.

Since conventional rings are notched to let the stringers pass through, it is important to use an adequate clip at the notch to prevent local buckling of the ring's notched web.

Floating rings are not subject to any forced crippling, only to any axial stresses or bending stresses caused by primary loads, if any, and to the axial stress of Eq.(94) and to M_{rg} of Eq.(96). The margin of safety is calculated for the flange critical for these loads as

$$\text{M.S.} = \frac{F_{cc}}{f_c + f_b + f_{rg} + f_{M_{rg}}} - 1.0 \quad ----(109)$$

3. General Instability

A general instability check for the shell can be made using the empirical criteria presented in Fig.C11.39. This is obtained from test data and recommendations of Ref.7 and Ref.3. The allowables are based upon pure torsion tests. The margin of safety is calculated as

$$\text{M.S.} = \frac{F_{sInst}}{f_s} - 1.0 \quad ---(110)$$

4. Margin of Safety for the Skin

The allowable skin stress can simply be read from Fig.C11.42 as F_s. The margin of safety is calculated as

$$\text{M.S.} = F_s/f_s - 1.0 \quad ----(111)$$

f_s is the gross skin stress (ignoring rivet holes). The net shear stress (between rivet holes) can be carried up to F_{su}, the ultimate shear stress for the skin material

5. Margin of Safety for Attachments

For any attachment (rivet) the margin of safety is calculated as

$$\text{M.S.} = \frac{\text{Joint Allowable Load}}{\text{Attachment Spacing (Load/in)}} - 1.0 \quad ----(112)$$

where the Load/in is as follows
a) At a splice or edge along a stringer (horizontal) Eq.(99) applies.

b) At a splice or edge along a ring (vertical) Eq.(100) applies

c) For a change in stress, or shear flow, across a ring or stringer (no edge or splice) Δf_s is used instead of f_s in Eq.(99) or (100).

Eq.(112) applies for, both, in-plane and normal loads. The joint allowable load is the allowable load per rivet.

The following Example Problem illustrates the analysis procedure.

C11.34a Example Problems

Determine the following margins of safety for the structure shown in Fig. C11.43a. All loads are ultimate.

a) Skin rupture for panels a, b and c

b) General instability in shear based on the shear in panel b

c) Interrivet buckling of skin along stringer 2 in bay AB

d) Stringer 2 between panels a and b

e) The fasteners along stringer 1, assuming the skin is spliced there

f) The ring between panels a and c and stringers 1 and 2

g) The fasteners along the ring at A in panel b assuming the skin is spliced

h) The fasteners in panel b along ring B

Internal Loads

The first step is to determine the internal loads in the structure due to the applied (external) loads. This can be done as discussed in Chapter A.20, or it may be done by finite element analysis. For tension field analysis purposes, it is necessary to do this for two structural conditions, first assuming the skin does not buckle and then with the skin in the buckled condition. For the latter condition this is a successive trials procedure, since buckled panels have effective widths which depend upon the panels stress, and the stresses depend upon the amount of effective skin area.

It is assumed here that the internal loads have been determined for the shell and its applied loads, which are a shear, a torsion and a bending moment. The following table summarizes those internal loads and the geometry needed for the required analyses. All loads are ultimate.

Table C11.2 Internal Loads and Geometry

Condition of Skin	q_a [5] lb/in	q_b [5] lb/in	q_c [6] lb/in	y [1] in	y_a [1] in	y_b [1] in	y_c [1] in
No Buckling	111	121	111	0	14.40	11.34	14.40
Buckled	116	125	116	2.71	17.11	14.05	17.11

Table C11.2 (Continued)

Condition of Skin	y_{str1} [2] in	y_{str2} [2] in	M_{BC} [3] in-lbs	M_{AB} [3] in-lbs	I [4] in[4]
No Buckling	14.61	12.65	171,000	216,000	382
Buckled	17.32	15.36	171,000	216,000	276

Notes
1. For panels y is measured from the shell's neutral axis to a point 70% of the distance from the lower edge to the upper edge (rather than to the midpoint).

2. For stringers y is to the stringer + effective skin centroid.
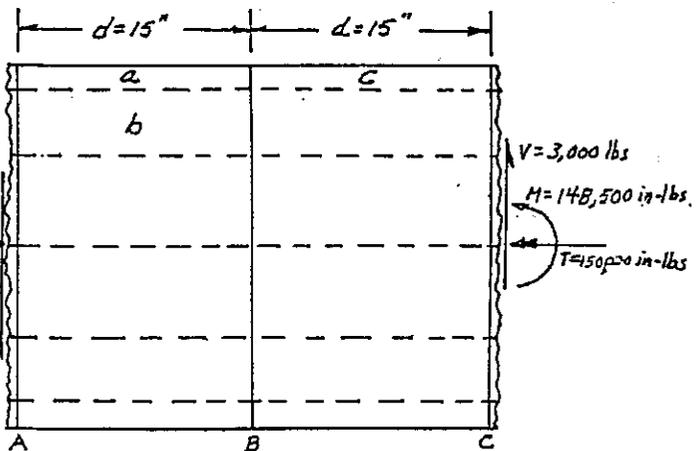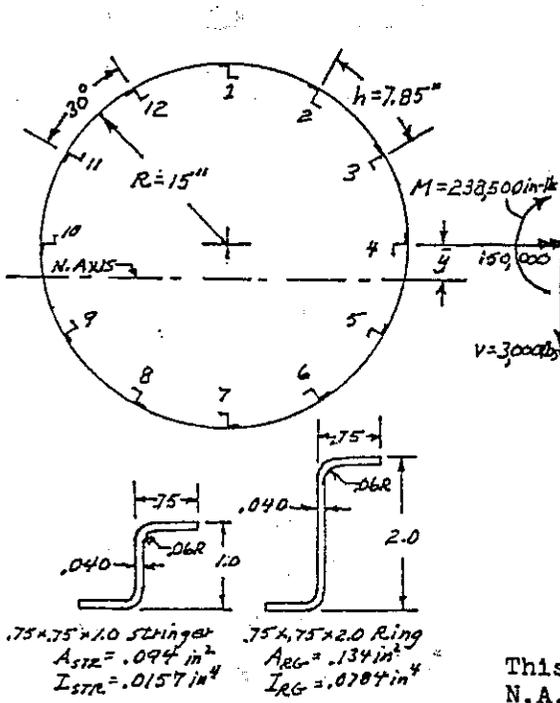
All material is 2024-T3 Sheet
$E_c = 10.7 \times 10^6$ $F_{cy} = 37,000$
$E = 10.5 \times 10^6$ $F_{bru} =$
$F_{tu} = 64,000$

Rivets are 1/8" Universal head MS20470 AD-4 at .75" spacing.

This is the same structure as was used by the N.A.C.A. in developing their tension field criteria, except that t_{str} was .080 there.

Fig.C11.43a Shell with Stringer Construction for Example Problem

3. M_{AB} and M_{BC} are bending moments at the middle of bay AB and BC respectively.

4. The same I is used for bay AB and BC although I_{AB} would be slightly smaller since the larger bending moment would result in less effective skin area.

5. $q = f_s t$ (the formulas use $f_s t$)

Skin Panel Analyses

The analysis is illustrated for panel a only. The results of similar analyses for panels b and c are presented.

$a/b = 15/7.85 = 1.91$; $Z = 15^2(1-.33^2)^{.5}/15(.025) = 155$; $k_s = 32$ (Fig.C9.4);
$k_c = 56$ (Fig.C9.1)

$F_{scr} = 32\pi^2(10.7 \times 10^6)(.025)^2/12(1-.33^2)$
$(7.85)^2 = 3,205$ (Fig.C9.4)

$F_{ccr} = 56\pi^2(10.7 \times 10^6)(.025)^2/12(1-.33^2)$
$(7.85)^2 = 5,609$ (Fig.C9.4)

$A = F_{ccr}/F_{scr} = 5609/3205 = 1.75$ (Eq.72)

For the non-buckled skin (to determine R_c, F_{scr} and R_c)

$f_c = My/I = 216,000(14.4)/383 = 8,121$

$f_s = q/t = 111/.025 = 4,440$

$B = f_c/f_s = 8121/4440 = 1.83$ (Eq.73)

$B/A = 1.83/1.75 = 1.05$

$R_c = (-1.05 + \sqrt{1.05^2 + 4})/2 = .60$ (Eq.76)

$R_c' = R_c(B/A) = .63$ (Eq.82)

$F_{scr}' = 3,205(.60) = 1,923$ (Eq.75)

For the skin in the buckled condition

$f_s = q/t = 116/.025 = 4,640$

$f_s/F_{scr} = 4,640/1,923 = 2.41$

$300td/Bh = 300(.025)(15)/15(7.85) = .955$

$k = .51$ (Fig.C11.19)

$F_s = 23,000$ (Fig.C11.42)

$M.S._{rupture} = 23000/4640 -1.0 = \underline{High}$

$\epsilon_{sk} = f_s[2 \times .51/\sin 2\alpha + .652 \sin 2\alpha]/E$
$= .000442(1.02/\sin 2\alpha + .652\sin 2\alpha)$
$\qquad\qquad - - -$(Eq.97)

$\alpha = 25.4°$ (see "Determination of α")

Proceeding similarly for panels b and c

$R_{cb} = .69$, $k_b = .46$, $F_{sb} = 23,500$,
$f_{sb} = 5,000$, $R_{cb}' = .52$, $\alpha_b = 24.8°$,
$M.S._b = \underline{High}$

$R_{cc} = .67$, $k_c = .45$, $F_{sc} = 23,000$
$f_{sc} = 4,640$, $R_{cc}' = .56$, $\alpha_c = 24.0°$,
$M.S._c = \underline{High}$

Interrivet buckling along stringer 2 in bay AB

$F_{ir} = \pi^2 \times 10.7 \times 10/(.75/.58 \times .025)^2$
$= 39,473$ (Eq.C7.22)

$f_c = f_{c skin} + f_{D.T.Max} = 216,000 \times 15.7/276 + 9,761$ (see "Stringer")$= 22,048$

$M.S. = 39473/22048 - 1.0 = \underline{.79}$

General Instability

The following is based upon panel 2 (it is more critical for panels at the neutral axis where panel shear stress is larger). Per Fig.C11.39 and its notes

$\dfrac{\rho_{str} \times \rho_{rg} \times 10^3}{(dh)^2 R^{.75}} = \dfrac{.409^{.875} \times .765^{.875} \times 10^3}{(15 \times .785)^2 \times 15^{.75}} = 44.8$

$F_{sInst}/E_c > 3,000$

$F_{sInst} > 3,000 \times 10.7 \times 10 > 32,000$

$f_s = 5,000$

$M.S. > 32,000/5,000 - 1.0 = \underline{High}$

Stringer 2 (between panels a and b)

This will be checked using the three methods discussed and using an average of the values for data in panels a and b

$f_{str} = f_P - f_{D.T.}$

$= \dfrac{My}{I} - \dfrac{kf_s\cot\alpha}{A_{str}/ht + .5(1-k)R_c}$ (Eq.88)

$\dfrac{-216000(15.36)}{276} - \dfrac{.485(4820) \times \cot(24.8°)}{.094/7.85 \times .025 + .5(1 - .485)(.645)}$

$= - 12,021 - 7,736 = -19,757$

$f_{D.T.Max} = -7,986(f_{D.T.Max}/f_{D.T.})$ (Eq.91)

$= -7,936(1.23) = -9,761$

$F_{ST} = N \times C = 21,800(.883) = 19,249$ (Fig.C11.38)

$\rho_{(str \ only)} = .409$ $F_{cc} = 28,600$

The three types of analyses follow.

Quick Analysis

Local Strength

$12,021/28,600 + (9761/19,249)^{1.5} = .776$

(Eq.103)

M.S. = .23   (Fig.C4.34)

Buckling Strength

Per Eq.(104) and its discussion

$F_{cr} = 28600 - 28600^2 (15/.409)^2/4\pi^2 \times 10.7 \times 10^6$

$= 25,995$ (Eq.C7.31)

$F_{DTcr} = 28,600 - 28,600^2 (15/\sqrt{2} \times .348)^2/$

$4\pi^2 \times 10.7 \times 10^6 = 26,801$ (Eq.C7.31)

M.S. $= \dfrac{1}{12021/25995 + 7736/26801} - 1.0$

$= .32$ (Eq.104)

N.A.C.A. Method

Local Strength

For an applied torque loading only it is found after several successive trials that when f_s is 10,600 psi the resulting value of $f_{D.T.MAX}$ is equal to F_{ST} (Fig.C11.38). Then, per Eq.(105) with $F_{SO} = f_s = 10,600$

$12021/28600 + (4820/10600)^{1.5} = .727$ (Eq.105)

M.S. = .30   (Fig.C4.34)

Buckling Strength

As above, it is found that when f_s is 13,400 psi the resulting values of $f_{D.T.}$ and $F_{D.T.cr}$ are equal. Then, per Eq.(106 with $F_{SO} = f_s = 13,400$

$12021/25995 + (4820/12400)^{1.5} = .678$ (Eq.106)

M.S. = .39   (Fig.C4.34)

Melcone-Ensrud Method

$f_c = 12,021$, $F_c = 25,995$,
$F_c'' = 27,300$, $f_s = 4,820$

$I_{str} = .0157, J_{str} = 094(.040)^2/3 = .000050$

$\tau = 1 + (15/15) [(.0157/.00005)(.025/7.85)]^{.25}$
$= 2.0$

$f_{cg} = My/I_{gross} = 21600(12.55)/383$
$= 7,078$

$\lambda = 1/(1 + 7078/4820)^{.25} = .798$

$S = 15^2/15(.025) = 600$

$F_S' = \pi/4(600)^{.25} (10.7 \times 10^6 \times .025)/15 = 2,777$

$F_S'' = 5.25 \times 10.7 \times 10^6 (.025/7.85) = 559$

$F_{scr} = 2777 + 559 = 3,336$

$\lambda F_{scr} = .798(3336) = 2,662$

$f_c' = 2.0(4820 - 2662)(7.85)(.025/.094$
$= 9,011$

$f_c'' = .798(559)(15)(.025)(.053 \times 7.85/15)^{.111}/$
$= 539$ $.094$

M.S. $= \dfrac{1}{\left[\left(\dfrac{12021}{25995}\right)^{1.25} + \left(\dfrac{9011 + 539}{27300}\right)^{1.25}\right]^{.80}} - 1.0$

$= .37$

Summary of M.S. Results for Stringer 2

Item M.S.	Quick Analysis	N.A.C.A.	Melcone Ensrud
Local Strength	.23	.30	.37
Buckling	.32	.39	

Ring B (Between Stringers 1 and 2)

$f_{rg} = \dfrac{fp}{F_{cc}} - \dfrac{kf_c \tan}{A_{rg}/dt + .5(1-k)}$ (Eq.92)

This adds the fp ratio not shown in the Eq.(92) previously but which applies when any primary loads are present on the ring. Using average values of the two panels (a and c) on each side of the ring, (fp and F_{cc} would be for the critical flange)

$f_{rg} = \dfrac{.48(4640)\tan 24.7°}{.134/15 \times .025 + .5(1-.48)} = -7,844$

$f_{rgMax} = 1.0$, $f_{rgMax} = 7,844$ (Fig.C11.21)

$F_{rg} = NxC = 14000 \times .883 = 12,362$ (Fig.C11.38)

M.S. = 12362/7844 -1.0 = .58

Attachments

Assuming a splice in the skin along stringer 1, the load/in is larger for panel a

Load/in = $4640 \times .025 [1 + .51(1/\cos 25.4 - 1)]$

$= 122$ (Eq.99)

Load/attachment = 122(.75) = 92 lbs

P_{all}/attachment = 356 lbs   (joint data)

M.S. = 356/92 - 1.0 = High

There is also the normal loading/in of

Load/in = .22(.025)(64000) = 352 lbs/in
$$\text{(Eq.102)}$$

Load/attm't = 352(.75) = 264 lbs

P_{all}/attm't = 197 lbs (Art.D1.26, Table A)

$$M.S. = 197/264 -1.0 = -.25$$

For the required M.S. of .15 the rivet spacing would have to be reduced to about .48 in.

For a splice along Ring B in the region of panel b

Load/in = 5000x.025$\left[1+.46(1/sin24.8° -1)\right]$
= 205 lbs/in   (Eq.100)

Load/rivet = 205(.75) = 154 lbs

$$M.S. = 356/154 -1.0 = 1.31$$

The tension M.S. here is the same as for the longitudinal splice above (-.25) and would also require the above .48 spacing

Determination of α in the Panels

Panel a: k = .51, f_s = 4640
Rc = .60,   M = 216,000

$$\epsilon_{rg} = -\frac{1}{10.7\times10^6}\left[\frac{.51(4640)\ tan\alpha}{.134/15x.025 + .5(1-.51)}\right]$$
$$\text{(Eq.93)}$$
$$= -.000367\ tan\alpha$$

$$\epsilon_{str} = \frac{1}{10.7\times10^6}\left[-\frac{216,000(17.32)}{276} - \frac{.51(4640)\ cot\alpha}{.094/7.85x.025 + .5(1-.51)(.60)}\right]$$
$$\text{(Eq.89)}$$
$$= -.001267 - .000353\ tan\alpha$$

$$\epsilon_{sk} = \frac{4640}{10.5\times10^6}\left[\frac{2(.51)}{sin2\alpha} + (1-.51)(1 + .33)\ x\ sin2\alpha\right]\ \text{(Eq.97)}$$
$$= .000451/sin2\alpha + .000288\ sin2\alpha$$

$$tan^2\alpha = \frac{\epsilon_{sk} - \epsilon_{str}}{\epsilon_{sk} - \epsilon_{rg} - (7.85/15)^2/24}$$

$$= \frac{\epsilon_{sk} - \epsilon_{str}}{\epsilon_{sk} - \epsilon_{rg} - .011412}\ \text{(Eq.98)}$$

After several trials it is found that when α = 25.4° is used in the strain equations   the resulting value of α from Eq.(98) is also 25.4°, hence $\alpha = \underline{25.4°}$ for panel a

Panel b: k = .46, f_s = 5,000
Rc = .69,   M = 216,000
and
ϵ_{rg} = -.000342 tanα

ϵ_{str} = -.001123 - .000323 cotα

ϵ_{sk} = .000438/sin2α + .000342sin2α

Proceeding as for panel a, α_b = 24.5°.

Panel c: k = .45, f_s = 4.640
Rc = .69,   M = 171,000

Proceeding as for panel a, α_c = 24.0°.

These values of α were used in the previous calculations of stresses due to diagonal tension action.

Final Note

To illustrate the analyses, only the region in the upper portion of the shell has been considered, where the stringers are more critical. The shear is higher in the panels near the neutral axis, so the panels, rings and splice attachments will be more critical there.

LONGERON SYSTEM

C11.35a Longeron System in Diagonal Tension

The longeron structural system is somewhat simpler from a total analysis standpoint. This is because there are fewer members carrying the axial loads and not as many shear panels with varying shear loads. This type of structure may, or may not, be the optimum arrangement from a weight and manufacturing cost consideration for a particular airplane; that requires an optimization study. The methods of analysis presented here would, however, have a place in calculations for such a study.

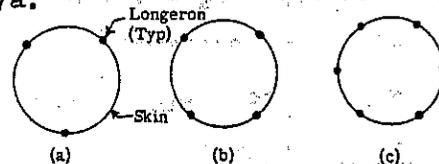Some typical types of longeron structural systems cross-sections for a fuselage are shown in Fig.C11.44a. and C11.47a.

Fig.C11.44a   Longeron System Structures

Fig.(a) shows the minimum arrangement as to the number of longerons, since at least three axial members are needed for equilibrium when bending moments in more than one plane are present. However, this does not provide a "fail-safe" design, since failure of any one member will not leave a structure capable of withstanding some arbitrary required percentage (usually 60-67%) of the design ultimate loads. The system

shown in Fig.44b is capable of doing this
and is the minimum type acceptable from
the fail-safe standpoint (four longerons)
Four to eight longerons are normally used
depending upon other design and manufact-
uring factors.

The longeron system, however, re-
quires more closely spaced rings than
does the stringer system. The spacing is
set after trade-off studies are made and
is usually four to eight in. depending up-
on the size of the fuselage. The rings
support the skin, dividing it into small-
er panels. They also support the longer-
ons in the same manner that "uprights"
support the flanges in a plane web beam,
but not in a radial direction. There are
no "floating" rings in the longeron sys-
tem.

After buckling the skin has tension
folds which , rather than being "flat" as
in the stringer system, lie on a hyperbo-
loid of revolution. That is, they flat-
ten diagonally between the closely spaced
rings (see Ref.3 and 7). In this system
d<h, see Fig.C11.34.

C11.36a Analysis of Longeron System in Diagonal Tension

The engineering procedure for calcu-
lating the stresses and allowables for
the longeron system is similar to that
for the stringer system. The reader will
note the differences.

1. First, at any bay being checked one
determines the primary internal loads
distribution in the longerons and shear
panels, due to the primary applied loads,
using engineering bending theory or a fi-
nite element analysis. Effective skin
per Eq.(83) is used with the longerons in
compression.

2. Next, one determines the shear buck-
ling stresses in the skin panels. Since
compression stresses are often present,
pure shear buckling does not occur. Thus,
as discussed for stringers, some rational
interaction is used to obtain a "reduced"
shear buckling stress. This can be done,
for example, by using some "average" com-
pression in the panel, weighted toward
the high side for conservatism. Thereby
the interaction method of Art.C11.32 can
be used where

$$R_c = \frac{-\frac{B}{A} + \sqrt{(\frac{B}{A})^2 + 4}}{2} , \text{ as in Eq.(76)}$$

and A is determined for a curved panel of
length "d" between rings and height "h"
between longerons measured along the cir-
cumference, as in Fig.C11.34. B is the
ratio f_c/f_s for the particular loading

condition being investigated. The comp-
ression stress is calculated for no skin
buckled. Then, as in Eq.(75), the re-
duced shear buckling stress is

$$F'_{scr} = R_c F_{scr}$$

The effective skin areas are reduced by
the shear stresses, per Eq.(83)

When tension strains are present with the
shear then, as in Eq.(77)

$$R_T = 1.0 + f_t/2F_{cr}$$

and

$$F'_{scr} = R_T F_{scr} , \text{ as in Eq.(79)}$$

3. Next, the loading ratio, f_s/F'_{scr}, can
be calculated using F'_{scr} as determined in
2 above.

4. The diagonal tension factor, k, is ob-
tained from Fig.C11.19.

5. The total axial stress in the longeron
can be written as follows

$$f_L = f_P - f_{D.T.}$$

$$= f_P - \frac{kf_s ht \cot\alpha)_a +}{2A_L + (.5ht(1-k)R_c)_a +}$$

$$\frac{kf_s ht \cot\alpha)_b}{2A_L + (.5ht(1-k)R_c)_b} - (113)$$

where

f_P = primary stress from step (1),
(+) if tension and (-) if comp.

A_L = Longeron Area

and

k, f_s, $\cot\alpha$, R_c, R_T, h, and t are as
previously defined. One set, subscript
(a), is for the panel above the longeron ,
and the other, (b), for the panel below it.

6. The average stress in the supporting
ring (or frame) due to diagonal tension is
given by the following formula (and note
that this is different from that in the
stringer system)

$$f_{rg} = - \frac{kf_s \tan\alpha}{\frac{A_{rge}}{dt} + .5(1-k)} ---- (114)$$

where (as in Eq.(58))

$$A_{rge} = A_{rg}/(1 + (e/\rho)^2)$$

This formula is similar to that for the
effective area of a single upright in a
plane web system, Art.C11.20) where

e = distance from ring c.g. to the
skin meanline

ρ = radius of gyration of the ring

cross-section about an axis parallel to the skin.

Equation (114) assumes that k, f_s, d, t, etc. are the same for the panels on each side of the ring. If not, then the average value should be used, otherwise f_{rg} must be written as the sum of two effects, as was done for the longeron in Eq.(112).

If the ring (or frame) also has internal loads due to the primary applied loads, then a term f_p should be included in Eq.(114, as discussed for Eq.(108). This is most likely to be significant for the larger "frames" rather than for rings

The maximum stress, f_{rgMax}, in the ring will be

$$f_{rgMax} = f_{rg}(\frac{f_{rgMax}}{f_{rg}}) \quad - - - - (115)$$

where f_{rgMax}/f_{rg} is from Fig.C11.21.

7. The diagonal tension angle, α, for each panel (needed for the various equations) can be calculated in two ways for the longeron system. The quickest method, for preliminary sizing particularly, is to determine α directly from Fig.C11.45. The more accurate, but more tedious, is similar to that shown for the stringer system, as follows

$$\epsilon_{rg} = \frac{1}{E_c}\left[-\frac{kf_s \cot\alpha}{A_{rge}/dt + .5(1-k)}\right] \quad - - - (116)$$

$$\epsilon_L = \frac{1}{E_c}\left[f_p - \frac{kf_s\cot\alpha}{A_L/ht + .5(1-k)R_c}\right] \quad - - (117)$$

$$\epsilon_{sk} = \frac{f_s}{E}\left[\frac{2k}{\sin 2\alpha} + (1-k)(1+\mu)\sin2\alpha\right] - (118)$$

where f_p, due to primary loads, is negative when in compression.

The equation for α is slightly different from the stringer system

$$\tan^2\alpha = \frac{\epsilon_{sk} - \epsilon_L}{\epsilon_{sk} - \epsilon_{rg} + (d/R)^2(\tan^2\alpha)/8} \quad -(119)$$

α is determined by successive trials as discussed for the stringer system. For the initial trial a value for α of 30° - 35° is reasonable, or use the value from Fig.C11.45.

8. Strength checks can then be made as follows
Longerons

The longeron acts as either a column or a beam-column, supported by the major frames (not by the rings) which have some spacing, L (which is much larger than d).

If the longeron is "straight" between the frames and has no radial loads from any ring, it can be analyzed as a column. If it has curvature between frames or radial loads from any ring it is a beam-column. In either case, although it may be continuous across supporting frames, it is usually conservatively assumed to be pin ended and of length L.

Column Analysis

$$P_{Long} = P_p - P_{D.T.}$$

$$= f_p(A_L + A_{esk}) - \left[(kf_sht \cot\alpha)_a/2 \right.$$
$$\left. + (kf_sht \cot\alpha)_b/2\right]$$

$$P_{cr} = F_{cr}(A_L + A_{esk}) - - -(121) \quad ---(120)$$

where f_p = primary axial compression (-) stress, A_{esk} is per Eq.(83), F_{cr} is per Eq.(C7.31) or Fig.C7.33, with $F_{cs} = F_{cc}$ per Art.C7.30, with L distance between major frames and ρ calculated with A_{esk}. Then,

$$M.S. = P_{cr}/P_{Long} - 1.0$$

Beam-Column Analysis

If the longeron is a beam-column as described above, local failure must be checked for the critical compression flange stress which is

$$f = f_c + f_{D.T.} + Mc/I \quad - -(122)$$

where f_c is the primary compression (-) stress, and M' is the bending moment due to beam-column action including A_{esk}. M' will cause tension (+) in one flange and compression (-) in the other. Then

$$M.S. = 1/(R_c + R_{D.T.} + R_{bend}) - 1.0$$

where R_c and R_{bend} are per Art.C3.18, Method 1 and $R_{D.T.} = f_{D.T.}/F_L$ where F_L is from Fig.C11.38.
Or,

$$M.S. = \frac{1}{\frac{f_c + Mc/I}{F_c} + \frac{f_{D.T.}}{F_L}} - 1.0$$

where F_c is per Art.C3.18, Method 2, The larger of the above M.S. is used. $F_{D.T.}$ is defined in Eq.(113).

For a longeron fully supported (in two directions), as in Fig.C11.47a, there is no column or beam-column action since M' = 0. Therefore

$$M.S. = 1/(f_c/F_{cc} + f_{D.T.}/F_L) - 1.0$$
$$- - - -(123)$$

Fig.C11.47a Fully Supported Longeron (b)

Rings

$$M.S. = F_{rg}/f_{rg_{Max}} - 1.0$$

Where F_{rg} is per Fig.C11.38

If the rings have stresses, f_p, due to any primary loads then

$$M.S. = 1/(f_p/F_{cc} + f_{rg_{Max}}/F_{rg}) - 1.0$$

Skins

Strength check for skin rupture

$$M.S. = F_s/f_s - 1.0$$

where F_s is per Fig.C11.42

Permanent Buckling

Usually no permanent buckling is allowed at limit load.

$$M.S. = F_{sp.B.}/f_s - 1.0$$

where $F_{sp.B.}$ is per Fig.C11.46

General Instability

$$M.S. = F_{s_{Inst}}/f_s - 1.0$$

where $F_{s_{Inst}}$ is per Fig.C11.39. Note that no effective skin is used and that f_{Long} is limited to .34 at most. A M.S. of at least .15 is recommended.

Attachments

The margins of safety for the attachments are calculated in the same manner as discussed for the stringer system.

C11.37a Example Problem

Determine the following margins of safety for the structure in Fig.C11.48a and its ultimate applied loads.

a) Skin rupture for panels a and b

b) Skin permanent buckling

c) Interrivet buckling along longeron 1

d) General instability based on panel b

e) Longeron 1

f) Ring at A between longerons 1 and 2

g) Fasteners along longeron 1 assuming skin is spliced there

h) Fasteners along ring A, assuming skin is spliced there

I) Same as (g) assuming no splice there.

As for Example Problem 1, the primary loads are determined for, both, the condition of no skin buckling and then for the skin buckled. The following table presents those internal loads and geometry needed for the above analyses.
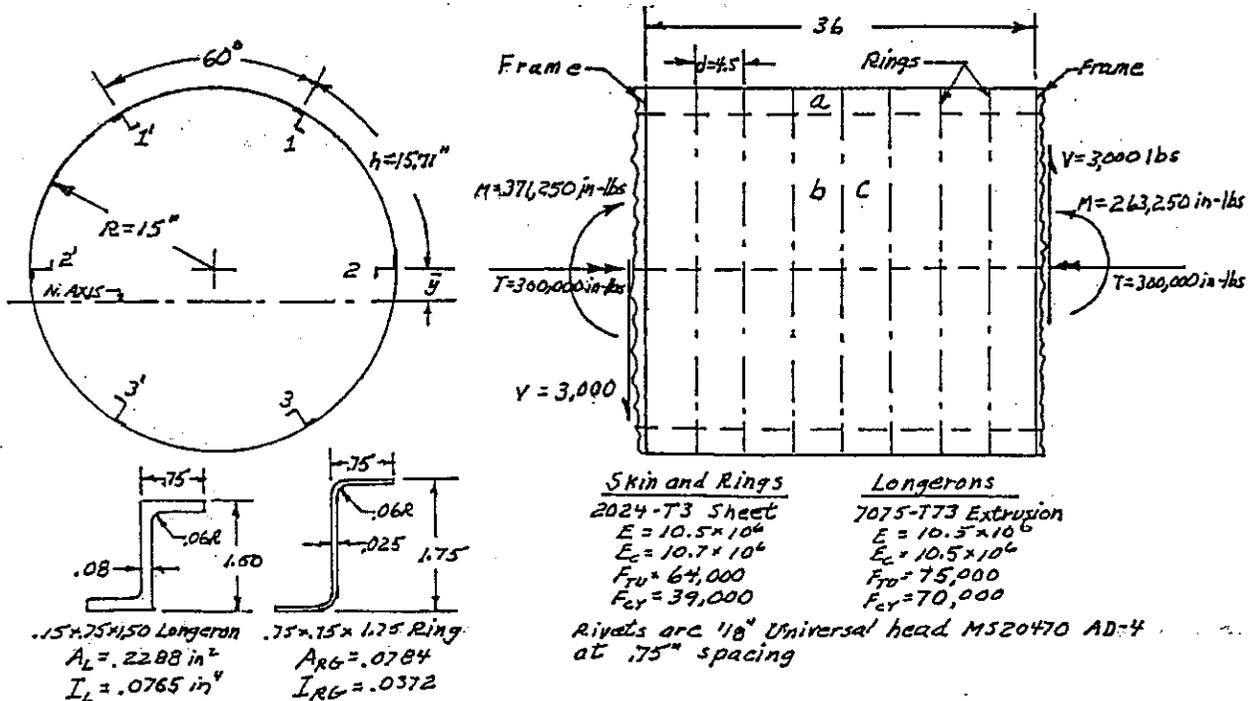
Fig.C11.48a Shell with Longeron Construction for Example Problem

Table C11.3 Internal Loads and Geometry

Condition of Skin	q_a lb/in	q_b lb/in	q_c lb/in	y_a in	y_a in	y_b in	y_c in
No Buckling	212	263	263	0	14.39	9.09	9.09
Buckled	212	264	264	3.30	17.70	12.39	12.39

Table C11.3 (Continued)

Condition of Skin	y_{Long1} in	y_{Long2} in	$M_{a,b}$ in-lbs	M_c in-lbs	$I_{a,b}$ in^4
No Buckling	12.33	0	324,000	310,500	402
Buckled	15.63	3.30	324,000	310,500	261

Notes: (Same as for Table C11.2)

Skin Panel Analyses

The analysis is illustrated only for panel a, but results of a similar analysis for panel b are presented later on.

Panel a

$Z = b^2(1-\mu^2)^{.5}/Rt = 4.5(1-.33^2)/15(.025) =$
$a/b = 15.71/4.5 = 3.49;\ k_s = 17.5;$ 51;
$F_{scr} = 17.5\pi^2 x10.7x10^6(.025/4.5)^2/$
  $12(1-.33^2) = 5,334 psi$ (Fig.C9.5)
$k_c = 19.5;$(Fig.C9.1);
$F_{ccr} = 19.5\pi^2 x10.7x10^6(.025/4.5)^2/$
  $12(1-.33^2) = 5,944\ psi$

For the non-buckled skin condition (to obtain R_c, k and R_c)

$f_c = M_a y_a/I_a = 317,250(14.39)/402 = 11,356$

$f_s = q_a/t = 212/.025 = 8,480$

$A = F_{ccr}/f_{scr} = 1.112$
$B = f_c/f_s = 11356/8480 = 1.339$
$B/A = 1.20$

$R_c = (-1.20 + \sqrt{1.20^2 + 4})/2 = .57$
$R_c^1 = .57(1.20) = .68$

$F'_{scr} = R_c F_{scr} = 3,040$

For the buckled skin condition,

$f_s = q_a/t = 212/.025 = 8,480$

$f_s/F'_{scr} = 8,480/3,040 = 2.79$

$300th/Rd = 300(.025)(2.0)/15 = 1.0$
$k = .59$ (Fig.C11.19)

Skin Rupture

$f_s = 8480;\ F_s = 21,100$ (Fig.C11.42)

  M.S. $= 21,100/8,480 - 1.0$

    $= \underline{1.49}$

Permanent Buckling (At Limit Load)

$f_{sLimit} = f_{sUlt}/1.5 = 8,480/1.5 = 5,653$

$4F_{scr}x10/E_cF_{cy} = 4x5334x10^8/10.7x10^6\ x$
    $39,000 = 5.11$

$F_{sP.B.}/F_{scr} = 1.3$ (Fig.C11.46)

$F_{sP.B.} = 1.3(5,334) = 6,934$

  M.S. $= 6,934/5,653 - 1.0 = \underline{.23}$

Interrivet Buckling, Along Longeron 1, a/b

$F_{ir} = \pi^2 x10.7x10^6/(.75/.58x.024)^2 = 39,473$
     (Eq.C7.22)

$f_c = f_{csk} + F_{D.T.} = 317,250(16.29)/261 +$
  $10,445$ (see "Longeron") $= 30,246$

  M.S. $= 39,473/30,246 - 1.0 = \underline{.31}$

General Instability, Based upon Panel b

Proceeding per Fig.C11.39 notes and data;

$$\frac{\rho_L^{7/8}\rho_{rg}^{7/8} x 10^4}{(dh)^{\frac{1}{4}}B} = \frac{34^{7/8}x.689^{7/8}x10^4}{(4.5 x 15.71)^{1/2}(115)} = 43.83$$

$F_{sInst}x10^3/E_c > 3$

Hence, $F_{sInst} > 3x10.7x10^6/10^3 > 32,000$ psi

$f_s = 10,560$

  M.S. $= 32,000/10560 - 1.0 = \underline{High}$

Ring (Between Panels b and c)

$A_{rg} = .0784;\ I_{rg} = .0372;\ \rho_{rg} = .689$
$e = .875(.0125) = .888$

$A_{rge} = .0784/(1+(.888/.689)^2) = .0295$ (Eq.59)

$f_{rg} = \dfrac{.555(10560)\ tan36.05^\circ}{.0295/4.5x.025 + .5(1-.555)} = 8,801$
      (Eq.114)

$f_{rgMax}/f_{rg} = 1.30$ (Fig.C11.21 for $k_{av} = .555$)

$f_{rgMax} = 1.30(8801) = 11,441$

  M.S. $= 11,743/11,441 - 1.0 = \underline{.03}$

Longeron 1

The longeron is supported by the major frames, 36 in apart. This is the only support in the radial direction. Per Eq.(113) and data for panels a and b,

$f_L = f_P - f_{D.T.}$

$= \dfrac{-317250(15.63)}{261} - \left[\dfrac{.59(8480)(15.71)}{2(.2288) + .5(15.71)}\right.$

$\dfrac{(.025)\ cot35.8^\circ + .56(10560)(15.71)}{(.025)(1-.59)(.56) + .5(15.71)(.025)}$

$$\frac{(.025)\cot 36.1^\circ}{(1-.56)(.73)} = -\underset{(f_p)}{18999} - \underset{(f_{D.T.})}{10445}$$

$$= -29,444 \text{ psi}$$

If Longeron 1 were supported in two directions (which it isn't) like the one (b) in Fig. 11.47a, then Eq. (123) would apply with $f_p = 371,250(15.63)/261 = 22,232$ (at the left end). Then

$$M.S. = \frac{1}{\frac{22232}{62690} + \frac{10445}{26624}} -1.0 = \underline{.34}$$

Buckling Check

This uses Eq. (120) and (121). For a longeron the effective skin width is (Eq. 1, p.A19.22)

$$2w = 1.9t\sqrt{E_c/f_c}$$

$$= 1.9 \times .025\sqrt{10.5 \times 10 /29444} = .89 \text{ in}$$

so

$$Ae_{sk} = .89(.025) = .0223 \text{ in}^2$$

and using Fig. C7.26,

$$\rho_{Long} = 1.04(.51) = .59 \text{ and } L'/\rho = 61.0$$

For the Longeron $F_{cc} = 62,690$ (Art. C7.30)

So, $F_{cr} = 62690 - 62690^2 (61)^2/4\pi^2 \times 10.5 \times 10^6$
$= 27412$

Since this is $< F_{cc}/2$, use

$$F_{cr} = \pi^2 \times 10.5 \times 10^6/61^2 = 27850$$

$P_{cr} = 27850(.2288+.0243) = 6,993 \text{ lbs}$ (Eq. 121)

$$P_{Long} = -18999(.2288+.0243) - [.59(8480$$

$$(15.71)(.025)(1.387)/2 +$$

$$.56(10560)(15.71)(.025)(1.371)/2]$$

$$= -7736 \text{ lbs (comp.)}$$

So

$$M.S. = 6993/7736 -1.0 = \underline{-.10}$$

So, the longeron would need to be made larger (more thickness).

Beam-Column Check

The Example Problem does not have any beam-column loadings. If it did, the M.S. would be much less than the -.10 for buckling (beam-column margins are always less than for the column). To find the M.S. for this particular case (where $P > P_{cr}$) one must find the common factor, A, by which all of the shell applied loads must be multiplied to give a M.S.

of zero (and A will be <1.0). The M.S. will then be A-1.0 (Art. C3.18).

However, to illustrate the general procedure assume that only the applied bending moments on the shell are reduced 30% to be 184,275 and 259,875, and that the data in Table C11.3 still applies (some of it will change slightly). Then, proceeding as before

$$f_L = -245025(15.63)/261 - 104455$$

$$= -14673 - 10445 = 25118$$

$$2w = 1.9(.025)\sqrt{10.5 \times 10^6/25118} = .97 \text{ in}$$

$$Ae_{sk} = .97(.025) = .0243 \text{ sq in}$$

$$P_{Long} = -14673(.2288+.0243) + 2965 = 6679$$

and Buckling M.S. $= 7049/6679-1.0 = \underline{.06}$

For the beam-column check assume that the longeron has a slightly curved installed shape, as in Fig. C3.33c with e = .10 in. Then, per the "approximate formula"

$$M' = 6679(.10)/(1-6679/7049) = 12724 \text{ "\#}$$

Per Fig. C10.15b formula

$$M_{ult} = \frac{[45000(.75 \times 1.5)^{.27}/(.75/.08)^{.79}]}{(70000/10.5 \times 10^6)^{.30}/.0604} = 10717$$

Then, per Method 1 of Art. C3.18,

$$M.S. = \frac{1}{\frac{6679}{7049} + \frac{12724}{10717}} - 1.0 = \underline{-.53}$$

Using Method 2, Art. C3.18

$$K = 1.19 \text{ (Fig. C3.8)}$$

$$F_c = 50000^* + \left[\frac{1.19-1.1}{1.50-1.1}\right](70000 - 50000^*)$$

$$= 54500$$

$$f = P/A + Mc/I = \frac{6679}{.2531} + \frac{14273(.75)}{.0765}$$

$$= 166320 \text{ psi (comp)}$$

So

$$M.S. = \frac{54500}{166320} - 1.0 = \underline{-.67}$$

Per Art. C3.18, the "better" M.S. of Method 1, -.53, would be used. Thus the longeron must be made larger (more thickness). Note the large negative margin caused by beam-column action, whereas the buckling margin was a small _positive_ one.

* This is the prop. limit stress; see page 38 footnote.

Shear Panel b Calculated Data

The following data for panel b were calculated as was illustrated for panel a

$f_s = 10,560;$ $F_{ccr} = 5,994;$ $F_{scr} = 5,334;$
$A = 1.112;$ $f_c = 317250(9.09)/402 = 7174;$
$B = .68;$ $R_c = .74;$ $R_c = .45;$ $F_{scr} = 3947$
$k = .56;$ M.S.$_{Rupt.} = \underline{1.01};$
M.S.$_{P.B.} = \underline{-.02};$ M.S.$_{1r} = \underline{.29}$

Attachments

The allowable load/rivet is the same as for the stringer system calculations.

a) For an assumed splice along Longeron 1 between panels a and b, the largest shear flow is 263 lbs/in

Load/in = $264(1+.56(1/\cos36.1°-1)) = 299$
Load/rivet = $299(.75) = 224$

M.S. = $356/224 -1.0 = \underline{.59}$

Due to tension field prying action

Load/in = $.15(.025)(64000) = 240$
Load/rivet = $240(.75) = 180$

M.S. = $197/180 -1.0 = \underline{.09}$

b) Along Ring, assuming panels b and c are spliced there

Load/in = $264(1+.56(1/\sin36.1°-1)) = 367$
Load/rivet = $367(.75) = 275$

M.S. = $197/275 - 1.0 = \underline{-.28}$

c) Along Ring for no splice there is no shear transfer, only a prying load

Load/in = $.22(.025)(64000) = 352$
Load/rivet = $352(.75) = 264$

M.S. = $264/352 - 1.0 = \underline{-.25}$
Hence, for (b) and (c) a smaller rivet spacing is needed, about .60 in.

Diagonal Tension Angle,

Panel a:

$$\epsilon_{rg} = \frac{1}{10.7 \times 10^6}\left[\frac{-.59(8480)\tan\alpha}{.0295/45 \times .025 + .5(1-.59)}\right]$$

$= -.001001 \tan\alpha$

$$\epsilon_L = \frac{1}{10.5 \times 10^6}\left[\frac{-317250(15.63)}{261} - \frac{.59(8480)}{.2288}\Bigg/ \right.$$
$$\left. \frac{\cot\alpha}{15.71 \times .025 + .5(1-.59)(.56)}\right]$$

$= -.00181 - .000683 \cot\alpha$

$$\epsilon_{sk} = \frac{8480}{10.7 \times 10^6}\left[\frac{2(.59)}{\sin2\alpha} + (1-.59)(1+.33)\sin2\alpha\right]$$

$= .000935/\sin2\alpha + .000431\sin2\alpha$

$$\tan^2\alpha = \frac{\epsilon_{sk} - \epsilon_L}{\epsilon_{sk} - \epsilon_{rg} + (4.5/15)^2 \tan^2\alpha/8}$$

$$= \frac{\epsilon_{sk} - \epsilon_L}{\epsilon_{sk} - \epsilon_{rg} - .011250 \tan^2\alpha}$$

After several successive trials it is found that when $\alpha = 35.8°$ is used in the three strain equations, the resulting value of α per the last equation is 35.8°, hence $\alpha = 35.8°$

Panel b:

Proceeding as for panel a, the following data are obtained

$k=.56;$ $f_s=10560;$ $R_c=.73$ which result in

$\epsilon_{rg} = -.001134 \tan\alpha$
$\epsilon_L = -.001809 - .000758 \cot\alpha$
$\epsilon_{sk} = .001105/\sin2\alpha + .000578 \sin2\alpha$

Proceeding as for panel a, $\alpha_b = 36.1°$.

Panel c:

$k=.55;$ $f_s=10560;$ $R_c=.744;$ $M=310,500$

Proceeding as for panel a, $\alpha_c = 36.0°$.

C11.38a Summary

The effect of diagonal tension is to generate additional compressive stresses in the stringers, longerons and rings or frames, which if not accounted for will cause early failure.* The effect of compression stresses along with the shear stresses increases these effects, while tension stresses will reduce them.

The exact magnitude of the various diagonal tension effects throughout a network of skin panels defies simple evaluation, particularly when both shear and axial stresses vary from panel to panel. However, some rational approach is necessary to complete the design, or specimens for test programs, and the approaches given in this chapter represent one such procedure. Where margins are small, element tests are in order.

The stringer system is usually found, for example, in fuselage and wing structures where there are relatively few large "cutouts" to disrupt the stringer continuity. This is more likely for transport, bomber and other cargo carrying aircraft. The longeron system is more efficient and

* And also increased skin panel and fastener loads

suitable where a large number of "quick access" panels and doors or other "cut-outs" are needed to service various systems rapidly. These would "chop up" a stringer system very severely, making it inefficient and also more expensive from both a weight and manufacturing standpoint. Therefore, longeron systems are usually found in fighter and attack type aircraft, and in others having such features. There are, of course, other factors influencing the choice of structural arrangement.

Some further notes concerning this general subject are included in Chapter D3. These include "beef-up" of panels and axial members bordering cut-outs and non-structural doors, which is also related to "end bay" effects discussed in Art.C11.29.

Although tension field analysis has been discussed only for primary structure it can also significantly effect secondary structure such as flaps, ailerons and other control surfaces. For example, such surfaces usually have a relatively light trailing edge. Significant buckling of their skin can generate additional compressive loads in the trailing edge promoting buckling or local failure. A normal loading which bends the edge member inwards and generates additional loads in the supporting ribs is also present. Hence attention is needed here.

C11.39a Problems for Part 2

1. Recalculate the margins of safety for the stringer example problem assuming that the torsion on the shell is increased from 150,000 to 300,000 in-lbs For the stringer analyses use only the "Quick" and Melcone-Ensrud methods.

2. Recalculate the margins of safety for the longeron example problem assuming that the torsion on the shell is increased from 300,000 to 450,000 in-lbs Use only Fig.C11.45 for determining α.

C11.40a Problems for Part 1

The problems for Part 1 remain the same as in the textbook (p.C11.48).

The reader is encouraged to consult the references (p.C11.49), particularly (3), (4) and (9) for a broader understanding of the subject.

C8.1a Introduction

NASA CR-912, "Shell Analysis Manual presents a large amount of data and discussions for the buckling of monocoque

shells. Some of the more helpful data are presented in the following articles and figures. The reader is encouraged to consult CR-912 for a broader understanding of the subject.

C8.2a Buckling of Monocoque Cylinders Under Axial Compression

σ_{cr}/η is calculated per Fig.C8.8aa. Then F_{cr} is found by entering Fig.C8.9 with $(\sigma_{cr}/\eta)/F_{0.7}$, obtaining $F_c/F_{0.7}$ and then calculating $F_{ccr} = F_{0.7}(F_c/F_{0.7})$. The shell is then capable of withstanding an axial load of

$$P_{cr} = 2\pi R F_{ccr} t$$

C8.5a Buckling of Circular Cylinders Under Axial Load and Internal Pressure

When there is an internal (burst) pressure, p, along with an axial compressive load, the internal pressure increases C_c by an amount ΔC_c per Fig.C8.11a which increases σ_{cr}/η. F_{ccr} is then tained as in Art.C8.2a above. P_{cr} becomes

$$P_{cr} = 2\pi R F_{ccr} t + \pi R^2 p$$

C8.7a Available Design Curves for Bending Based on Experimental Results

σ_{cr}/η is calculated per Fig.C8.13aa. F_{bcr} is then found by entering Fig.C8.9 with $(\sigma_{cr}/\eta)/F_{0.7}$, obtaining $F_c/F_{0.7}$ and then calculating $F_{bcr} = F_{0.7}(F_c/F_{0.7})$. The shell can then withstand a bending moment of

$$M_{cr} = \pi R^2 F_{bcr} t$$

C8.8a Buckling Strength of Circular Cylinders in Bending with Internal Pressure

When there is an internal (burst) pressure, p, along with bending stresses the internal pressure increases C_b by an amount ΔC_b per Fig.C8.14a, which increases σ_{cr}/η. F_{bcr} is then obtained as in Art.C8.7a above. The shell is therefore capable of withstanding a bending moment of

$$M_{cr} = \pi R^2 F_{bcr} t + \pi p R^3/2$$

C8.9a External Hydrostatic Pressure

When there is a hydrostatic (collapse) pressure, p, σ_{cr}/η is calculated per Fig.C8.15a (the lateral plus axial pressure curve). F_{ccr} is then found by entering Fig.C8.9 with $(\sigma_{cr}/\eta)/F_{0.7}$, obtaining $F_c/F_{0.7}$ and then calculating $F_{ccr} = F_{0.7}(F_c/F_{0.7})$. The axial stress is one-half of the circumferential stress. F_{ccr} is in the circumferential direction so
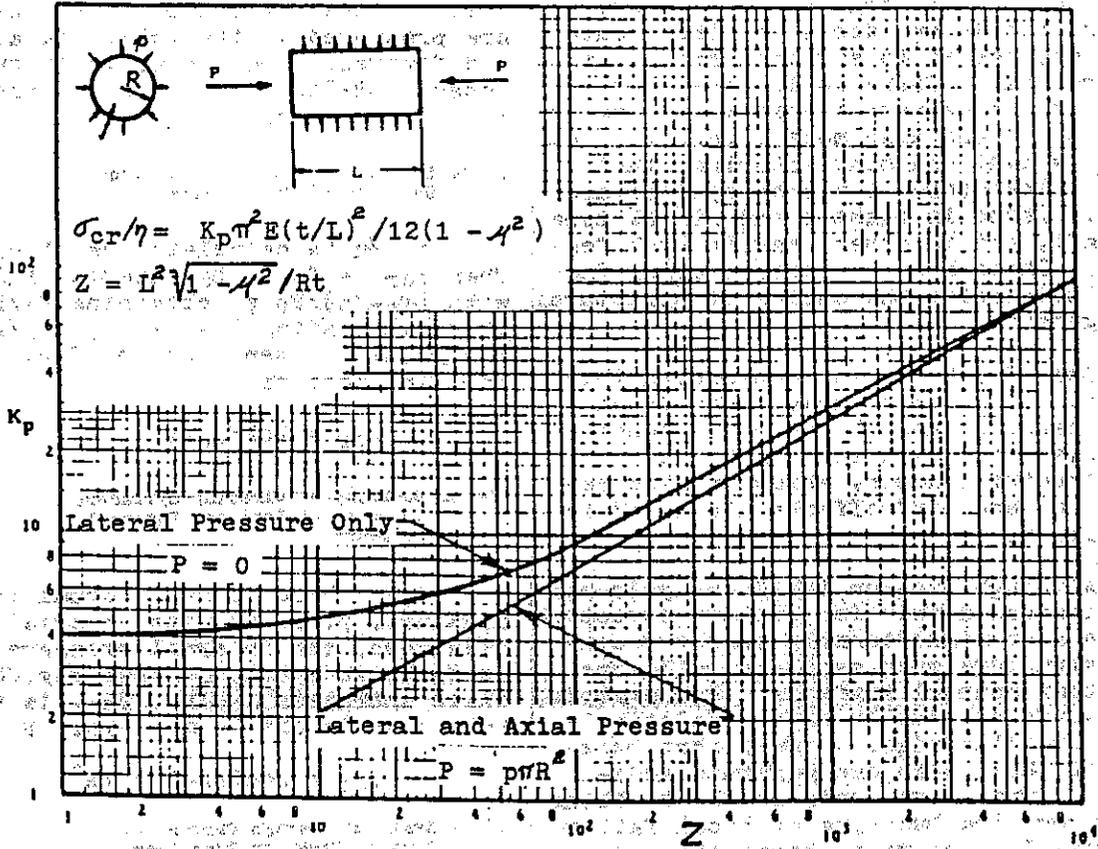
$$p_{cr} = F_{ccr} t/R$$

$$\sigma_{cr}/\eta = K_p \pi^2 E(t/L)^2/12(1 - \mu^2)$$

$$Z = L^2\sqrt{1 - \mu^2}/Rt$$

Fig.C8.15a Buckling Due to Hydrostatic (Collapse) Pressure, p

When there is a radial (lateral) collapse pressure, p, only, σ_{cr}/η is calculated per Fig.C8.15a using the upper curve. F_{ccr} is then obtained in the same manner as in Art.C8.9a above. F_{ccr} is in the circumferential direction, so

$$P_{cr} = F_{ccr}t/R$$

C8.11a Buckling of Circular Cylinders Under Pure Torsion

For this case τ_{cr}/η is calculated per Fig.C8.20a. F_{scr} is found by entering Fig.C8.19a with $\tau_{cr}/\eta F_{0.7}$, obtaining $F_s/F_{0.7}$ and then calculating $F_{scr} = F_{0.7}(F_{scr}/F_{0.7})$. The allowable torsion is then

$$T_{cr} = F_{scr}2\pi R^2 t$$

C8.13a Buckling of Circular Cylinders Under Pure Torsion with Internal Pressure

When there is an internal (burst) pressure, p, along with the torsion C_s is increased by an amount ΔC_s per Fig.C8.20b. This increases τ_{cr}/η and F_{scr} is obtained in the same manner as in Art.C8.11a above, as is P_{cr}.

C8.12a Buckling Under Transverse Shear

For the case of transverse shear, V, one proceeds as follows. Determine F_{scr} for torsion, as in Art.C8.11a or C8.13a and multiply it by 1.25 to determine F_{scr} for shear. Since $f_s = VQ/It$ one can solve this for V, for F_{scr} in place of f_s. For a cylinder this gives

$$V_{cr} = F_{scr}\pi Rt$$

C8.15a Buckling of Circular Cylinders Under Combined Load Systems

The following interaction curve applies for the general case, and can be used to determine the margin of safety by successive trials (Art.C1.13a).

$$R_c + R_p + R_{st}^2 + (R_s^3 + R_b^3)^{1/3} = 1.0$$

The subscripts c, p, st, s, and b refer to compression, collapse pressure, torsion, transverse shear and bending respectively. Including R_p to only the first power is probably conservative, but collapse pressure is seldom present with the others.

For certain cases, where some of the loadings are absent, the margin of safety

$$\sigma_{cr}/\eta = C_c Et/R$$

$$Z = L^2 \sqrt{1 - \mu^2} / Rt$$

Valid for
Z > 25 for Simply Supported Edges
Z > 80 for Clamped edges
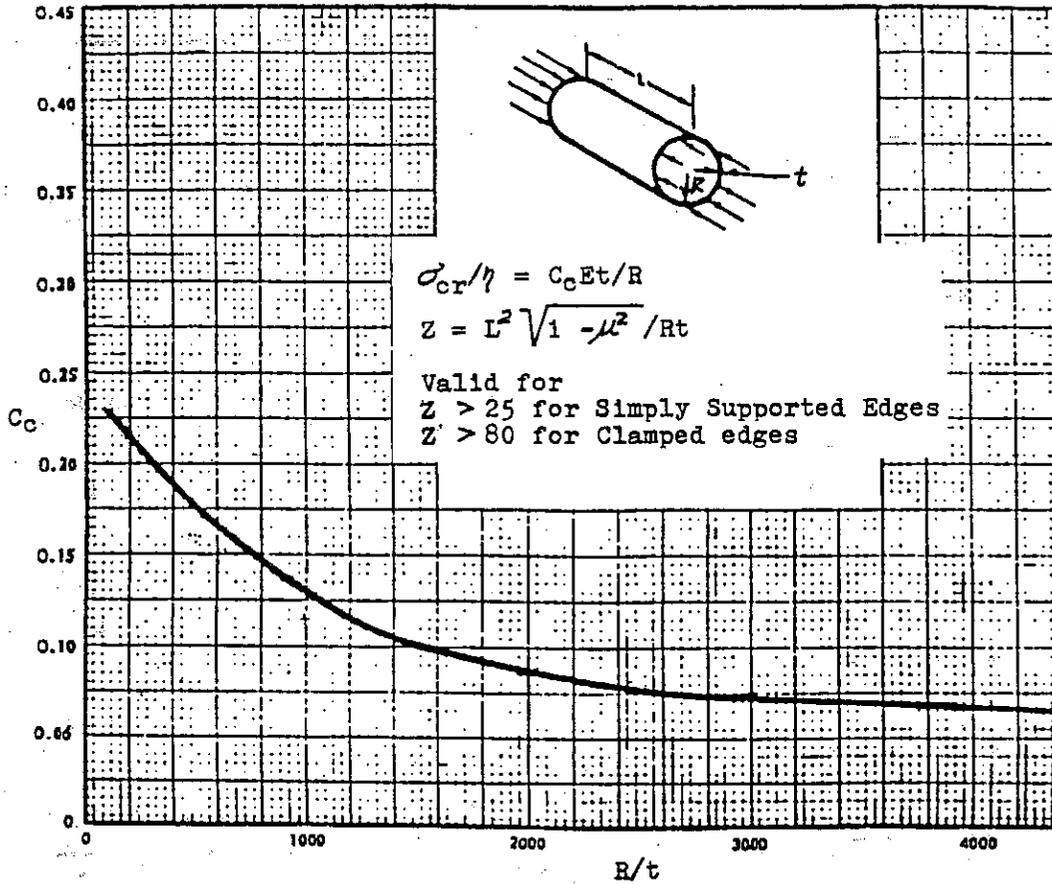
Fig.C8.8aa Buckling Stress Under Axial Load
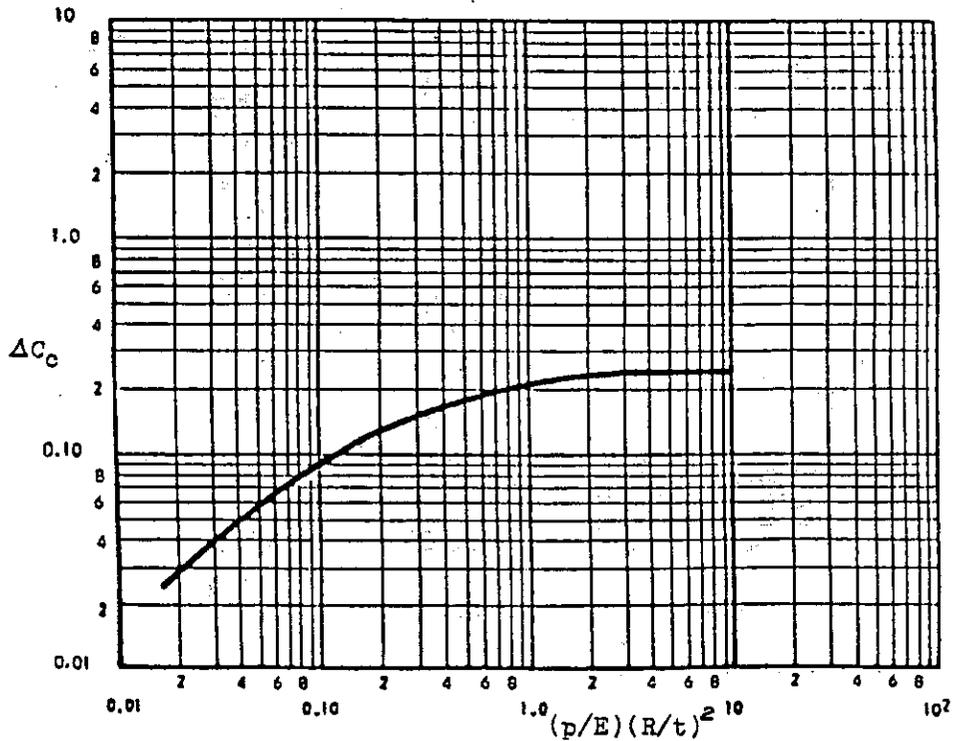
Fig.C8.11a Increase in C_c Due to Burst Pressure, p

$$\tau_{cr}/\eta = C_s E t / R Z^{1/4}$$

$$Z = L^2 \sqrt{1 - \mu^2} / Rt$$

Valid for
Z > 100 for Simply Supported Edges
Z > 100 for Clamped Edges
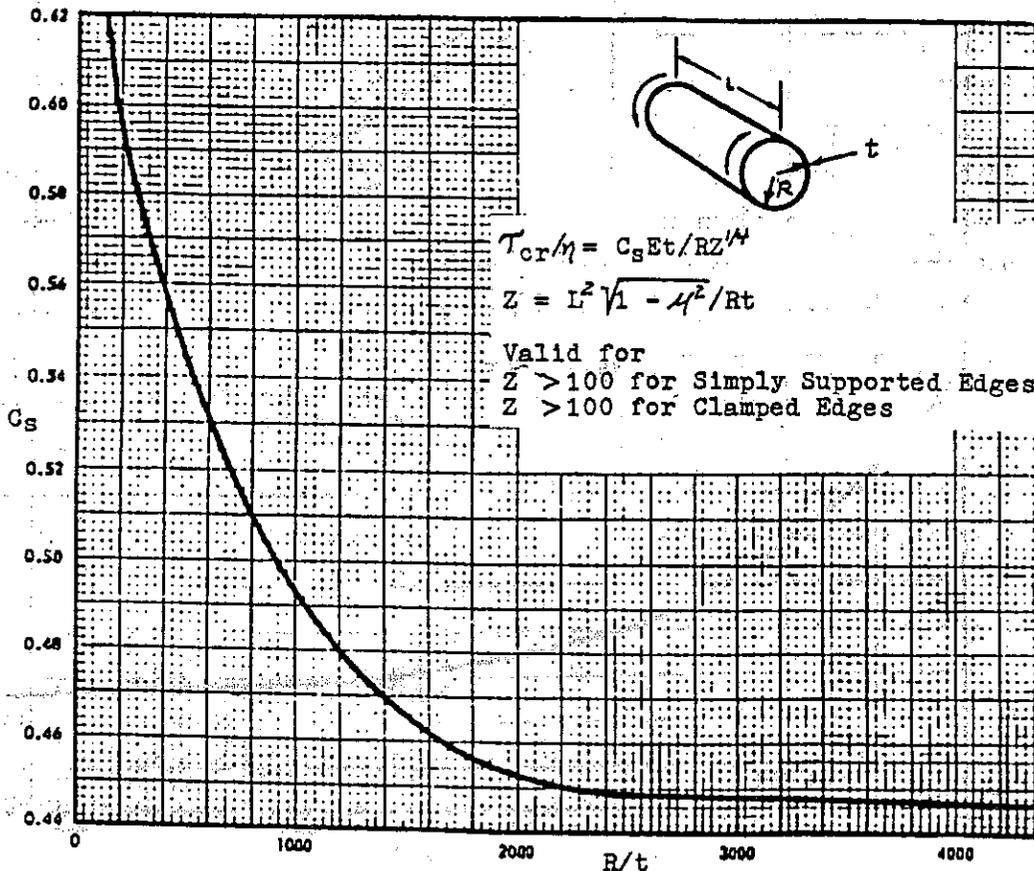
Fig.C8.20a   Buckling Due to Torsion

No External
Axial Load
(P = 0)

External Axial Load Balances
Longitudinal Pressure Load
$(P = p\pi R^2)$
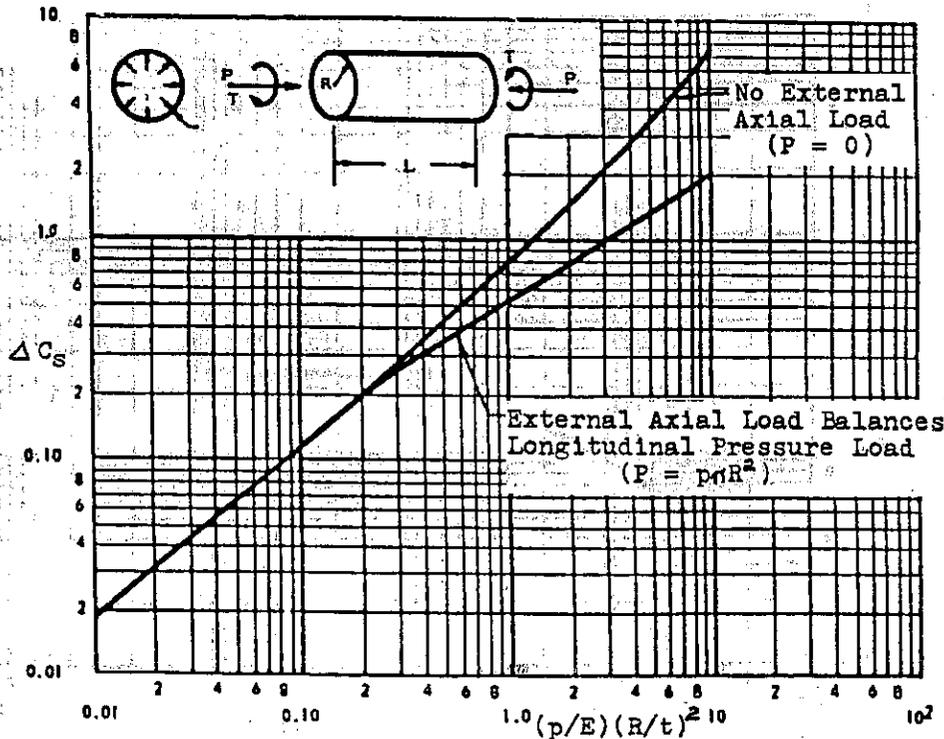
Fig.C8.20b   Increase in C_s Due to Burst Pressure, p

$\sigma_{cr}/\eta = C_b Et/R$

$Z = L^2\sqrt{1 - \mu^2}/Rt$

Valid for
$Z > 20$ for Simply Supported Edges
$Z > 80$ for Clamped Edges
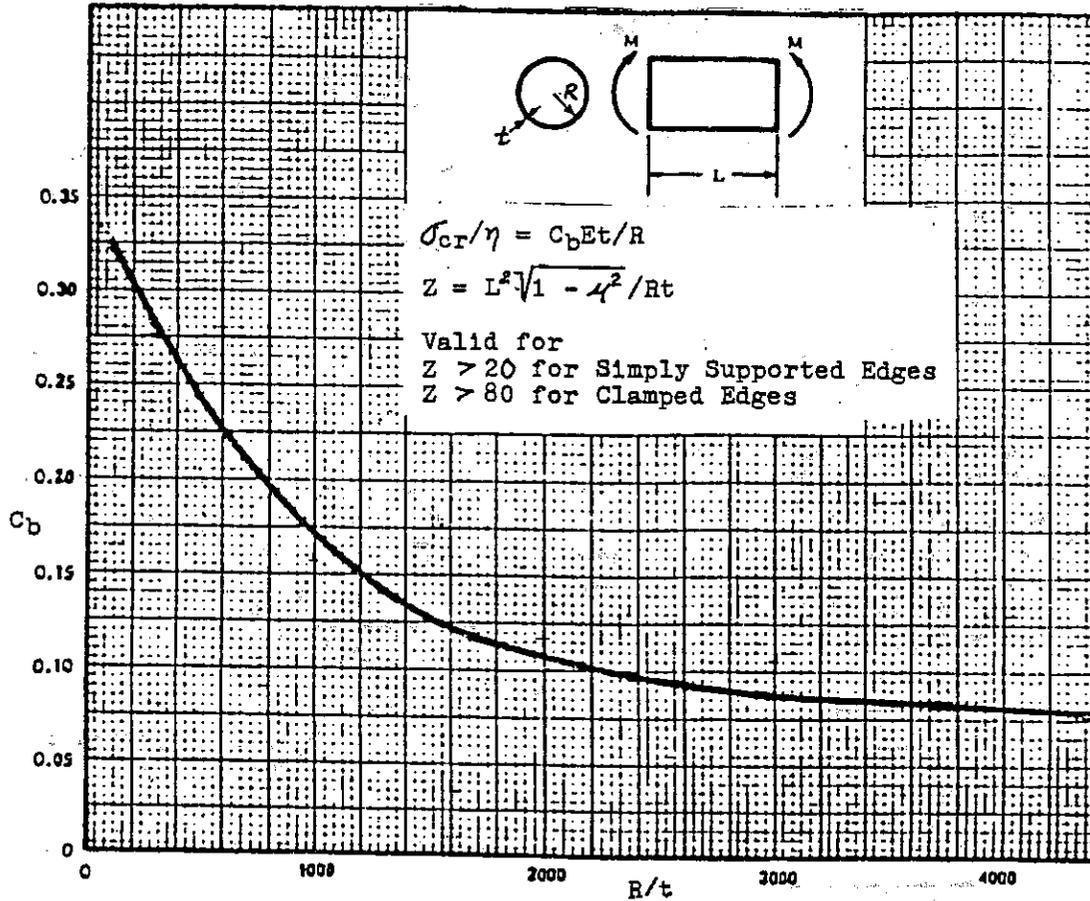
Fig. C8.13a   Buckling Stress Under Bending Moment
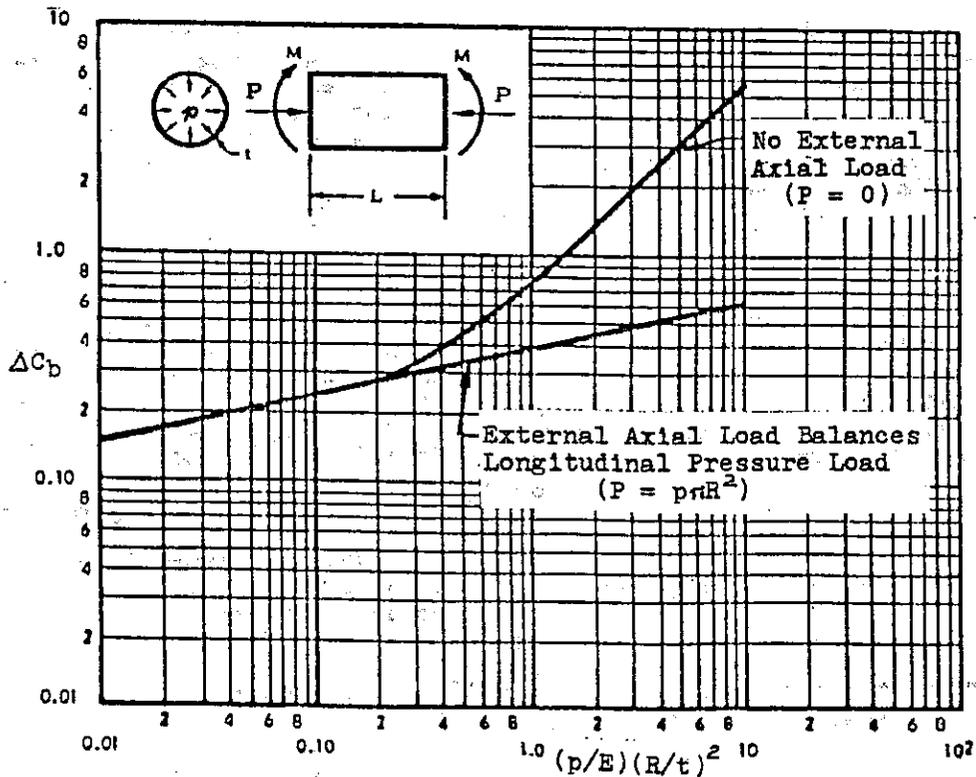
Fig. C8.14a   Increase in C_b Due to Burst Pressure, p

can be calculated directly by formula.

a) When $R_s = 0$

$$M.S. = \frac{2}{R_c + R_p + R_b + \sqrt{(R_c + R_p + R_b)^2 + 4R_{st}}} - 1.0$$

b) When $R_b = 0$

$$M.S. = \frac{2}{R_c + R_p + R_s + \sqrt{(R_c + R_p + R_s)^2 + 4R_{st}}} - 1.0$$

c) When $R_{st} = 0 = R_c = R_p$

$$M.S. = 1/(R_s^3 + R_b^3)^{1/3} - 1.0$$

C8.19a Additional Design Buckling Curves for for Thin-Walled Conical Shells

σ_{cr}/η is calculated per Fig.C8.25a. F_{ccr} is then obtained as for a cylinder in Art.C8.3a. F_{ccr} is at the small end of the conical shell, and

$$P_{cr} = F_{ccr} 2\pi R_1 t \cos\alpha$$
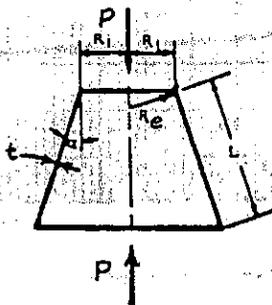
$\sigma_{cr}/\eta = C_c Et/R_e \qquad R_e = R_1/\cos\alpha$

$Z = L^2 \sqrt{1 - \mu^2}/R_e t$

Valid for
$Z > 25$ for Simply Supported Edges
$Z > 80$ for Clamped Edges
$\alpha < 75°$

To obtain C_c enter Fig.C8.8aa with R_e/t

Fig.C8.25a Buckling Stress Under Axial Load

When an internal (burst) pressure, p, is present along with the axial compressive stress, it increases C_c by an amount ΔC_c per Fig.C8.25b. which increases σ_{cr}/η. F_{ccr} is then obtained as above. The critical axial load is then

$$P_{cr} = F_{ccr} 2\pi R_1 t \cos\alpha + p\pi R_1^2$$

For conical shells subject to bending σ_{cr}/η is calculated per Fig.C8.26a, and F_{bcr} is then obtained as in Art.C8.3a F_{bcr} is at the small end of the shell. The bending stress is $f_b = Mc/I$, so

$$M_{cr} = F_{bcr} \pi R_1^2 t \cos\alpha$$
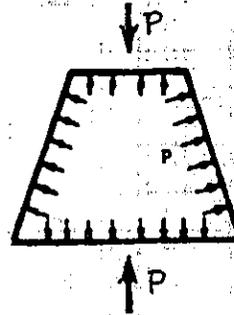
$\sigma_{cr}/\eta = (C_c + \Delta C_c)Et/R_e$

To obtain ΔC_c enter Fig.C8.11a with R_e/t

Fig.C8.25b Increase in C_c with Burst Pressure, p
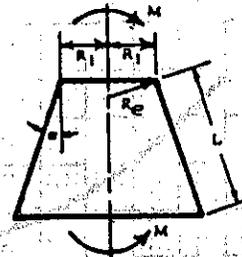
$R_e = R_1/\cos\alpha$

$\sigma_{cr}/\eta = C_b Et/R_e$

$Z = L^2 \sqrt{1 - \mu^2}/R_e t$

Valid for
$Z > 20$ for Simply Supported Edges
$Z > 80$ for Clamped Edges
$\alpha < 60°$

To obtain C_b enter Fig.C8.13a with R_e/t

Fig.C8.26a Buckling Stress Under Bending Moment

When an internal (burst) pressure, p is present along with the bending moment, it increases C_b by an amount ΔC_b per Fig. C8.26b. This increases σ_{cr}/η, and F_{bcr} is then obtained, as before, by entering Fig.C8.9 with $(\sigma_{cr}/\eta)/F_{0.7}$ and obtaining $F_c/F_{0.7}$. F_{bcr} is then calculated as $F_{0.7}(F_c/F_{0.7})$, and

$$M_{cr} = F_{bcr} \pi R_1^2 t \cos\alpha + p\pi R_1^3/2$$

For conical shells subject to torsion τ_{cr}/η is calculated per Fig.C8.27a and F_{scr} is then obtained by entering Fig.C8.19 with $(\tau_{cr}/\eta)/F_{0.7}$ and getting $F_s/F_{0.7}$. F_{scr} is then calculated as $F_{0.7}(F_s/F_{0.7})$, and

$$T_{cr} = F_{scr} 2\pi R_1^2 t$$

When an internal (burst) pressure, p is also present with torsion stresses the pressure increases F_{ccr}. However there is no data for calculating the increase.
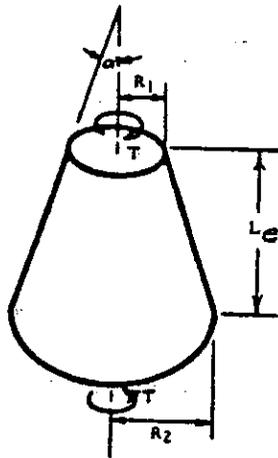
For conical shells subject to hydrostatic (collapse) pressure σ_{cr}/η is calculated per Fig.C8.28a. F_{ccr} is then obtained by entering Fig.C8.9 with $(\sigma_{cr}/\eta)/F_{0.7}$, obtaining $F_c/F_{0.7}$ and then
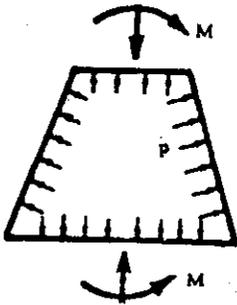
$$\sigma_{cr}/\eta = (C_b + \Delta C_b)Et/R_e$$

To obtain ΔC_b enter Fig.C8.14a with R_e/t

Fig.C8.26b Increase in C_b Due to Burst Pressure, p

$$\tau_{cr}/\eta = C_s E t R_e^2/R_1^2 \, R_e Z^{1/4}$$

$$R_e = \left[1 + (1 + R_2/R_1)^{.5}/\sqrt{2}\right.$$
$$\left. - (1 + R_2/R_1)^{.5}\sqrt{2}\right] R_1 \cos\alpha$$

$$Z = L_e^2\sqrt{1 - \mu^2}/R_e t$$

Valid for
Z > 100 for Simply Supported Edges
Z > 100 for Clamped Edges
$\alpha < 60°$

To obtain C_s enter Fig.C8.20a with R_e/t

Fig.C8.27a Buckling Due to Torsion

F_{ccr} as $F_{0.7}(F_c/F_{0.7})$. p_{cr} is then

$$p_{cr} = F_{cr} t \cos\alpha/R_2$$

For conical shells subject to a transverse shear, V, the buckling stress is obtained by determining the buckling stress due to torsion and then multiplying this by 1.25. Then, since $f_s = VQ/It$ and with f_s being at the neutral axis,

$$V_{cr} = F_{scr}\pi Rt/4$$

where F_{scr} = 1.25 times F_{scr} for torsion.
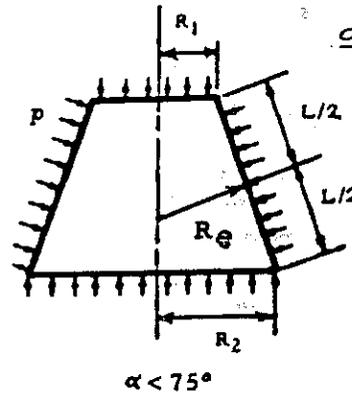
$$\sigma_{cr}/\eta = K_p \frac{\pi^2 E}{12(1-\mu^2)}$$

$$\left(\frac{t}{L_e}\right)^2 \frac{R_2}{R_e \cos\alpha}$$

$$R_e = \frac{R_1 + R_2}{2\cos\alpha}$$

$$p_{cr} = \frac{\sigma_{cr} t \cos\alpha}{R_2}$$

$$Z = \frac{L_e^2}{R_e t}(1 - \mu^2)^{1/2}$$

$\alpha < 75°$
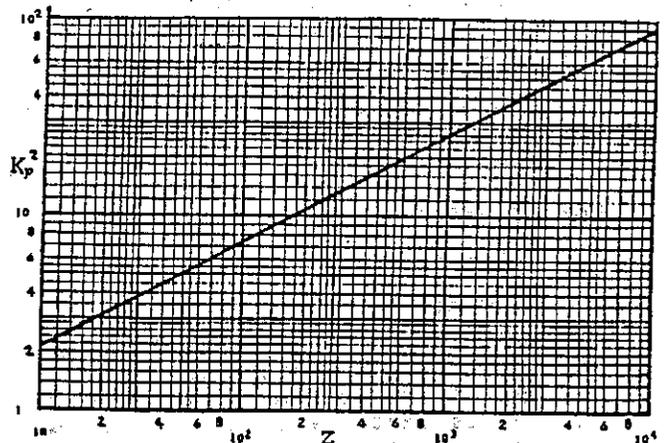
Fig.C8.28a Conical Shell, Collapse Pressure

C8.20 Buckling of Spherical Caps

For a spherical cap subject to a uniform collapse pressure, Fig.C8.29, the buckling stress can be calculated as

$$F_{ccr}/\eta = .175Et/R$$

F_{ccr} is found by entering Fig.C8.9 with $(F_{ccr}/\eta)/F_{0.7}$, obtaining $F_{ccr}/F_{0.7}$ and then calculating F_{ccr} as $F_{0.7}(F_{ccr}/F_{0.7})$. The critical pressure, p_{cr}, is then
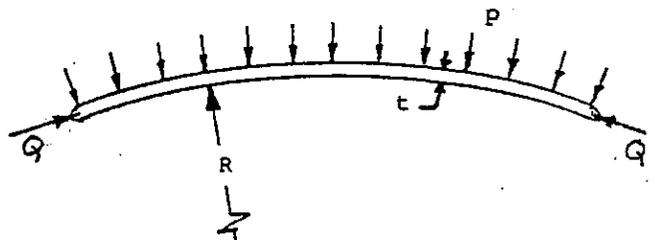
$$p_{cr} = F_{ccr} 2t/R$$

Fig.C8.29 Spherical Cap, Collapse Pressure

NASA CR-912 is recommended to the reader for additional data and discussions not only for shell buckling, but for much other helpful data about shell structures.

D1.2a Enonomy in Fitting Design

Also see Art.D3.9, items 8 and 12.

D1.3a Fitting Design Loads. Minimum Margins of Safety

Also see Art.C1.13a about design loads and margins of safety.

D1.4a Special or Higher Factors of Safety

Also see Art.C1.13a about design loads and margins of safety.

D1.5a Aircraft Bolts

Unfortunately, Art.D.15 and subsequent articles do not discuss single shear bolted joints. These are widely used in aerospace structures, such as for attaching skins to spar caps, skin splices etc. See Art.D1.28, D1.8aa and D3.5a for helpful information about these cases, and also Art.D1.27. *

D1.6a Aircraft Nuts

Also see Art.D1.27 and Table A46

D1.8aa Bushings

The lug or fitting should be designed so that the required margin of safety will be present if the next size bushing is installed. If no bushing is present, the lug or fitting should be designed to show the required margin if a bushing is installed later on.

D1.12a Lug Strength Analysis Under Transverse Loading

For the case of concentric lugs (Fig.D1.11-a where e = W/2) see Art. D1.13a. For the allowable load at 90° (a transverse load) based on test data see Art.D1.13a below.

D1.13a Lug Strength Analysis Under Oblique Loads

For the case of concentric lugs (Fig.D1.11-a where e = W/2) Fig.D1.15 can be used to quickly determine the allowable load, P_θ for any angle from 0° to 90°. Only the calculated allowable axial load, P_o, is needed (Art.D1.11). P_θ is then calculated as

$$P_\theta = P_o(P_\theta/P_o)$$

The curve is based on a great number of tests and with different materials. As shown, the reduction factor varies from 1.0 for θ = 0° to .75 for θ = 90°. If the lug width increases as in Fig.D1.11-b, the curve gives a conservative allowable load. If it narrows, as with an eye-bolt

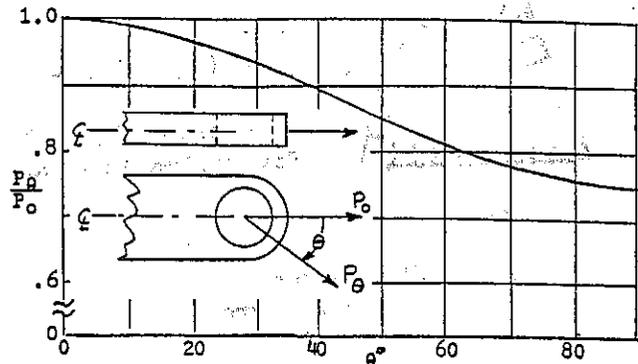type lug, the curve gives an unconservative allowable load.

Fig.D1.15a Concentric Lug Oblique Load Strength, P_θ

D1.27a The Importance of Good Clamp-up

It is important that the stress analyst and structural designer have a good understanding of the importance of clamp-up action as to shear joint strength, particularly for single shear joints which are so common in aerospace structures. Previous articles about riveted joints, D1.18 to D1.22, and bolted joints D1.16, have not discussed this important subject. As discussed later, lack of good clamp-up is why blind or countersunk or shaved head rivets and and blind, countersunk, thin head bolts or bolts with soft collars always result in joints having less strength/stiffness than do protruding head rivets or bolts with thick heads and nuts. It is also why the allowable joint loads with these must always be determined by tests rather than by calculations.* The following discussion discusses the reasons for this.

A fastener transferring a shear load in a typical single shear joint is shown in Fig.D1.41. If the fastener does not have a head (i.e., a pin), or otherwise does not clamp the two sheets together, the joint equilibrium and bearing stresses will be like that sketched in Fig.D1.42. The extremely high bearing stresses in the sheets at the faying surfaces will result in early yielding, a permanent set and a greatly reduced joint strength and yield load. Thus the cardinal rule is to never use any headless type pin or a bolt or rivet not providing good clamp-up.

Clamp-Up

When a bucked protruding head rivet or a conventional bolt with a tightened nut is used, the joint equilibrium and the resulting bearing stress distri-

---

* See p.A10 - A21 for bolted joint allowable data.
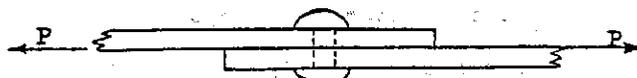
* For much such data see p. A10 - A21

Fig.D1.41   A Single Shear Joint
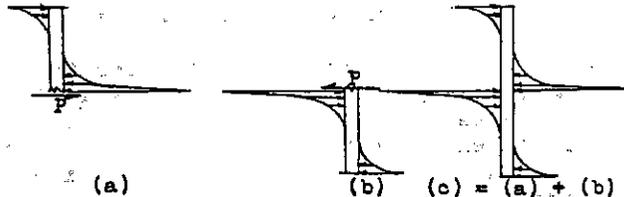

(a)   (b)   (c) = (a) + (b)

Fig.D1.42   Bearing Stresses Without Clamp-Up

bution are quite different, as shown in
Fig.D1.43. The presence of the tight
head provides clamp-up and thereby allows
the loads Q to be generated and balance
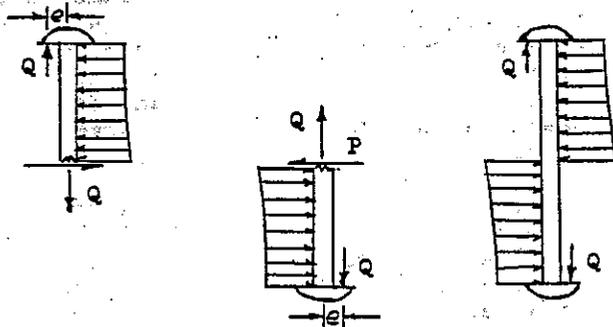the moment due to the bearing stresses.

Fig.D1.43   Bearing Stresses With Clamp-Up

Thus there exists

1. A prying load on the fastener heads

2. A tension in the fastener

3. A near uniform bearing stress on the
   fastener (and sheets)

With good clamp-up the bearing stresses
are near uniform, but even a "finger-
tight" clamping of a bolt's nut is far
better than none (a "loose" nut). Those
fasteners, previously discussed, which do
not develope as much clamp-up, have less
joint strength and stiffness, and their
joint allowables must be obtained from
tests rather than from calculations.
Blind fasteners are the worst in this re-
spect. A steel collar is much better
than an aluminum one but is heavier.

Shims (Fillers) Between Sheets in Single
Shear Joints

    When a shim is present between the
fastened sheets, its effect is to in-
crease the loads Q (Fig.D1.43). This re-
sults in more bending and tension in the

fastener which can cause less strength
and stiffness. When the shim is fairly
thin, say less than 10-12% of the fasten-
er diameter, its effect is usually ig-
nored. Otherwise, see Art.D3.5a, Art.
D3.5   and Fig.D3.18 as to how to pro-
ceed.

D1.23a Riveted Sheet Splice Information *

    The following information should be
added at the end of "Proper Rivet Size
to Use".

    Structural joints should be made
critical in sheet bearing, not in shear.
A bearing critical joint has ductility,
whereas a shear critical joint is of a
comparatively "brittle" nature. This is
because once the fastener begins to shear
failure follows quite quickly, but when
bearing critical there is considerable
deformation within the joint before fail-
ure occurs.** This can be seen from the
comparison of load-deflection curves for
a joint as shown in Fig.D1.44. The joint
deflection here is that within the joint,
between the upper and lower sheets in the
direction of the shear load. A shear
critical joint might be desirable when a
piece of structure is to be ejected or
"blown off", such as the ejection of a
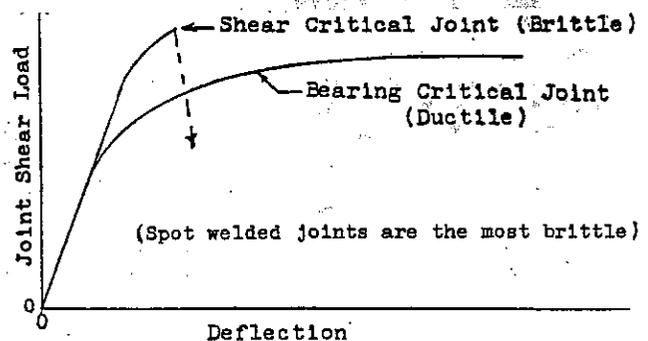nose cone by an explosive charge.

Fig.D1.44   Brittle and Ductile Joints

D1.27 Design and Strength of Threads

    The purpose here is to provide help-
ful information for the design of threads
to transmit a given load. Applications
are for bolts in tapped holes, bolt-nut
combinations and hydraulic cylinder end
caps. The general question is how many
threads are required. The answer depends
upon the shear strength, F_{su}, of the ma-
terial in which the threads will strip
and the cylindrical area which will be
sheared. The following assumptions are
made for bolt-nut combinations and
tapped hole combinations.

* See p.A10 - A21 for riveted joint allowable data.
   See p.A10 for fastened sheet edge distances.

** Essentially mandatory for any multifastener pattern installation

1. If the bolt material has a higher strength than the nut material the threads will be stripped from the nut.

2. If the nut material has the higher strength the threads will be stripped from the bolt.

3. If the nut and bolt materials are of equal shear strength the bolt threads will usually be stripped first.

The strength of the combination is calculated for the three above assumptions as follows.

1. Load at which threads strip from nut

$$P_{nut} = K\pi D_b L F_{su}$$

where
$K = .4 =$ efficiency of nut threads
$D_b =$ bolt thread major diameter
$L =$ length of thread engagement
$F_{su} =$ Shear strength of nut material

2. Load at which threads strip from bolt

$$P_{bolt} = K\pi D_n L F_{su}$$

where
$K = .4 =$ efficiency of bolt threads
$D_n =$ nut thread minor diameter
$L =$ length of thread engagement
$F_{su} =$ shear strength of bolt material

3. Same as (2) above

The formulas apply for typical bolt-nut combinations or bolts in tapped holes where L is more than 2/3 of the bolt diameter. For smaller values of L, K will increase slightly, as shown in Fig.D1.45, because of a more uniform thread loading, but such short thread engagement is usually not good practice, since it may not develope the strength of the bolt.
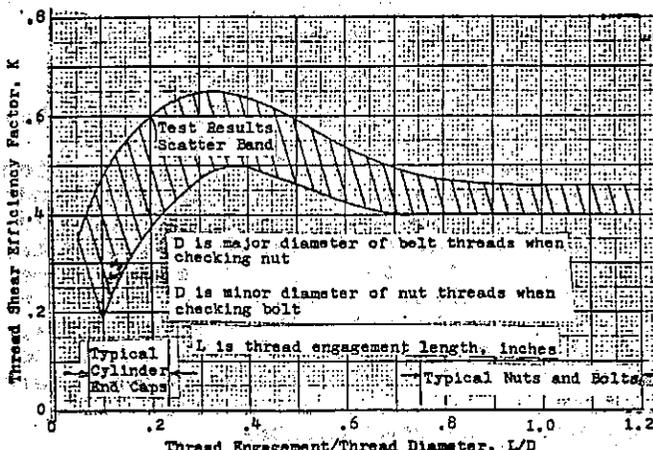

Fig.D1.45 Thread Shear Efficiency Factor, K

Hydraulic Cylinder End Caps

There are many types of hydraulic cylinders used in aerospace vehicles. In general, the larger their diameters and the thinner their walls the more critical the end cap thread design becomes.

For the end cap to cylinder threads there is a tendancy (due to the angle of the threads) for the part with the internal threads to expand (due to hoop tension) and for the part with the external threads to contract (due to hoop compression). This lessens the thread contact area. With quite flexible (thin) parts only the tip portion of the threads may be engaged, and failure will occur at a low percentage of the calculated load, even less than 20% in some cases. In addition to this the cylinder expands under the internal pressure, and this will lessen the thread engagement even more if the threads on the cylinder are internal ones. This is most significant for cylinders having thin walls and large diameters.

In general it is suggested that for cylinder end cap combinations a K factor of .3 be used, and that the design be carefully considered to minimize the relative expansion and contraction of the mating parts. Threads on piston rods, end caps, rod ends and barrels are usually machine cut. Machined threads have a lower fatigue life than do rolled threads, so this should be kept in mind when designing parts which might be fatigue critical in the threaded region.

D3.5a Fillers (and Shims)

As discussed in Art.D3.5, a filler (or shim) between the two sheets of a single shear joint reduces the strength of the fasteners because of the increased prying load. Extending the filler and adding more attachments, as shown in Fig.D3.18, restores the strength, but in many cases this is not feasible or necessary.

Another approach is to determine the reduced joint strength and use this, if it is adequate. The following is a suggested method for doing this for single shear bolted joints. It can be particularly helpful when shims are found to be necessary in manufacturing and salvage procedures.

For a conventional single shear joint having a protruding head bolt with a stiff collar or nut, the allowable load

is calculated as the lesser of a shear failure of the bolt or a bearing failure of the sheet (for all other types of bolts and nuts, or collars, the joint strength must be determined by tests rather than by calculations, as discussed in Art.D1.27a).

Placing a shim between the sheets causes an increased tension and bending moment in the bolt, so there may then be a third type of failure, bending and tension in the bolt. The thicker the shim, the lower the joint allowable shear load, V_0, becomes. The interaction of shear and bending is not critical, so the joint allowable shear load, V_0, is calculated as follows, referring to Fig.D3.19a. Also see Fig.D1.43 for more about fastener equilibrium.
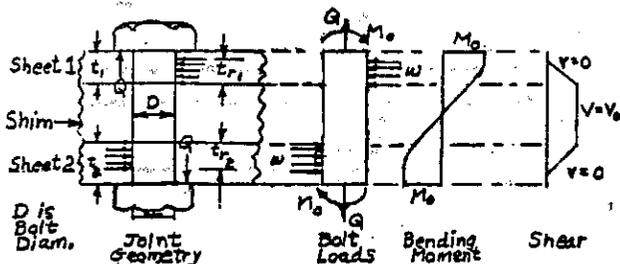
Fig.D3.19a Shimmed Single Shear Bolted Joint, Loads on Bolt (and Sheets)

The sheet bearing stresses generate a bending moment in the bolt which is, from statics

$$M_O = V_o(t_{s1}/2 + t_{s2}/2 + t_f)/2$$

where t_s is the required thickness of the sheet to develope the applied shear load, V_0, and t_f is the thickness of the filler (shim).

$$t_{s1} = V_o/F_{bru_1}D \qquad t_{s2} = V_o/F_{bru_2}D$$

hence
$$M_O = V_o^2(\frac{1}{2F_{bru_1}D} + \frac{1}{2F_{bru_2}D} + t_f)/2$$

Letting $A = 2D/(1/F_{bru_1} + 1/F_{bru_2})$
Then
$$V_o^2/A + V_ot_f - 2M_O = 0$$
or,
$$V_o^2 + V_ot_fA - 2M_OA = 0$$

1. Solving for V_0 (the allowable shear load) and letting M_O be M'_B where $M'_B = .88M_B$*

$$V_o = (-At_f + \sqrt{(At_f)^2 + 8M'_BA})/2$$

2. If $V_o > V_B$ use $V_o = V_B$ where V_B is the bolt single shear allowable load

3. Calculate $t_{s1} = V_o/F_{bru_1}D$ and

* M_B = bolt shank allowable bending moment (Table A45) and .88 accounts for the tension in the bolt.

calculate $t_{s2} = V_o/F_{bru_2}D$

4. If $t_{s1} > t_1$ use $t_{s1} = t_1$ and recalculate $V_o = F_{bru_1}Dt_1$

   If $t_{s2} > t_2$ use $t_{s2} = t_2$ and recalculate $V_o = F_{bru_2}Dt_2$

5. Use the smallest of the calculated V_o loads in (1), (2) and (4) above as the allowable shear load, V_o.

For all other fasteners a joint allowable load, V_o, is gotten by assuming it varies inversely with the prying load (moment) on the fastener head. Hence, V_o is the allowable load for no filler (Table 33-44 and MIL HDBK 5) multiplied by $t_s/(t_s+t_f/2)$, where t_s is the average of the two sheet thicknesses.

The above procedures are believed to be reasonable, but they have not been checked by single shear joint tests, which are needed for substantiation.

For riveted joints a similar procedure could be considered, with substantiating tests of single shear joints.

A suggested test specimen for single shear joints is sketched in Fig.D.46.
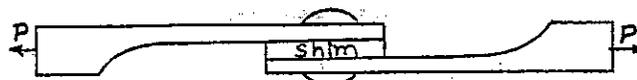

Fig.D.46 Shimmed Single Shear Test Specimen

D3.7a Special Cases of Beam Design

See Art.A13.11a for additional curved beam discussions and data.

D3.3a Tension Clips

Additional allowable data for several types of such clips is in Fig.A1 - A2.

D1.21a Strength of Rivets Flush Type

See p. A10 - A21 for allowable data

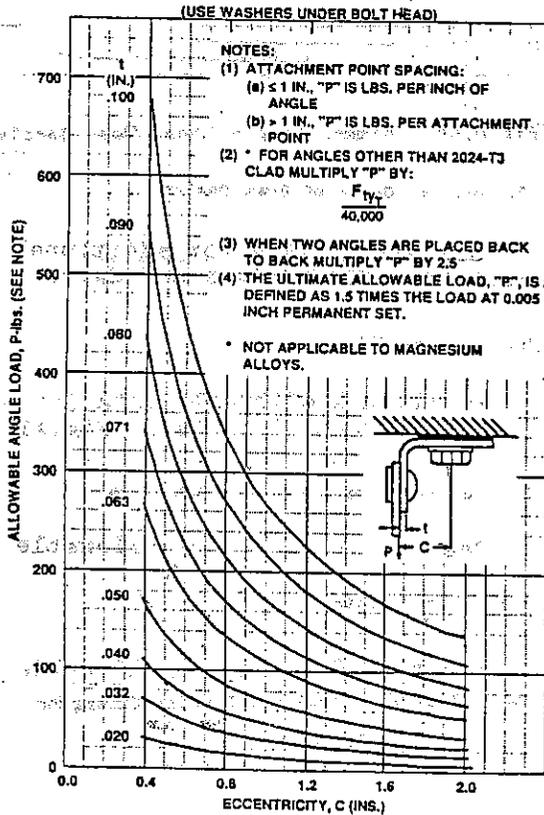D1.22a Blind Rivets

See p. A10 - A21 for allowable data

D1.7a Bolt Shear, Tension & Bending Strengths

See Table A45

DRAWING CHECKLIST

MARGINS OF SAFETY AND DESIGN CHECKLIST

Margin of Safety

A checklist of minimum margins of safety and items to be considered when designing and analyzing structural joints is presented below.

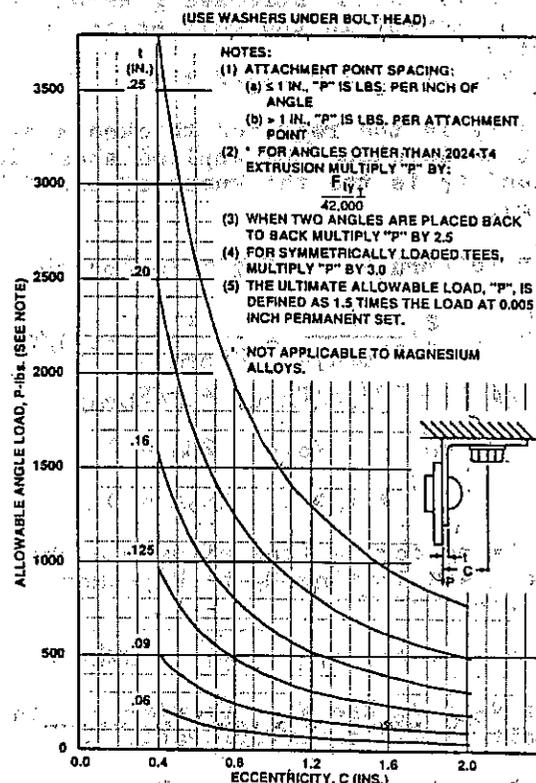Margins of Safety (M.S.) for fasteners and joints.
- M.S. = 0.15 on all shear joints at ultimate.
- M.S. = 0.00 on all joints at yield.
- M.S. = 0.50 on all tension joints at ultimate.
- M.S. = 0.15 on lugs.
- M.S. = 0.25 on critical joints (wing pivot, landing gear attach lugs, etc.) as designated by the aircraft design philosophy.

Checklist

The stress analyst should take care not to be limited by the items listed and to utilize good engineering judgment at all times.

- Make joint critical in sheet bearing rather than shear of fastener.
- Specify torque values on pre-loaded bolts and special applications.
- Avoid using rivets (solid and blind) in primary tension applications.
- Hole tolerances and fits to suit the installation.
- Corrosion and dissimilar metals protection (Contact M & P Group).
- Wear and friction qualities of moving parts.
- Excessive bearing stresses in rotating parts.
- Stress raisers in highly stressed areas (threads, grooves, lubrication fittings).
- Local discontinuities and eccentricities.
- Possible strength reductions due to adverse tolerances.
- Minimum thickness of sheet for countersunk holes.
- Effects of deflections.
- Compatibility of strains.
- Stiffness requirements.
- Local deflections (i.e., thin fairings) relative to aerodynamic tolerances.
- Panel flutter on large, thin gauge, flat external panels.
- Fatigue requirements.
- Thermal stresses or strains.
- Reduction in allowables for temperature.
- Proof load of parts per specification requirements (arresting hooks, hydraulic actuators, etc.)

FIG. A1 ALLOWABLE TENSION LOADS FOR CLIPS (FORMED ANGLES)

(USE WASHERS UNDER BOLT HEAD)

NOTES:
(1) ATTACHMENT POINT SPACING:
  (a) ≤ 1 IN., "P" IS LBS. PER INCH OF ANGLE
  (b) > 1 IN., "P" IS LBS. PER ATTACHMENT POINT
(2) * FOR ANGLES OTHER THAN 2024-T3 CLAD MULTIPLY "P" BY:

$$\frac{F_{ty_T}}{40,000}$$

(3) WHEN TWO ANGLES ARE PLACED BACK TO BACK MULTIPLY "P" BY 2.5
(4) THE ULTIMATE ALLOWABLE LOAD, "P", IS DEFINED AS 1.5 TIMES THE LOAD AT 0.005 INCH PERMANENT SET.

* NOT APPLICABLE TO MAGNESIUM ALLOYS.

ALLOWABLE ANGLE LOAD, P-lbs. (SEE NOTE)

ECCENTRICITY, C (INS.)

SEE FIG. A3 FOR BACK TO BACK ANGLES
ULTIMATE ALLOW. LOAD FOR 2024-T3 CLAD SHEET METAL ANGLES

FIG. A2 ALLOWABLE TENSION LOADS FOR CLIPS (EXTRUDED ANGLES)

(USE WASHERS UNDER BOLT HEAD)

NOTES:
(1) ATTACHMENT POINT SPACING:
  (a) ≤ 1 IN., "P" IS LBS. PER INCH OF ANGLE
  (b) > 1 IN., "P" IS LBS. PER ATTACHMENT POINT
(2) * FOR ANGLES OTHER THAN 2024-T4 EXTRUSION MULTIPLY "P" BY:

$$\frac{F_{ty_T}}{42,000}$$

(3) WHEN TWO ANGLES ARE PLACED BACK TO BACK MULTIPLY "P" BY 2.5
(4) FOR SYMMETRICALLY LOADED TEES, MULTIPLY "P" BY 3.0
(5) THE ULTIMATE ALLOWABLE LOAD, "P", IS DEFINED AS 1.5 TIMES THE LOAD AT 0.005 INCH PERMANENT SET.

* NOT APPLICABLE TO MAGNESIUM ALLOYS.

ALLOWABLE ANGLE LOAD, P-lbs. (SEE NOTE)

ECCENTRICITY, C (INS.)

(SEE FIG. A3 FOR BACK TO BACK ANGLES OR TEE SECTIONS)
ULTIMATE ALLOW. LOAD FOR 2024-T4 EXTRUDED ANGLE

FIG.A3   ALLOWABLE LOADS FOR TENSION CLIPS

ALLOWABLE TENSION LOADS

1. SINGLE ANGLES:
Figures A1 and A2: GIVE THE ULTIMATE ALLOWABLES LOADS FOR VARIOUS GAGES OF 2024-T3 ALCLAD FORMED SHEET AND 2024-T4 EXTRUDED ANGLES. ULTIMATE LOADS FOR ANGLES OF OTHER HEAT-TREATED ALUMINUM ALLOYS, TITANIUM, STEEL, OR ANY MATERIAL EXCEPT MAGNESIUM ALLOYS, MAY BE OBTAINED BY DIRECT RATIONING WITH THE MIL-HDBK-5 TRANSVERSE YIELD STRENGTH AS NOTED IN THE FIGURES.

2. BACK TO BACK ANGLES:
THE ALLOWABLES (AND CONDITIONS) USED FOR SINGLE ANGLES ARE ALSO USED TO DERIVE ALLOWABLES FOR DOUBLE ANGLES USING THE MULTIPLYING FACTORS SHOWN BELOW:

1.25 P *   1.25 P *

2.5 P *

FORMED OR EXTRUDED
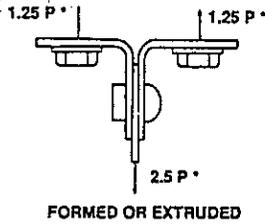
3. TEE SECTIONS:
WHEN EXTRUDED TEES ARE LOADED SYMMETRICALLY IN BOTH OUTSTANDING FLANGES, THE ALLOWABLES OBTAINED FROM FIG.A2 ARE TO BE MULTIPLIED BY THREE (3) AS SHOWN BELOW.
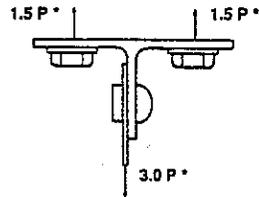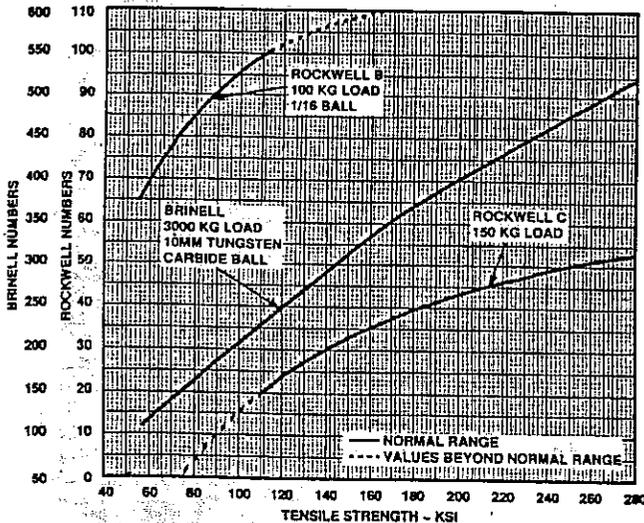
1.5 P *   1.5 P *

3.0 P *

TABLE A1 TORQUE RATIO FACTORS FOR TENSION PRELOAD ON BOLTS

BOLT/NUT MATERIALS	Fₜᵤ MIN (KSI)	DIAMETER SIZES (IN)	DRY (AS REC'D)*	LUBRICATED (MIL-T-5544)	SPECIFICATION 208-13-233 REF
			R FACTORS		STRESS (Fₜᵤ:KSI)
					SEE NOTE (2)
1. STEEL/STEEL (ALLOY OR CRES)	125	3/16 - 5/16	.165	.090	40
		3/8 - 1 1/8	.170	.0731	40
2. STEEL/STEEL (ALLOY OR CRES)	160	1/4 - 5/16	.165	.090	50.67
		3/8 - 1 1/8	.170	.0731	50.67
3. STEEL/STEEL (ALLOY OR CRES)	180	1/4 - 5/16	.165	.090	57.0
		3/8 - 1 1/8	.170	.0731	57.0
4. TI/STEEL	160	1/4 - 5/16	.180	.090	50.67
		3/8 - 1 1/8	.190	.095	50.67

* The "as received" condition may vary from no lubricant ("dry") to various degrees of unknown "light" lubricant such as machine oil. Testing is required for unknown conditions when establishing preloads for critical applications.

NOTES:
1. The ratio factors and torque equations are based on selection of a tension type nut having adequate strength to develop the fastener with a proper margin of safety. Tensile strengths for common nut types are presented on TBL A46. Ultimate tensile strengths of threaded fasteners and the thread root areas are presented on TBL A12
2. The reference stresses shown are the preload tensile stresses for the standard torque values of specification 208-13-233. These were used to develop the R factors using the equation:

$$T = R (d_{nom}) \, f_{tu} (A_{root}) \; ; \quad or \quad T = R (d_{nom}) \, Pl$$

where: T = torque (in-lbs.)
dₙₒₘ = nominal shank diameter
fₜᵤ = desired stress level at thread root
A_root = thread root area of bolt
Pl = axial tensile preload on bolt

3. This method is not applicable to Hi-Lok collars having controlled torque-off features and various lubricants. See Hi-Lok standards data.

FIG.A4   ROCKWELL AND BRINELL HARDNESS DATA

APPROXIMATE HARDNESS - TENSILE STRENGTH RELATIONSHIP OF CARBON AND LOW ALLOY STEELS *

* FOR CARBON AND ALLOY STEELS IN ANNEALED, NORMALIZED, AND QUENCED-AND-TEMPERED CONDITIONS

FIG.A5 AREA OF 90° BENDS

SECTION PROPERTIES OF 90° BEND

AREA = 0.7854 $(R_0^2 - R_i^2)$

$\bar{Y} = \bar{X} = \dfrac{0.42441 \, (R_0^3 - R_i^3)}{R_0^2 - R_i^2}$

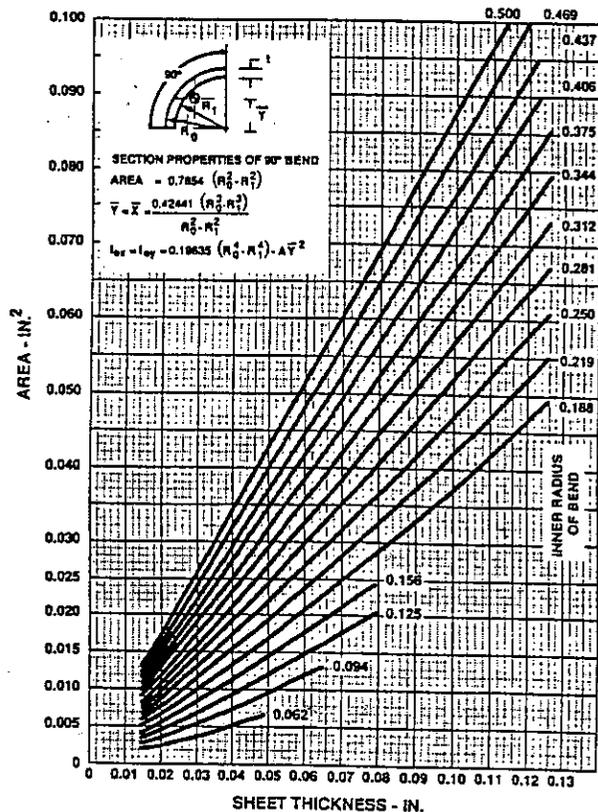$I_{xx} = I_{yy} = 0.19635 \, (R_0^4 - R_i^4) - A\bar{Y}^2$

SHEET THICKNESS - IN.

FIG. A6 MINIMUM I OF STIFFENERS

1. THIS CURVE MAY BE USED FOR FLAT OR CURVED PANELS
2. FOR ELEVATED TEMPERATURE DESIGNS MULTIPLY

$$I_v / dt^3 \text{ BY } E_{RT}/E_{TEMP}$$

3. THIS CURVE APPLIES ONLY WHEN THE STIFFENING MEMBERS ARE ON ONE SIDE ONLY AND ARE ATTACHED AT BOTH ENDS TO THE SUBSTRUCTURE
4. DO NOT INCLUDE ANY EFFECTIVE SKIN IN THE STIFFENING MEMBER MOMENT OF INERTIA
5. THIS CURVE APPLICABLE ONLY WHEN BUCKLING IS ELASTIC AND d IS LESS THAN h
6. THE GAGE OF THE STIFFENING MEMBER SHOULD NOT BE LESS THAN THE SKIN (OR WEB) GAGE, EXCEPT AS NOTED BELOW:

WEB GAGE	0.025	0.032	0.040	0.050	0.063	0.071	0.080	0.090	0.100	0.125	0.160
MIN STIFF GAGE	0.025	0.032	0.040	0.050	0.050	0.063	0.063	0.071	0.080	0.080	0.090

NOTE: IF d > h USE

$$\frac{I_v}{dt^3} = 0.0217 \left(\sqrt{K_s} \right)^{8/3}$$

$$\frac{I_v}{dt^3} = \frac{0.0217}{\left(\frac{d}{h\sqrt{K_s}} \right)^{8/3}}$$

I_v = REQUIRED MOMENT OF INERTIA OF STIFFENING MEMBER
d = ℄ TO ℄ SPACING OF STIFFENING MEMBERS
t = SKIN OR WEB THICKNESS
h = PANEL OR BEAM HEIGHT

$\sqrt{K_s}$ = SHEAR BUCKLING CONSTANT
E_{RT} = MODULUS OF ELASTICITY AT ROOM TEMPERATURE
E_{TEMP} = MODULUS OF ELASTICITY AT DESIGN TEMPERATURE

Shear Panel

FIG. A7 ALLOY STEEL TENSILE STRESS-STRAIN CURVES (MINIMUM)

FIG. A8 ALUMINUM TENSILE STRESS-STRAIN CURVES

CURVES BASED ON MINIMUM PROPERTIES AT ROOM TEMPERATURE.

(A) 7050-T6511 EXTR.   t = 0.5 - 5.00
(B) 7050-T7451 PLATE   t = 2.00 - 4.00
(C) 7050-T74 DIE FORGING,   t ≤ 2.00
(D) 7475-T761 SHEET (AMS 4085)   t ≤ 0.250
(E) 2024-T81 SHEET   t ≤ 0.250
(F) 7075-T73 DIE FORGING   t ≤ 3.00
(G) A201-T7 CASTING CLASS 11
(H) 2024-T3511 EXTR.   t ≤ 0.250
(I) A357-T6 CASTING CLASS 11

FIG. A9 VARIOUS TENSILE STRESS-STRAIN CURVES

CURVES BASED ON MINIMUM PROPERTIES AT ROOM TEMPERATURE.

(A) 17-4PH H1025 BAR   t ≤ 8.000
(B) 15-5PH H1025 BAR   t ≤ 8.000
(C) AISI 301 1/2 HARD SHEET   t ≤ .1875
(D) Ti6Al-4V ANN. EXTR.   t = 2.0 - 4.0
(E) Ti6Al-4V ANN. BAR PLATE   t ≤ 4.000
(F) 7075-T6511 EXTR.   t ≤ 0.249
(G) 7075-T73 EXTR.   t = 0.250 - 1.499
(H) 2014-T652 HAND FORGING   t ≤ 3.000

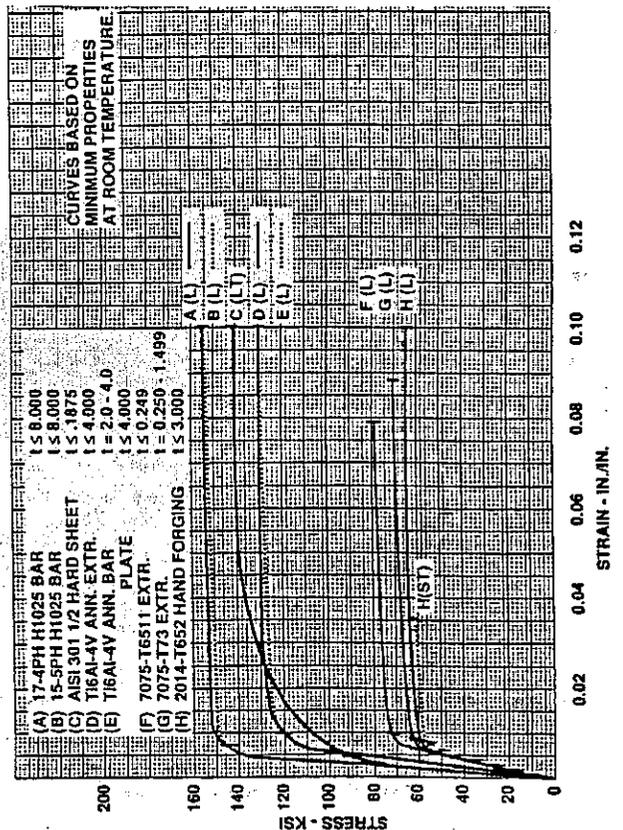## FIG.A10 COMPRESSION BUCKLING CONSTANT FLAT SHEET

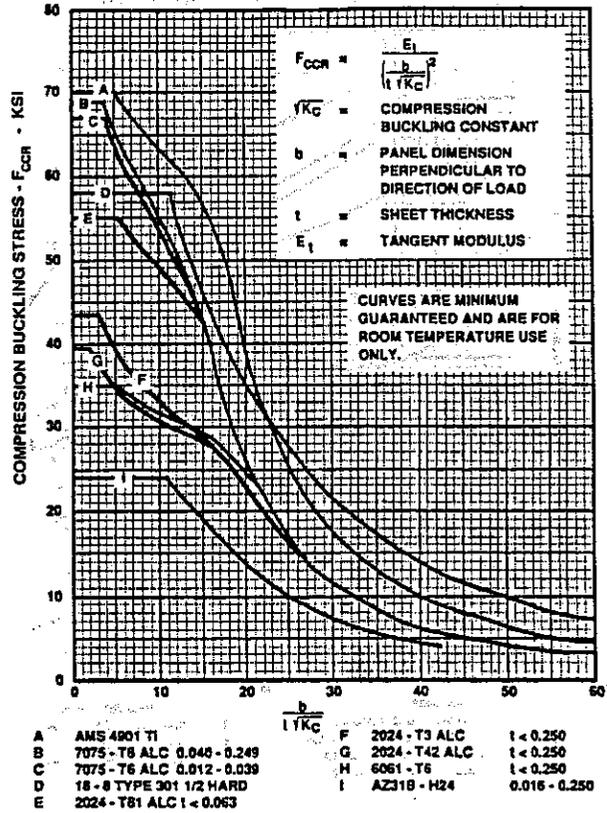## FIG.A12 COMPRESSION BUCKLING CURVES FOR SHEET MATERIAL WITH NO EDGE FREE

$$F_{CCR} = \frac{E_t}{\left(\frac{b}{t\sqrt{K_c}}\right)^2}$$

$\sqrt{K_c}$ = COMPRESSION BUCKLING CONSTANT

b = PANEL DIMENSION PERPENDICULAR TO DIRECTION OF LOAD

t = SHEET THICKNESS

E_t = TANGENT MODULUS

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY.

A	AMS 4901 TI	
B	7075 - T6 ALC 0.040 - 0.249	
C	7075 - T6 ALC 0.012 - 0.039	
D	18 - 8 TYPE 301 1/2 HARD	
E	2024 - T81 ALC t < 0.063	
F	2024 - T3 ALC	t < 0.250
G	2024 - T42 ALC	t < 0.250
H	6061 - T6	t < 0.250
I	AZ31B - H24	0.016 - 0.250

FIG.A11 SHEAR BUCKLING CURVES FOR SHEET MATERIAL

REFERENCE
MELCON - COZZONE BUCKLING METHOD

$$F_{SCR} = \frac{E}{\left(\frac{b}{t\sqrt{K_s}}\right)^2}$$

$\sqrt{K_s}$ = SHEAR BUCKLING CONSTANT

b = SHORT SIDE OF RECTANGULAR PANEL

t = SHEET THICKNESS

E = MODULUS OF ELASTICITY

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY.

CUT-OFFS ARE ESSENTIALLY AT $F_{cy}/2$

A	AMS 4901 TI	
B	18-8 TYPE 301	1/2 HARD
C	7075-T6 ALC.	0.040 - 0.249
D	7075-T6 ALC.	0.012 - 0.039
E	2024-T81 ALC.	t ≥ 0.063
F	2024-T81 ALC.	t < 0.063
G	6061-T6	t < 0.250
H	2024-T3 ALC.	0.063 - 0.249
I	2024-T3 ALC.	0.010 - 0.062
J	2024-T42 ALC.	t < 0.063
K	AZ31B-H24	0.016-0.250

SEE FIG.A13 FOR STEEL & TI

FIG.A13 BUCKLING CURVES FOR TITANIUM AND STEEL

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY. COLUMN CURVES ARE FOR STABLE SECTIONS ONLY, SEE NOTE ON FIG.A15

$b/t\sqrt{K_c}$: s/t : L'/p : b/t $\sqrt{K_s}$

	COMPRESSION	INTER-RIVET	COLUMN	SHEAR
PH 15 - 7 Mo RH950 SHEET	A	B	C	D
TI - 6 AI - 4 V H.T. SHEET t = 0.186-0.250	E	F	G	H
TI - 6 AI - 4V ANN. SHEET	I	J	K	L

FIG.A14   COLUMN CURVES FOR SHEET MATERIAL

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY.

$$F_c = \frac{\pi^2 E_t}{(L'/\rho)^2}$$

$L' = L/\sqrt{c}$ = EFFECTIVE COLUMN LENGTH
$\rho = \sqrt{I/A}$ = LEAST RADIUS OF GYRATION
E_t = TANGENT MODULUS IN COMPRESSION

THESE CURVES ARE FOR STABLE CROSS SECTIONS ONLY THE SECTION MUST BE CHECKED FOR CRIPPLING. IF THE CRIPPLING STRESS IS LESS THAN THE COLUMN CUTOFF STRESS, USE THE METHOD GIVEN ON FIG. A15 TO MODIFY THE ALLOWABLE COLUMN CURVE.

COLUMN FAILING STRESS - F_c - KSI
L'/ρ

A	AMS 4901 TI
B	7075-T6 ALC 0.040 - 0.249
C	7075-T6 ALC 0.012 - 0.039
D	2024-T81 ALC t < 0.063
E	2024-T3 ALC t < 0.250
F	18-8 TYPE 301 1/4 HARD
G	2024-T42 ALC t < 0.250
H	6061-T6 t < 0.250
I	AZ31B-H24 0.016 - 0.250

FIG.A16   TITANIUM AND STEEL ALLOY COLUMN CURVES

TABLE OF WELD CUTOFF FOR STEEL TUBING H. T. AFTER WELDING	
HEAT TREAT F_{tu}	CUTOFF F_{co}
260,000	208,000
200,000	160,000
180,000	144,000
150,000	120,000
125,000	95,000
NORMALIZED 95,000	67,500

260 KSI STEEL
200 KSI STEEL
180 KSI STEEL
150 KSI STEEL
TI - 6AI - 4V (H.T.) BAR
TI - 8AI - 4V (ANN.) BAR
125 KSI STEEL
NORMALIZED STEEL

$$F_c = \frac{\pi^2 E_t}{(L'/\rho)^2}$$

$L' = L/\sqrt{c}$ = EFFECTIVE COLUMN LENGTH
$\rho = \sqrt{I/A}$ = LEAST RADIUS OF GYRATION
E_t = TANGENT MODULUS IN COMPRESSION

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY.

THESE CURVES ARE FOR STABLE CROSS SECTIONS ONLY. THE SECTION MUST BE CHECKED FOR CRIPPLING. IF THE CRIPPLING STRESS IS LESS THAN THE COLUMN CUTOFF STRESS, USE THE METHOD GIVEN ON FIG. A15 TO MODIFY THE ALLOWABLE COLUMN CURVE

COLUMN FAILING STRESS - F_c - KSI
L'/ρ

FIG.A15   COLUMN CURVES FOR EXTRUSIONS AND FORGING

$$F_c = \frac{\pi^2 E_t}{(L'/\rho)^2}$$

$L' = L/\sqrt{c}$ = EFFECTIVE COLUMN LENGTH
$\rho = \sqrt{I/A}$ = LEAST RADIUS OF GYRATION
E_t = TANGENT MODULUS IN COMPRESSION

THESE CURVES ARE FOR STABLE CROSS SECTIONS ONLY. THE SECTION MUST BE CHECKED FOR CRIPPLING. IF THE CRIPPLING STRESS IS LESS THAN THE COLUMN CUTOFF STRESS THE COLUMN STRENGTH MAY BE APPROXIMATED BY USE OF A DESIGN CURVE WITH A NEW CUTOFF AT THE CRIPPLING STRESS EXTENDED TO $L'/\rho = 20$ AND THEN A STRAIGHT LINE DRAWN TANGENT TO THE EULER CURVE. USE THE LOWER OF THE TWO CURVES FOR THE L'/ρ IN QUESTION. *

* OR USE A JOHNSON-EULER CONSTRUCTION (P.C7.22)

EXAMPLE OF ZK60A-T5 COLUMN CURVE ADJUSTED LOWER TO THE CRIPPLING CUTOFF.*
CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPEARTURE USE ONLY.

COLUMN FAILING STRESS - F_c - KSI
L'/ρ

A	7075-T6511 EXTR t < 0.250
B	7075-T6 DIE FORG t ≤ 3.0
C	7079-T6, -T652 HAND FORG t < 6.0
D	7079-T6 DIE FORG t ≤ 6.0
E	7075-T73 DIE FORG t ≤ 3.0
F	2014-T6 DIE FORG t ≤ 4.0
G	2014-T6, -T652 HAND FORG t ≤ 6.0, A ≤ 36
H	2024-T4 EXTR t < 0.250
I	2024-T3511 EXTR t < 0.250
J	ZK60A-T5 EXTR A < 2.00

FIG.A17   INTER-RIVET BUCKLING CURVES FOR SHEET MATERIALS *

A	AMS 4901 TI
B	7075-T6 ALC 0.040 - 0.249
C	7075-T6 ALC 0.012 - 0.039
D	18-8 TYPE 301 1/2 HARD
E	2024-T81 ALC t < 0.063
F	2024-T3 ALC t < 0.250
G	2024-T42 ALC t < 0.250
H	6061-T6 t < 0.250
I	AZ31B-H24 0.016 - 0.250

s = RIVET SPACING
t = SHEET THICKNESS
E_t = TANGENT MODULUS

INTER - RIVET BUCKLING STRESS - F_{cir} - KSI

CURVES ARE MINIMUM GUARANTEED AND ARE FOR ROOM TEMPERATURE USE ONLY.

s/t

* For c'sk, dimpled or spotweld joints multiply S by 1.10.

TABLE A2   MATERIAL PROPERTIES

GENERAL NOTE: Data shown are the most commonly used   Other materials, tempers
and thickness ranges are shown in MIL-HDBK-5. Unless specified otherwise, the sizes shown are
thickness dimensions.

(a) L-Longitudinal, T-Transverse, LT-Long Transverse,
     ST-Short Transverse grain direction.

(b) Values in the "A" column are minimum guaranteed
     properties (either "A" or "S" values).
     Values in the "B" column are based on probability
     data (lowest expected in 90% of the material).

(c) Average modulus of elasticity in tension (E_t) and
     compression (E_c).

(d) See SDM Manual (or MIL-HDBK-5) for secondary
     modulus in compression ($E_{c-secondary}$) for clad
     materials.

(e) Percent elongation is expressed in terms of the
     specification "S" values usually for 2.0 inch gage
     length on flat specimens and 4D for round
     specimens. See note (h) or (k) when noted.

(f) Coefficient of thermal expansion α in terms of in/in/°F
     (10^{-6}) and assumed linear for range of 70° to 212°F.
     For other temperature data see MIL-HDBK-5.

(g) Consult Materials and Processes Unit in regard to
     reduced transverse properties for sections of
     thickness over 6 inches or areas greater than 40
     square inches.

(h) These elongation values are for gage length of 4
     times the diameter.

(i) Hand forgings shall not be used without the specific
     approval of the Engineering Materials and Process
     Unit.

(j) For aluminum castings the data are applicable to
     special mold, permanent mold or investment mold
     processes. This data is applicable to strength class
     number 1 which must be negotiated with the vendor.
     All of the casting strength data are representative of
     specimens taken from the castings.

(k) Elongation value is a minimum for this thickness
     range. For a specific thickness see MIL-HDBK-5.

(l) Mechanical properties at the 200 ksi and 260 ksi
     strength level apply to 4340 material only.

(m) Reference MIL-HDBK-5 for correlation of
     thicknesses, diameters, and shapes relative to the
     materials and heat treat levels shown.

TEMPER DESIGNATIONS

F   As-fabricated wrought material.
O   Annealed, recrystallized wrought material.
N   Normalized.
T3   Solution heat treated and cold worked by
     flattening.
T4   Solution heat treated and naturally aged.
T42 Solution heat treated by user.
T6   Solution heat treated and artificially aged.
T62 Applicable to sheet and plate heat treated and
     aged by the user.
T7   Solution heat treated and stabilized.
T73 Solution heat treated, special aging.
T74 Solution heat treated, special aging and mech.
T76 property differences.
T81 Solution heat treated, cold worked and
     artificially aged.

STRESS RELIEF VARIATIONS

T-51   Stress relieved by stretching (plate, rolled or
       cold-finished rod and bar).
T-510 Stress relieved by stretching (extruded rod,
       bar, shapes and tubing).
T-511 Same as T-510 except minor straightening
       after stretching.
T-52   Stress relieved by compression.
T-54   Stress relieved by combined stretching and
       compression.

TABLE A2   MATERIAL PROPERTIES (Con'd)

TABLE A2   MATERIAL PROPERTIES (Con'd)

TABLE A2 MATERIAL PROPERTIES (Concluded)

(Two large rotated material property tables for aluminum alloys 7050, 7075, Ti-6Al-4V (extrusions) and 6061, 2024, 7075, Ti-6Al-4V (rolled bar and rod, tube) — room temperature material properties in kips per square inch; and a table of castings and bar H.T. steels.)

TABLE A3 FASTENER COUNTERSUNK HEAD DEPTH (IN.)

SOLID & BLIND RIVETS					
SHEAR HEAD (SH)			FLUSH HEAD (FH)		
CALLOUT	TABLE	TYPE	CALLOUT	TABLE	TYPE
NAS1097(STD)	A*	SOLID RIVET	MS20426(STD)	C*	SOLID RIVET
MS14218	A*		MS14219	C*	
NAS1200	A*		CSR902B	C*	
NAS1739	B	BLIND RIVET	MS20427	C*	
			CR3242	B	BLIND RIVET
			MS20601	C*	
			CR3212	C*	
			NAS1399	C*	
			CR4622	C*	
			NAS1921	C*	

FASTENER DIAMETER (in.)	A	B	C	D
1/8	.029*/.027	.035	.042*/.041	.048
5/32	.037*/.035	.047	.055*/.053	.061
3/16	.046*/.044	.063	.070*/.068	.077
1/4	.061*/.060*	.086	.095*/.090	.103
5/16	.067		.106*/.104	.115
3/8	.077		.134*	.144
7/16				
1/2				

* Applicable head sizes per specification.

FASTENER/JOINT DESIGN PROCEDURES AND DATA

FASTENER/JOINT DESIGN NOTES

GENERAL NOTES

The tables in the fastener section present data necessary to obtain the strengths of the more common fasteners and fastener-sheet combinations. Additional data are presented in MIL-HDBK-5, or the particular "customer" design manual when applicable.

Basic Yield-Ultimate Relation

The basic yield-ultimate relation for fasteners is ultimate = 1.5 x yield. The yield loading is critical if 1.5 x yield strength is < ultimate strength. When this occurs an adjusted ultimate value must be calculated by taking 1.5 x yield load. The joint strength tables have already been adjusted and are identified by an asterisk.

-- Note that when calculating the sheet bearing strength for protruding head fasteners (i.e., those listed on page 26) the yield-ultimate relation must be considered. An asterisk (*) is placed on the bearing ratio factors of Table A9 or A10 to indicate yield critical cases.

Static Joint Analysis Data

• Fastener Shear Strength: Obtain from joint strength tables when applicable or from shear strength tables A6 and A7 (for solid rivets), and page 32 for LK-Bolts and threaded fasteners.

• Sheet Bearing Strength: Obtain from joint strength tables when applicable or from calculations when using protruding head fasteners

• Sheet Strength: Check sheet for net area tension and shear tearout. Also verify adequate edge margins, no knife edge conditions and use of equivalent hole diameters for countersunk sheets.

• Sheet intervet buckling or wrinkling and effects of temperature on joint strength

• Margins of Safety are shown on page A1

Edge Distance Variations

All of the joint strength tables are applicable to joints having an edge distance (e) of two diameters (2D). When other edge distances are being analyzed, the table values are to be reduced linearly using the bearing allowables (F_{bru} and F_{bry}) presented in MIL-HDBK-5 or using factors in Table A9 and for e/D of 1.50 and 2.0

Tension Applications

Solid or blind rivets and blind bolts are not allowed in primary tension applications. They are allowed in secondary tension cases such as, skins with aerodynamic lift forces or internal pressure, attachment of shear or compression webs, and stringers to frames.

• For secondary tension an effective tensile "pull-thru" allowable of 20% of the ultimate joint strength allowable (at the specific sheet thickness) is considered to be conservative. This approach is recommended for any fastener type except those having shear heads and reduced head features or if specific data has been developed. For NAS 1097 reduced shear head rivets use 10% of the particular ultimate joint strength allowable.

FLUSH HEAD FASTENERS

The joint strength allowables for all flush head fasteners are based on test data. Calculated joint strengths are not permitted.

-- When selecting flush head fasteners and sheet thickness, "knife-edge" conditions are not allowed. The recommended design ratio (countersink depth/sheet thickness) is 0.8 for secondary structure and 0.7 for primary structure with reversed loading.

-- See Tables A3 and A4 for the countersink depths of common fasteners. Fig.A16 and A15 provide equivalent hole diameters (D$_e$ in countersunk sheet) for several fasteners and head styles. These diameters are used when determining net "hole-out" in sheet material.

PROTRUDING HEAD FASTENERS

The joint strengths for the following fastener types and conditions must be based on test data:

-- Any fastener installed in sheet material where t/D is < 0.18.

-- Any joint with protruding shear head or reduced head fasteners.

-- Any joint with protruding head blind rivets or blind bolts (with either shear or tension type heads).

The joint strength allowables for protruding "tension" head fasteners may be calculated as described below:

-- The load per fastener at which fastener shear or sheet bearing type of failure occurs is determined separately and the lower of the two governs the design.

1. Shear strengths for prot. hd. solid rivets of any material, except aluminum, are determined directly from Table A6
   For protruding solid aluminum rivets (tension types) an effective rivet strength is obtained by multiplying the Table A6 shear values by the reduction factors of Table A7

2. Shear strengths for protruding head Hi-Loks, Lk-Bolts, and threaded fasteners are obtained listed in Table A3

3. Calculate the effective sheet bearing strengths for all protruding head solid rivets by multiplying the Table A8 values by the ratio of allowable bearing stress/100,000 (K values) of Table A9 or A10 for the applicable sheet material.

4. Calculate the effective sheet bearing strengths for Hi-Loks, Lk-Bolts and solid threaded types by multiplying the Table values by the ratio factors (K values) in Tables A9 or A10 for the applicable sheet material.

TABLE A4 FASTENER COUNTERSUNK HEAD DEPTH (IN.)

HI-LOKS/LOCKBOLTS/SCREWS/BLINDBOLTS					
SHEAR HEAD (SH)			FLUSH HEAD (FH) OR TENSION (TH)		
CALLOUT	TABLE	TYPE	CALLOUT	TABLE	TYPE
HL11(STD)	E	HI-LOK	HL13(STD)	H	HI-LOK
GPL3SC	F*	LOCKBOLT	LGPL8SC	I	LOCKBOLT
LGPL2SC	F*	"	NAS1456-62	I	"
NAS1436-42	F*	"	NAS1516-18	I	"
LGPL9SC	G	"	NAS7024-32	J*	" (2)
CSR924	F	SWAGED PIN	LGPL4SC	J	" (2)
HSR101	E	" "	MS90353	K	(1)BLINDBOLT
HSR201	E	" "	MS21140	I*	"
NAS1581	F*	SCREW	AN509(STD)	H*	SCREW
NAS1620	H*	"	NAS517	H*	"
NAS1670L	H*	(1)BLINDBOLT	NAS1580	K*	"

FASTENER DIAMETER (in.)	E	F	G	H	I	J(2)	K
1/8						.041*	
5/32	.041/.039	.043*/.034	.040	.070/.068*	.074*/.073	.051*/.049	.072
3/16	.047/.045	.046*/.046	.045	.081/.079*	.084/.082	.060*/.056	.083*/.060
1/4	.061/.059	.063*/.060	.059	.108/.106*	.110/.108*	.078*/.074	.111*/.105
5/16	.068/.066	.070*/.067	.066	.135/.133*	.140*/.137	.095*/.092	.140*/.137
3/8	.079/.076	.081*/.077	.076	.162/.160*	.168*/.165	.111*/.110	.167*/.165
7/16	.097/.094	.100*		.190/.187*			.195*/.193
1/2	.107/.104	.111*		.216/.213			.222*/.220

NOTES:

1) Blind bolts (H*, I* and K) are intended for shear application and secondary tension.

2) Intermediate head. Primary shear and secondary tension applications. (Reference J)

* Applicable head sizes per specification.

Table A3 is located on p.A9

FIG.A18 EQUIVALENT HOLE DIAMETERS (CSK HOLES)

FIG.A19 EQUIVALENT HOLE DIAMETERS (CSK HOLES)

TABLE A6 SOLID RIVET SHEAR STRENGTH

SHEAR STRENGTH OF SOLID RIVETS

RIVET SIZE, IN.		1/16	3/32	1/8	5/32	3/16	1/4	5/16	3/8
DRILL NO.		51	41	30	21	11	F	P	W
NOMINAL HOLE DIAMETER, IN.		0.067	0.096	0.1285	0.159	0.191	0.257	0.323	0.386
DESIGNATION		SINGLE SHEAR STRENGTH, lbs [a,d]							
RIVET MATERIAL:									
5056-H321 F_{SU} = 28 ksi[b]	B	99	203	363	556	802	1450	2295	3275
2117-T3 F_{SU} = 30 ksi[b]	AD	106	217	388	596	862	1555	2460	3510
2017-T31 F_{SU} = 34 ksi[b]	D	120	247	442	675	977	1765	2785	3980
2017-T3 F_{SU} = 38 ksi[b]	D	134	275	494	755	1090	1970	3115	4445
2024-T31 F_{SU} = 41 ksi[b]	DD	145	296	531	814	1175	2125	3360	4800
7050-T73 F_{SU} = 41 ksi[c]	E,KE	145	296	531	814	1175	2125	3360	4800
7050-T731 F_{SU} = 43 ksi[b]	E,KE	152	311	558	854	1230	2230	3525	5030
Monel F_{SU} = 49 ksi		173	355	635	973	1405	2540	4015	5735
Ti-Cb F_{SU} = 53 ksi		187	384	687	1050	1520	2750	4340	6200
A-286 F_{SU} = 90 ksi		317	651	1170	1790	2580	4670	7370	10500

- a   Based on nominal hole diameter specified above.
- b   Values are for the as driven condition, on a probability basis (B values).
- c   Undriven S value; driven B value has not been demonstrated.
- d   Apply shear strength reduction factors : TBL A7 when using protruding head aluminum alloy solid rivets.

TABLE A7 PROTRUDING HEAD RIVET REDUCTION FACTORS

PROTRUDING HEAD ALUM. SOLID RIVET SHEAR STRENGTH REDUCTION FACTORS (3), (4) (FOR ALUM. RIVETS ONLY) MS20470 HEAD STYLES

DIA OF RIVET		1/16	3/32	1/8	5/32	3/16	1/4	5/16	3/8
0.016	SS	0.964							
	DS	0.687							
0.018	SS	0.981	0.912						
	DS	0.744	0.516						
0.020	SS	0.995	0.933						
	DS	0.789	0.585						
0.025	SS	1.000	0.970	0.920					
	DS	0.870	0.708	0.545					
0.032	SS		1.000	0.964	0.925				
	DS	0.941	0.814	0.687	0.560				
0.036	SS			0.981	0.946	0.912			
	DS	0.989	0.857	0.744	0.630	0.518			
0.040	SS			0.995	0.964	0.933			
	DS	0.992	0.891	0.789	0.687	0.585			
0.045	SS			1.000	0.981	0.953			
	DS	1.000	0.924	0.834	0.744	0.653			
0.050	SS				0.995	0.970	0.920		
	DS		0.951	0.870	0.789	0.708	0.545		
0.063	SS				1.000	1.000	0.961	0.922	
	DS		1.000	0.937	0.872	0.808	0.679	0.550	
0.071	SS					0.979	0.944	0.909	
	DS			0.966	0.909	0.852	0.737	0.622	0.508
0.080	SS					0.995	0.964	0.933	
	DS			0.992	0.941	0.891	0.789	0.687	0.585
0.090	SS					1.000	0.981	0.953	
	DS			1.000	0.969	0.924	0.834	0.744	0.653
0.100	SS						0.995	0.972	
	DS				0.992	0.951	0.870	0.789	0.708
0.125	SS						1.000	1.000	
	DS				1.000	1.000	0.935	0.870	0.805
0.160	SS							0.992	
	DS						0.992	0.941	0.891
0.190	SS							1.000	
	DS						1.000	0.981	0.939
0.250	SS								1.000
	DS							1.000	1.000

NOTES:
1. Sheet thickness is that of the thinnest sheet in single shear and of the middle sheet in double shear.
2. Values listed are for room temperature use only.
3. Values based on tests of aluminum rivets.
4. Do not use this table for monel, Ti, or steel rivets.
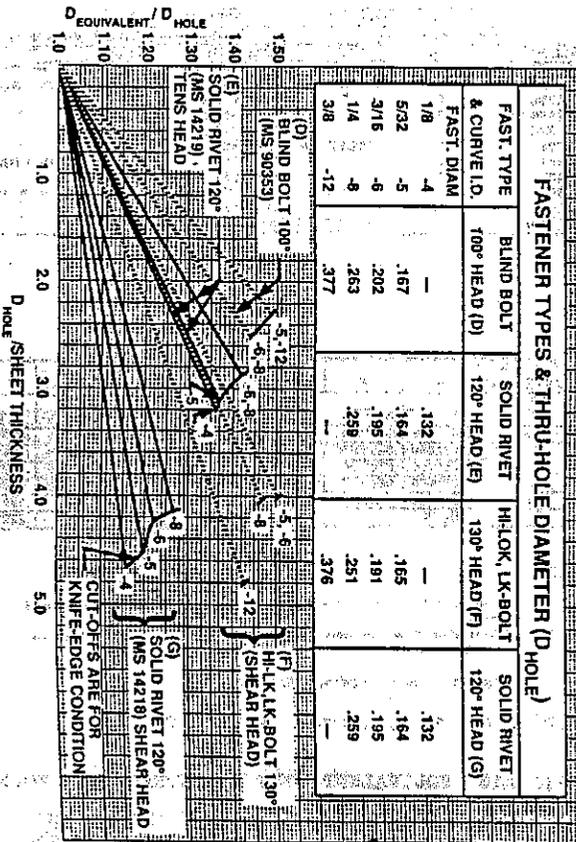
TABLE A5 PROTRUDING HEAD FASTENERS FOR CALCULATED JOINT STRENGTH

Joint strengths for the following fastener types are to be calculated as described BEFORE AND ON THE TABLES LISTED

PROTRUDING "TENSION" OR UNIVERSAL HEAD STYLES

SOLID RIVETS	MS2470 AD & B	UNIV. HD.	ALUM.
SEE TABLES A6	MS20615M	UNIV. HD.	MONEL
THRU A10	NAS1198	UNIV. HD.	A286
	CSR903B	UNIV. HD.	TI/Cb

HI-LOK/LK-BOLTS   HL-12 HEAD STYLES
SEE TABLES A9   HLT452 HEAD STYLES
THRU A13   LGPL4SP(PULL)/LGPS4SP(STUMP) TYPES
                   GPL8TP(PULL)/GPS8TP(STUMP) TYPES
                   NAS1425-32 LOCK-BOLT
                   NAS1465-72 LOCK-BOLT

BOLTS   MS21250
SEE TABLES A9   MS14181
THRU A13   NAS1003
                   NAS1303 (SERIES)
                   NAS6203, 6303, 6403, 6703 & 6803 (SERIES)
                   NAS464

TABLE A8 SHEET UNIT BEARING STRENGTH – LBS BASED ON F_{br} = 100,000 PSI FOR PROTRUDING TENSION HEAD SOLID RIVETS
(MS 20470 AND HEAD STYLES OF TABLE A5)

	Unit Bearing Strength for Rivet Diameter Indicated, lbs							
RIVET SIZE	1/16	3/32	1/8	5/32	3/16	1/4	5/16	3/8
HOLE DIAMETER	0.067	0.096	0.1285	0.159	0.191	0.257	0.323	0.386
0.012	80	*	*	*	*	*	*	*
0.016	107	*	*	*	*	*	*	*
0.018	121	173	*	*	*	*	*	*
0.020	134	192	*	*	*	*	*	*
0.025	168	240	321	*	*	*	*	*
0.032	214	307	411	509	*	*	*	*
0.036	241	346	462	572	688	*	*	*
0.040	268	384	514	636	764	*	*	*
0.045	302	432	578	716	860	*	*	*
0.050	335	480	642	795	955	1285	*	*
0.063	422	605	810	1002	1203	1619	2035	*
0.071	476	682	912	1129	1356	1825	2293	2741
0.080	536	768	1028	1272	1528	2056	2584	3088
0.090	603	864	1156	1431	1719	2313	2907	3474
0.100	670	960	1285	1590	1910	2570	3230	3860
0.125	838	1200	1606	1988	2388	3212	4038	4825
0.160	1072	1536	2056	2544	3056	4112	5168	6176
0.190	1273	1824	2442	3021	3629	4883	6137	7334
0.250	1670	2400	3210	3975	4775	6425	8075	9650

(SHEET THICKNESS, IN.)

* Where D/t is greater than 5.5, tests are required to substantiate yield and ultimate bearing strengths.

NOTES:
1. Design values of sheet bearing strength are obtained by multiplying the bearing strength (lbs) given above by the ratio of design sheet bearing stress ÷ 100,000. Determine values for both yield and ultimate. If 1.5 x P_{bry} is less than P_{bru} the joint is yield critical and $P_{bru} = 1.5$ x P_{bry}. Bearing ratios are presented on TABLES A9 AND A10.
2. Values for rivets are based on hole diameters shown. See TBL A13 for solid shank threaded fasteners/lockbolts.

TABLE A9 BEARING STRENGTH RATIO FACTORS TO BE USED WITH TABLE A8 AND TABLE A13 DATA

BEARING STRENGTH RATIO FACTORS (RATIO OF ACTUAL F_{bru} OR F_{bry} TO 100 KSI) (USE WITH DATA ON TABLES A9–10) – SHEET & PLATE

ULTIMATE VALUES MUST BE BASED ON 1.5 X K(YIELD) RATIO SHOWN. RATIO DATA OBTAINED FROM MIL-HDBK-5E (CHANGE NOTICE 1 AND 2).

Materials listed: 2024-T3, 2024-T351, 2024-T42, 2024-T81, 2024-T651, 2024-T3 (CLAD), 2024-T351 (CLAD), 2024-T42 (CLAD), 2024-T81 (CLAD), 2024-T651 (CLAD).

TABLE A10 BEARING STRENGTH FACTORS

BEARING STRENGTH RATIO FACTORS (RATIO OF ACTUAL F_{bru} OR F_{bry} TO 100 KSI) (USE WITH DATA ON TABLE A8 OR A13 – SHEET & PLATE

ULTIMATE VALUES MUST BE BASED ON 1.5 X K(YIELD) RATIO SHOWN. RATIO DATA OBTAINED FROM MIL-HDBK-5E (CHANGE NOTICE 1 AND 2).

Materials listed: 6061-T4, 6061-T6 & T62, 6061-T451, 6061-T651, 7050-T7451, 7050-T7651, 7075-T6 & T62, 7075-T73, 7075-T7351, 7075-T76, 7075-T7651, 7075-T6 & T62 (CLAD), 7075-T76 (CLAD), 7075-T7651 (CLAD).

TABLE A11 SHEAR STRENGTH OF THREADED/SOLID SHANK FASTENERS

SHEAR STRENGTH OF THREADED/SOLID SHANK FASTENERS

		F_{tu} (MIN) / F_{su} (MIN)	125 (KSI) / 75 (KSI)	160 / 95	180 / 108	210 / 125	220 / 132
FAST. DIAM. IN.		AREA IN²	ULTIMATE SINGLE SHEAR STRENGTH, LBS				
3/16	0.188	0.02761	2071	2623	2982	3452	3645
#10	0.190	0.02835	2126	2694	3062	3544	3743
1/4	0.250	0.04909	3682	4660	5300	6140	6480
5/16	0.312	0.0767	5750	7290	8280	9590	10120
3/8	0.375	0.11045	8280	10490	11930	13810	14580
7/16	0.438	0.15033	11270	14280	16240	18790	19840
1/2	0.500	0.19635	14730	18650	21210	24540	25920
9/16	0.562	0.24850	18640	23610	26840	31060	32800
5/8	0.625	0.30680	23010	29150	33130	38356	40500
3/4	0.750	0.44179	33130	42000	47700	55200	58300
7/8	0.875	0.60132	45100	57100	64900	75200	79400
1	1.000	0.78540	58900	74600	84800	98200	103700

NOTES:
1. Shear values above are based on the basic shank diameters shown and are also applicable to solid shank pins, i.e., lockbolts. The values may vary for some fastener types when the procurement specification lists different diameters and material shear strengths (F_{su}).

TABLE A12 ULTIMATE TENSILE STRENGTH OF THREADED STEEL FASTENERS (MIL-S-8879 ROLLED THREADS)

FASTENER DIAMETER		MAXIMUM MINOR AREA (IN²)	FASTENER TENSILE STRENGTH–KSI		
	(INCH)		160	180	220
			ULTIMATE TENSILE STRENGTH–lbs		
10-32	0.190	0.018602	2 976	3 348	4 090
1/4-28	0.250	0.034241	5 480	6 160	7 530
5/16-24	0.312	0.054905	8 780	9 880	12 080
3/8-24	0.375	0.083879	13 420	15 100	18 450
7/16-20	0.438	0.11323	18 120	20 380	24 910
1/2-20	0.500	0.15358	24 570	27 640	33 790
9/16-18	0.562	0.19502	31 200	35 100	42 900
5/8-18	0.625	0.24700	39 520	44 500	54 300
3/4-16	0.750	0.36082	57 700	64 900	79 400
7/8-14	0.875	0.49327	78 900	88 800	108 500
1-12	1.000	0.64156	102 500	115 500	141 100
1-1/8-12	1.125	0.83129	133 000	149 600	182 900
1-1/4-12	1.250	1.0456	167 300	188 200	230 000
1-3/8-12	1.375	1.2844	205 500	231 200	282 600
1-1/2-12	1.500	1.51477	247 600	278 600	340 500

NOTES:

1. Values shown are the fastener capability at the thread root area using nuts designed to develop the fastener.
2. The root area is computed using nominal maximum diameter as published in Tables II and III of MIL-S-8879. Ref. MIL-HDBK-5.
3. See TBL A46 for strength ratings of common nut types.

TABLE A13 SHEET/PLATE UNIT BEARING STRENGTH -- LBS BASED ON F_{br} = 100,000PSI (PROT. HEAD SOLID SHANK FASTENERS/PINS)

FASTENER EXAMPLES (SEE TABLE A5)

THREADED TYPES: NAS 1303, 6203; 6303, 6403, 6703, 6803, MS21250
HI LOKS; TENSION HEAD STYLES SUCH AS HL 12, HLT 452
LOCKBOLTS: TENSION HEAD STYLES NAS 1465-72 AND NAS 1525-32

Fastener Diameter		Unit Bearing Strength of Sheet for Fastener Diameter indicated, lb [1]											
	In.	5/32	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	3/4	7/8	1
Sheet Thickness		0.156	0.188	0.250	0.312	0.375	0.438	0.500	0.562	0.625	0.750	0.875	1.000
0.032		500	*	*	*	*	*	*	*	*	*	*	*
0.036		563	675	*	*	*	*	*	*	*	*	*	*
0.040		625	750	*	*	*	*	*	*	*	*	*	*
0.045		704	845	*	*	*	*	*	*	*	*	*	*
0.050		781	940	1,250	*	*	*	*	*	*	*	*	*
0.063		985	1,180	1,575	1,969	*	*	*	*	*	*	*	*
0.071		1,110	1,330	1,775	2,219	2,662	*	*	*	*	*	*	*
0.080		1,250	1,500	2,000	2,500	3,000	3,500	*	*	*	*	*	*
0.090		1,407	1,690	2,250	2,812	3,375	3,938	4,500	*	*	*	*	*
0.100		1,562	1,875	2,500	3,125	3,750	4,375	5,000	*	*	*	*	*
0.125		1,953	2,340	3,125	3,906	4,688	5,469	6,250	7,030	7,812	*	*	*
0.160		2,500	3,000	4,000	5,000	6,000	7,000	8,000	9,000	10,000	12,000	*	*
0.200		3,125	3,750	5,000	6,250	7,500	8,750	10,000	11,250	12,500	15,000	17,500	20,000
0.250		3,916	4,688	6,250	7,812	9,375	10,940	12,500	14,060	15,625	18,750	21,875	25,000
0.312		4,867	5,866	7,800	9,734	11,700	13,670	15,600	17,530	19,500	23,400	27,300	31,200
0.375		5,850	7,050	9,375	11,700	14,063	16,425	18,750	21,075	23,440	28,125	32,810	37,500
0.500		7,800	9,400	12,500	15,600	18,750	21,900	25,000	28,100	31,250	37,500	43,750	50,000
0.625		9,750	11,750	15,625	19,500	23,440	27,375	31,250	35,125	39,062	46,875	54,690	62,500
0.750		11,700	14,100	18,750	23,400	28,125	32,850	37,500	42,150	46,875	56,250	65,625	75,000
0.875		13,650	16,450	21,875	27,300	32,810	38,325	43,750	49,175	56,690	65,625	76,560	87,500
1.000		15,500	18,800	25,000	31,200	37,500	43,800	50,000	56,200	62,500	75,000	87,500	100,000

* Where D/t is greater than 5.5 tests are required to substantiate yield and ultimate bearing strength.
1. Sheet bearing strengths are obtained by multiplying the above values (LB) by the ratio of design sheet bearing stress ÷ 100,000. Determine values for both yield and ultimate. If 1.5 x Pbry is less than Pbru, the joint is yield critical and Pbru=1.5 x Pbry. Bearing ratios are presented on TABLES A9 AND A10
2. Values for solid shank threaded fasteners and pins are based on the nominal diameters shown.

TABLE A14 SOLID RIVETS CSK IN 2024-T42 CLAD

ULTIMATE STRENGTH OF MS20426 RIVETS COUNTERSUNK IN CLAD 2024-T42 AND HIGHER STRENGTH ALUM. ALLOYS (100° STD. HEAD)

RIVET D/t	MS20426DD 2024-T3 (F_{su} = 41 KSI)		MS20426D (2017-T3) (F_{su} = 38 KSI)			MS20426AD (2117-T3) F_{su} = 30 KSI			
	1/4	3/16	1/4	3/16	5/32	3/16	5/32	1/8	3/32
0.032	(1580)	(888)	(1292)	(773)	(518)	(705)	(479)	(309)	(178)
0.040	1673	942	1526	835	602	739	523	340	183
0.050	1877	992	1773	835	690	769	542	363	206
0.063	2000	1035	1891	1015	720	795	560	373	216
0.071	2084	1073	1970	1054	746	818	575	388	217
0.080	2120	1131	1970	1090	755	853	596		
0.090		1180		1090		862			
SHEAR	2120	1180	1970	1090	755	862	596	388	217

NOTES:

1. Values are for room temperature use only.
2. • Denotes ultimate values based on 1.5 t yield.
3. Values that are (underlined) are knife-edge condition. SEE "FASTENER NOTES" FOR RECOMMENDED SHEET THICKNESSES

TABLE A15 SOLID SHEAR HEAD RIVETS CSK IN CLAD

ULTIMATE STRENGTH OF NAS1097-E RIVETS COUNTERSUNK IN CLAD ALUMINUM ALLOY (100° SHEAR HEAD)

RIVET	NAS1097-E (F_{su} = 41 ksi) (7050-T73)							
SHEET MATL.	Clad 2024-T3				Clad 7075-T6			
DIAM. (NOM)	1/8 (0.1285)	5/32 (0.159)	3/16 (0.191)	1/4 (0.257)	1.8 (0.1285)	5/32 (0.159)	3/16 (0.191)	1/4 (0.257)
SHEET (t)	ULTIMATE STRENGTH, LBS [2]							
0.025	(227)	—	—	—	(278)	—	—	—
0.032	326	(367)	—	—	354	(441)	—	—
0.040	437	505	(561)	627	439	547	(661)	—
0.050	466	679	773	(908)	456	674	823	(1120)
0.063	485	717	1005	1275	477	700	980	1330
0.071	497	731	1025	1500	490	716	999	1570
0.080	507	747	1045	1750	505	734	1020	1760
0.090	521	765	1065	1840	520	754	1045	1790
0.100	531	781	1085	1870	531	774	1070	1825
0.125	—	814	1135	1935	—	814	1130	1905
0.160	—	—	1175	2030	—	—	1175	2020
0.190	—	—	—	2110	—	—	—	2115
0.250	—	—	—	2125	—	—	—	2125
SHEAR	531	814	1175	2125	531	814	1175	2125

NOTES:

1. Values are for room temperature use only.
2. Values that are (underlined) are knife edge condition. See page 21 for recommended sheet thicknesses.

TABLE A16   SOLID SHEAR HEAD RIVETS CSK IN CLAD

ULTIMATE STRENGTH OF MS14218AD RIVETS COUNTERSUNK IN ALUMINUM (120° SHEAR HEAD)

RIVET	MS14218AD (F_{su} = 30 ksi) (2117-T3)					
SHEET	CLAD 2024-T3					
	ULTIMATE STRENGTH, LBS [2]					
t \ D	3/32	1/8	5/32	3/16	7/32	1/4
0.020	(125)	—	—	—	—	—
0.025	(153)	(212)	—	—	—	—
0.032	188	263	(334)	—	—	—
0.040	216	322	408	(498)	—	—
0.050	217	380	499	609	(740)	(849)
0.063	—	388	588	751	910	1040
0.071	—	—	596	817	1015	1155
0.080	—	—	—	862	1125	1290
0.090	—	—	—	—	1205	1425
0.100	—	—	—	—	1225	1520
0.125	—	—	—	—	—	1555
SHEAR	217	388	596	862	1225	1555

ULTIMATE STRENGTH OF MS14218E RIVETS COUNTERSUNK IN ALUMINUM (120° SHEAR HEAD)

RIVET	MS14218E (F_{su} = 43 ksi) (7050-T73)					
SHEET	CLAD 2024-T3					
	ULTIMATE STRENGTH, LBS [2]					
t \ D	5/32	3/16	7/32	1/4	9/32	5/16
0.025	—	—	—	—	—	—
0.032	(346)	—	—	—	—	—
0.040	478	(529)	—	—	—	—
0.050	673	732	(806)	—	—	—
0.063	781	1045	1135	(1200)	(1285)	—
0.071	803	1110	1365	1445	1530	(1630)
0.080	827	1140	1565	1735	1835	1930
0.090	854	1175	1605	1990	2200	2320
0.100	—	1205	1645	2030	2525	2725
0.125	—	1230	1740	2140	2650	3205
0.160	—	—	1755	2230	2820	3400
0.190	—	—	—	—	2840	3525
SHEAR	854	1230	1755	2230	2840	3525

NOTES:

1. Values are for R.T. use only.
2. Values that are (underlined) are knife-edge condition. See page A10, recommended sheet thicknesses.

TABLE A17   SOLID TENSION HEAD RIVETS CSK IN ALUM.

ULTIMATE STRENGTH OF MS14219E RIVETS COUNTERSUNK IN ALUMINUM (120° TENSION HEAD)

RIVET	MS14219E (F_{su} = 43 ksi) (7050-T73)					
SHEET	CLAD 2024-T3					
	ULTIMATE STRENGTH, LBS [2]					
t \ D	5/32	3/16	7/32	1/4	9/32	5/16
0.050	(527)	(560)	—	—	—	—
0.063	743	(819)	—	—	—	—
0.071	788	979	(1065)	—	—	—
0.080	834	1105	1280	—	—	—
0.090	854	1185	1520	(1625)	(1715)	—
0.100	—	1230	1605	1890	(2020)	(2120)
0.125	—	—	1755	2145	2580	2965
0.160	—	—	—	2230	2840	3415
0.190	—	—	—	—	—	3525
SHEAR	854	1230	1755	2230	2840	3525

ULTIMATE STRENGTH OF MS14219E RIVETS COUNTERSUNK IN ALUMINUM (120° TENSION HEAD)

RIVET	MS14219E (F_{su} = 43 ksi) (7050-T73)					
SHEET	CLAD 7075-T6					
	ULTIMATE STRENGTH, LBS [2]					
t \ D	5/32	3/16	7/32	1/4	9/32	5/16
0.040	(563)	—	—	—	—	—
0.050	(704)	(846)	—	—	—	—
0.063	803	(1065)	(1270)	—	—	—
0.071	832	1140	(1435)	(1615)	—	—
0.080	854	1180	1600	(1820)	(2055)	—
0.090	—	1220	1650	(2030)	(2310)	(2575)
0.100	—	1230	1700	2090	(2565)	(2860)
0.125	—	—	1755	2230	2740	3295
0.160	—	—	—	—	2840	3525
SHEAR	854	1230	1755	2230	2840	3525

NOTES:

1. Values are for R.T. use only.
2. Values that are (underlined) are knife-edge condition. See page A10, recommended sheet thicknesses.

TABLE A18   SOLID T1-45Cb RIVETS CSK IN ALUMINUM AND IN T1-6AL-4V

ULTIMATE STRENGTH OF COUNTERSUNK BRFS-T RIVETS IN ALUMINUM AND TITANIUM (120° SHEAR HEAD)

RIVET	BRFS-T (F_{su} = 53 ksi) (TI-45Cb)					
SHEET	CLAD 7075-T6			TI-6Al-4V, ANNEALED		
	ULTIMATE STRENGTH, LBS [2]					
t \ D	1/8	5/32	3/16	1/8	5/32	3/16
0.025	(288)	—	—	(400)	—	—
0.032	369	(456)	—	513	(635)	—
0.040	461	572	(685)	564	796	(952)
0.050	577	713	858	602	867	1190
0.063	610	891	1080	650	927	1270
0.071	628	914	1220	680	964	1310
0.080	649	939	1300	687	1005	1360
0.090	671	967	1330	—	1050	1420
0.100	687	996	1370	—	—	1470
0.125	—	1050	1450	—	—	1520
0.160	—	—	1520	—	—	—
SHEAR	687	1050	1520	687	1050	1520

ULTIMATE STRENGTH OF COUNTERSUNK CSR902B RIVETS IN ALUMINUM 2024-T81 CLAD (100° FLUSH HEAD)

RIVET	CSR902B (F_{su} = 50 ksi) (TI-45Cb)			ANE
SHEET	CLAD 2024-T81			
	ULTIMATE STRENGTH, LBS [2]			
RIVET DIAMETER	3/32	1/8	5/32	3/16
SHEET THICKNESS (IN.)				
0.020				
0.025				
0.032	(215 *)			
0.040	293 *	(357 *)	—	—
0.050	361	458 *	(554 *)	—
0.063	—	648	732 *	—
0.071	—	648	910 *	(942 *)
0.080	—	—	994	1172 *
0.090	—	—	—	1433
RIVET SHEAR	362	648	994	1433

NOTES:

1. Values are for R.T. use only.
2. Values that are (underlined) are for knife-edge condition. SEE "FASTENER NOTES" FOR RECOMMENDED SHEET THICKNESSES
3. * Denotes ultimate values based on 1.5 x yield.

TABLE A19   SOLID MONEL RIVETS CSK IN SS SHEET

ULTIMATE STRENGTH OF MS20427 MONEL RIVETS COUNTERSUNK IN STAINLESS STEEL SHEET (100° HEAD)

MS20427M (F_{su} = 49 ksi) MONEL — ULTIMATE STRENGTH, LB [2]

SHEET MATERIAL	RIVET	0.040	0.050	0.063	0.071	0.080	0.090	0.100	0.125	SHEAR
AISI 301 - 1/2 HARD / AISI 301 - FULL HARD	3/16	—	—	(984)	995	1132	1280	1400	1400	1400
	5/32	—	(873)	688	741	850	973	—	—	973
	1/8	(439)	447	538	615	635	—	—	—	635
	3/32	(251)	322	355	—	—	—	—	—	355
AISI 301 - 1/4 HARD	3/16	—	—	(990)	1118	1255	1400	—	—	1400
	5/32	—	(873)	732	830	936	973	—	—	973
	1/8	(439)	468	595	635	—	—	—	—	635
	3/32	—	(613)	830	936	973	—	—	—	973
AISI 302 ANNEALED	3/16	—	—	(1028 *)	1157 *	1298 *	1400	—	—	1400
	5/32	—	(603 *)	759 *	855 *	965 *	—	—	—	973
	1/8	(389 *)	486 *	612 *	—	—	—	—	—	635

NOTES:

1. Values are for R.T. use only.
2. Values that are (underlined) are for knife-edge condition.
3. * Denotes ultimate values based on 1.5 x yield.

TABLE A20   TENSION STRENGTH OF SOLID ALUM. RIVETS

EFFECTIVE ULTIMATE TENSION STRENGTH OF ALUMINUM RIVETS IN ALUMINUM SHEET (FOR SECONDARY LOADING)

PROTRUDING HEAD RIVETS

RIVET	MS 20470 AD (2117-T3)			
SHEET	BARE & CLAD 2024-T3, T4, T6, T8X, 7075-T6			
	ULTIMATE STRENGTH - LB			
D \ t	1/8	5/32	3/16	1/4
.020	140			
.025	180	220		
.032	240	260	320	
.040	300	350	420	570
.050	375	430	520	700
.063	416	560	640	860
.071		642	730	970
.080			825	1100
.090			935	1230
.100				1380
.125				1650

FLUSH HEAD RIVETS

RIVET	MS 20426 AD (2117-T3)			
SHEET	BARE & CLAD 2024-T3, T4, T6, T8X, 7075-T6			
	ULTIMATE STRENGTH - LB			
D \ t	1/8	5/32	3/16	1/4
.050	230			
.063	330	360		
.071	375	440	480	
.080		535	590	
.090		578	715	
.100			842	925
.125				1350
.160				1485

TABLE A22   BLIND PROT. HEAD RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD ALUMINUM ALLOY (2017) RIVETS IN ALUMINUM SHEET (1) (OVERSIZE DIAMETER)

RIVET TYPE	NAS 1758D (F$_{su}$ = 38 ksi)		AOM
SHEET MATERIAL	CLAD 2024-T3		
RIVET DIAMETER	1/8	5/32	3/16
HOLE DIAMETER	(0.144)	(0.178)	(0.207)
SHEET THICK	ULTIMATE STRENGTH, LBS.		
0.020	199		
0.025	278	307	
0.032	373	453	476
0.040	429	577	677
0.050	494	659	810
0.063	583	767	934
0.071	619	830	1011
0.080		906	1097
0.090		935	1195
0.100			1260
RIVET SHEAR	619	935	1260

RIVET TYPE	NAS 1768D (F$_{su}$ = 38 ksi)		AOM
SHEET MATERIAL	CLAD 7075-T6		
RIVET DIAMETER	1/8	5/32	3/16
HOLE DIAMETER	(0.144)	(0.178)	(0.207)
SHEET THICK	ULTIMATE STRENGTH, LBS.		
0.020	252		
0.025	301	384	
0.032	373	469	557
0.040	442	570	676
0.050	508	674	819
0.063	578	777	963
0.071	619	827	1028
0.080		890	1098
0.090		935	1178
0.100			1260
RIVET SHEAR	619	935	1260

NOTES:
1. Values are for room temperature use only.

TABLE A21   BLIND PROT. HEAD RIVETS IN ALUM.

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD ALUMINUM ALLOY RIVETS IN ALUMINUM SHEET (1)

RIVET TYPE	NAS 1398 B AND NAS 1398 B, CODE A (F$_{su}$ = 30 ksi)				NAS 1398 D AND NAS 1398 D, CODE A (F$_{su}$ = 38 ksi)				NAS 1738 B AND NAS 1738 E, (F$_{su}$ = 34 ksi)		
SHEET MATERIAL	CLAD 2024-T3 AND HIGHER STRENGTH ALUMINUM ALLOYS										
RIVET DIAMETER	1/8	5/32	3/16	1/4	1/8	5/32	3/16	1/4	1/8	5/32	3/16
HOLE DIAMETER	(0.130)	(0.162)	(0.194)	(0.258)	(0.130)	(0.162)	(0.194)	(0.258)	(0.144)	(0.178)	(0.207)
SHEET THICK	ULTIMATE STRENGTH, LBS										
0.020	167	169	199		167	189	199		199	216	228
0.025	228	262	290		228	262	290	314	267	305	330
0.032	289	364	412	479	304	384	412	479	368	428	473
0.040	337	448	553	670	355	470	553	670	427	567	636
0.050	388	521	662	914	418	548	696	914	490	650	815
0.063		596	781	1145	494	647	815	1205	504	735	912
0.071			854	1240		710	894	1303	504	762	976
0.080			862	1350		785	975	1420		782	1028
0.090				1475			1069	1545			1028
0.100				1550			1090	1870			1026
0.125								1970			
RIVET SHEAR	388	596	662	1550	494	755	1090	1970	554	837	1128

Denotes ultimate values based on 1.5 x yield.

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD MONEL RIVETS IN ALUMINUM SHEET (1)

RIVET	NAS 1398 MS, MW AND CODE A (F$_{su}$ = 55 ksi)		
SHEET	CLAD 7075-T6 & HIGHER ALUM ALLOYS		
	ULTIMATE STRENGTH, LBS.		
D \ t	1/8	5/32	3/16
0.020	232	258	
0.025	318	361	394
0.032	404	506	569
0.040	466	624	774
0.050	546	720	922
0.063	647	845	1072
0.071	710	921	1168
0.080		1009	1272
0.090		1090	1387
0.100			1507
0.125			1580
RIVET SHEAR	710	1090	1580

Yield strength is in excess of 80% of ultimate.

NOTES:
1. Values are for room temperature use only.

TABLE A23   BLIND PROT. HEAD RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD ALUMINUM ALLOY (5056 "CHERRYMAX") RIVETS IN ALUMINUM SHEET

PART NO.	CR3213			ARN
HEAD STYLE	PROTRUDING			
SHEET MATERIAL	2024-T3 CLAD			
FASTENER DIAMETER, IN.	1/8	5/32	3/16	1/4
(NOMINAL DIAMETER, IN.)	(0.1300)	(0.1620)	(0.1940)	(0.2580)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.016	102			
0.020	172	202		
0.025	223	267	308	
0.032	295	358	415	517
0.040	334	458	538	681
0.050	383	520	673	888
0.063	445	599	768	1150
0.071	470	648	827	1235
0.080	498	697	892	1329
0.090	530	736	966	1420
0.100	561	775	1020	1520
0.125	636	873	1135	1760
0.160	664	1001	1300	1970
0.190		1030	1428	2155
0.250			1480	2513
0.312				2615
FASTENER SHEAR STRENGTH	664	1030	1480	2615

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD ALUMINUM ALLOY (5056 "CHERRYMAX") RIVETS IN ALUMINUM SHEET (OVERSIZE DIAMETER)

PART NO.	CR3243			ARE
HEAD STYLE	PROTRUDING			
SHEET MATERIAL	2024-T3 CLAD			
FASTENER DIAMETER, IN.	1/8	5/32	3/16	1/4
(NOMINAL DIAMETER, IN.)	(0.1460)	(0.1760)	(0.2070)	(0.2730)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.016	122			
0.020	206	240		
0.025	269	317	358	
0.032	356	426	485	595
0.040	429	552	627	791
0.050	485	659	810	1025
0.063	558	749	930	1335
0.071	589	805	995	1490
0.080	619	867	1065	1585
0.090	652	909	1150	1695
0.100	685	950	1205	1800
0.125	758	1055	1325	2055
0.160	797	1163	1495	2275
0.190		1206	1575	2465
0.250			1680	2745
0.312			2800	2925
FASTENER SHEAR STRENGTH	814	1245	1685	2925

NOTES:
1. Values are for room temperature only.
2. * denotes ultimate values based on 1.5 x yield.
3. Preliminary allowables, Cherry Textron testing.

TABLE A24 BLIND PROT. HEAD RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD MONEL RIVETS IN ALUMINUM SHEET

RIVET TYPE	CR4523 (Fsu = 65 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/4 (0.256)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.020	221			
0.025	284	344		
0.032	373	456	533	
0.040	475	582	684	878
0.050	602	740	875	1130
0.063	701	945	1120	1455
0.071	729	1055	1270	1655
0.080	760	1095	1440	1865
0.090	796	1140	1540	2135
0.100	831	1180	1590	2390
0.125	863	1290	1725	2760
0.160		1340	1905	3005
0.190			1920	3215
0.250				3400
RIVET SHEAR STRENGTH	863	1340	1920	3400

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD MONEL RIVETS IN ALUMINUM SHEET (OVERSIZE DIAMETER)

RIVET TYPE	NAS 1788M (Fsu = 55 ksi)		AOO
SHEET MATERIAL	CLAD 7075-T6		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.020	245		
0.025	332	380	
0.032	444	526	591
0.040	521	667	771
0.050	597	802	994
0.063	697	925	1140
0.071	761	1001	1226
0.080	836	1087	1324
0.090	885	1182	1435
0.100		1280	1547
0.125		1353	1623
RIVET SHEAR	895	1353	1623

NOTES: Values are for room temperature only.

TABLE A25 BLIND PROT. HEAD RIVETS IN ALUMINUM AND AISI 301

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD A-286 RIVETS IN ALUMINUM

RIVET TYPE	CR4623 (Fsu = 75 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/4 (0.258)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.020	237			
0.025	298	367		
0.032	385	478	566	
0.040	488	601	714	939
0.050	610	757	902	1185
0.063	772	958	1145	1505
0.071	856	1080	1290	1705
0.080	903	1220	1455	1925
0.090	956	1340	1645	2175
0.100	995	1405	1830	2425
0.125		1545	2055	3035
0.160			2215	3570
0.190				3885
0.250				3920
RIVET SHEAR STRENGTH	995	1545	2215	3920

ULTIMATE STRENGTH OF BLIND PROTRUDING HEAD MONEL RIVETS IN STAINLESS STEEL SHEET

RIVET TYPE	NAS 1398 MS OR MW AND NAS 1398 MS OR MW CODE A (Fsu = 55 ksi)			
SHEET MATERIAL	AISI 301-HALF HARD			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			Yield strength is in excess of 80% of ultimate
0.020	378	480	591	
0.025	452	584	715	
0.032	568	734	894	
0.040	594	870	1094	
0.050	632	915	1270	
0.063	678	971	1335	
0.071	706	1009	1380	
0.080	710	1048	1425	
0.090		1090	1478	
0.100			1532	
0.125			1580	
RIVET SHEAR	710	1090	1580	

NOTES: Values are for room temperature use only.

TABLE A26 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS IN CLAD ALUMINUM ALLOYS (100° HEAD) (1)

RIVET TYPE	NAS 1399 B AND NAS 1399 B, CODE A (5056) (Fsu = 30 ksi)			NAS 1399 D AND NAS 1399 D, CODE A (2017) (Fsu = 36 ksi)		
SHEET MATERIAL	CLAD 2024-T3 AND HIGHER STRENGH ALUMINUM ALLOYS					
RIVET DIAMETER (NOMINAL HOLE)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.					
0.032						
0.040	(108 *)			(108 *)		
0.050	171 *	(170 *)		171 *	(170 *)	
0.063	296 *	273 *	(255 *)	296 *	273 *	(255 *)
0.071	365	368 *	330 *	371 *	368 *	330 *
0.080	388	474 *	456 *	423	474 *	456 *
0.090		578	599 *	459	594 *	599 *
0.100		596	740 *	494	652	740 *
0.125			862		755	969
0.160						1090
RIVET SHEAR	388	596	862	494	755	1090

RIVET TYPE	NAS 1399 MS OR MW AND NAS 1399 MS OR MW, CODE A (Fsu = 55 ksi)		
SHEET MATERIAL	MONEL CLAD 7075-T6 AND HIGHER STRENGH ALUMINUM ALLOYS		
RIVET DIAMETER (NOMINAL HOLE)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)
SHEET THICK	ULTIMATE STRENGTH, LBS.		
0.032			
0.040	(209 *)		
0.050	335 *	(327 *)	
0.063	497 *	530 *	(527 *)
0.071	557	654 *	677 *
0.080	610	784	845 *
0.090	636	873	1031 *
0.100	662	937	1175
0.125	710	1015	1370
0.160		1090	1505
0.190			1580
RIVET SHEAR	710	1090	1580

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A27 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS IN CLAD ALUMINUM 2024-T3 ALLOY (100° HEAD) (1)

RIVET TYPE	NAS 1739 B AND NAS 1739 E (Fsu = 34 ksi)		AAT / AAV
SHEET MATERIAL	CLAD 2024-T3 AND HIGHER		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.020			
0.025			
0.032	(212)		
0.040	266	(326)	
0.050	344	410	
0.063	441	533	(605)
0.071	504	608	696
0.080	554	693	794
0.090		787	900
0.100		837	1015
0.125			1128
RIVET SHEAR STRENGTH	554	837	1128

RIVET TYPE	NAS 1769 D (Fsu = 38 ksi)		AOP
SHEET MATERIAL	CLAD 2024-T3		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.032	(177 *)		
0.040	290 *	(285 *)	
0.050	361	447 *	(470 *)
0.063	446	561	675 *
0.071	502	624	741
0.080	564	700	818
0.090	619	786	921
0.100		871	1020
0.125		935	1260
RIVET SHEAR STRENGTH	619	935	1260

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A28 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS IN CLAD 7075-T6 ALUMINUM ALLOY (100° HEAD) (1)

RIVET TYPE	NAS 1769 D 2017 SLEEVE, 7075 STEM (F_{su} = 36 ksi)		AOH
SHEET MATERIAL	CLAD 7075-T6		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.032	(244)		
0.040	(305)		
0.050	382	(470)	
0.063	485	592	(676)
0.071	525	683	773
0.080	569	749	891
0.090	619	811	988
0.100		871	1060
0.125		935	1237
0.160			1260
RIVET SHEAR STRENGTH	619	935	1260

RIVET TYPE	NAS 1769 M (F_{su} = 55 ksi) (MONEL)		AOS
SHEET MATERIAL	CLAD 7075-T6		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.032	(273*)		
0.040	342*	(423*)	
0.050	455*	528*	
0.063	653	732*	(771*)
0.071	686	917*	920*
0.080	724	1007	1170*
0.090	765	1058	1345
0.100	805	1109	1405
0.125	895	1236	1551
0.160		1353	1757
0.190			1823
RIVET SHEAR STRENGTH	895	1353	1823

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A29 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS IN CLAD 7075-T6 ALUMINUM (100° HEAD) (1)

RIVET TYPE	NAS 1921 B (F_{su} = 36 ksi)		AFH
SHEET MATERIAL	CLAD 7075-T6		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.		
0.032			
0.040	(165*)		
0.050	232	(257*)	
0.063	313	366	(405*)
0.071	360	427	(484)
0.080	416	498	566
0.090	477	571	658
0.100	494	647	748
0.125		755	978
0.160			1090
RIVET SHEAR STRENGTH	495	755	1090

RIVET TYPE	NAS 1921 M (F_{su} = 75 ksi), MONEL		WF	NAS 1921 C (F_{su} = 75 ksi), (A286)		WH
SHEET MATERIAL	CLAD 7075-T6					
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS					
0.050	531*					
0.063	671*	831*		548*		
0.071	756*	938*		699*	857*	
0.080	854*	1061*	1265*	792*	974*	
0.090	911*	1194*	1428*	897*	1106*	1310*
0.100	939*	1328*	1590*	959*	1253*	1485*
0.125	1020	1458*	1698*	1029*	1397*	1658*
0.160		1565*	2145*		1598*	1988*
0.190			2260			2400*
RIVET SHEAR STRENGTH	1020	1565	2260	1090	1670	2400

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A30 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS (CHERRYMAX) IN 2024-T3 ALUMINUM ALLOY (100° HEAD) (1)

RIVET TYPE	CR3212 (F_{su} = 50 ksi)			ARM
SHEET MATERIAL	CLAD 2024-T3			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/4 (0.258)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.032	(152*)			
0.040	(219*)	(239*)		
0.050	302*	(341*)	(368*)	
0.063	380*	474*	(527*)	
0.071	423	536*	(624*)	(722*)
0.080	474*	599*	725*	(869*)
0.090	511*	669*	810*	(1034*)
0.100	548*	737*	893*	1197*
0.125	620*	852*	1085	1490*
0.160	654*	977*	1266*	1875
0.190		1007*	1394*	2100
0.250			1466*	2453*
0.312				2565*
RIVET SHEAR STRENGTH	664	1030	1480	2615

RIVET TYPE	CR3242 (F_{su} = 50 ksi)			ARD
SHEET MATERIAL	CLAD 2024-T3			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)	1/4 (0.273)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
00.25	(144*)			
0.032	(200*)	(230*)		
0.040	275*	(312*)	(344*)	
0.050	349	425*	(462*)	
0.063	445	543	(641*)	(758*)
0.071	514	605	714	(891*)
0.080	545	701	794	(1064*)
0.090	573	803	911	1200
0.100	600	837	1035	1315
0.125	669	921	1165	1690
0.160	765	1040	1305	2000
0.190	814	1145	1425	2160
0.250		1245	1660	2470
0.312			1685	2795
0.375				2925
RIVET SHEAR STRENGTH	814	1245	1685	2925

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.
4. Preliminary allowables, Cherry Textron testing.

TABLE A31 BLIND CSK RIVETS IN ALUMINUM

ULTIMATE STRENGTH OF BLIND COUNTERSUNK HEAD RIVETS IN 7075-T6 ALUMINUM ALLOY (100° HEAD) (1)

RIVET TYPE	CR4522 (F_{su} = 65 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)	1/4 (0.258)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.050	254*			
0.063	519*	410*		
0.071	681*	612*		
0.080	754*	843*	725*	
0.090	776*	1095	1032*	
0.100	797	1170	1332*	
0.125	852	1240	1695	2033*
0.160	863	1335	1810	2975
0.190		1340	1910	3105
0.250			1920	3365
0.312				3400
RIVET SHEAR STRENGTH	863	1340	1920	3400

RIVET TYPE	CR4622 (F_{su} = 75 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.144)	5/32 (0.178)	3/16 (0.207)	1/4 (0.273)
SHEET THICKNESS, IN.	ULTIMATE STRENGTH, LBS.			
0.050	317*			
0.063	576*	509*		
0.071	734*	705*		
0.080	913*	930*	861*	
0.090	947	1181*	1161*	
0.100	982	1420*	1455*	1280*
0.125	995	1525	2060	2258*
0.160		1545	2215	3605
0.190				3810
0.250				3920
RIVET SHEAR STRENGTH	995	1545	2215	3920

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.

TABLE A32   BLIND CSK RIVETS IN AISI 301 SS

ULTIMATE STRENGTH OF BLIND COUNTERSUNK MONEL RIVETS IN AISI 301 SHEET (100° HEAD) (1)

RIVET TYPE	NAS 1399 MS OR MW AND NAS 1399 MS OR MW, CODE A (F_{su} = 55 ksi)		
SHEET MATERIAL	AISI 301 - HALF HARD		
RIVET DIAMETER, IN. (NOMINAL HOLE DIAMETER, IN.)	1/8 (0.130)	5/32 (0.162)	3/16 (0.194)
	ULTIMATE STRENGTH, LBS.		
SHEET THICKNESS, IN.			
0.032			
0.040	(245 *)		
0.050	363	(389 *)	
0.063	491	569	
0.071	569	668	(744 *)
0.080	657	776	886
0.090	710	898	1032
0.100		1019	1182
0.125		1090	1580
RIVET SHEAR STRENGTH	710	1090	1580

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A33   BLIND BOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF BLIND BOLTS (100° HEAD) IN ALUMINUM ALLOY (1)

FASTENER TYPE	MS 90353 (F_{su} = 112 ksi)					TY
SHEET MATERIAL	CLAD OR BARE 7075-T6 OR T651					
FASTENER DIAM (NOMINAL HOLE)	5/32 (0.163)	3/16 (0.198)	1/4 (0.259)	5/16 (0.311)	3/8 (0.373)	
	ULTIMATE STRENGTH, LBS.					
SHEET THICKNESS						
0.050						
0.063						
0.071	(836 *)					
0.080	1000 *	(1136 *)				
0.090	1181 *	1313 *	(1573 *)			
0.100	1364 *	1538 *	(1860 *)			
0.125	1823 *	2093 *	2460 *	(2790 *)		
0.160	2340	2865 *	3473 *	3885 *	(4275 *)	
0.190		3450	4343 *	4935 *	5531 *	
0.250			5900	7020 *	8018 *	
0.312				8500	10613 *	
0.375					12200	
FASTENER SHEAR	2340	3450	5900	8500	12200	

NOTES
1. Values are for room temperature are use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are underlined are knife edge.

TABLE A34   BLIND BOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF BLIND BOLTS (100° HEAD) IN CLAD 7075-T6 ALUMINUM (1)

FASTENER TYPE	MS 21140 (F_{su} = 95 ksi)					ACC
SHEET MATERIAL	CLAD 7075-T6					
FASTENER DIAM, IN. (NOMINAL SHANK DIAM)	5/32 (0.163)	3/16 (0.198)	1/4 (0.259)	5/16 (0.311)	3/8 (0.373)	
	ULTIMATE STRENGTH, LBS.					
SHEET THICKNESS						
0.050						
0.063						
0.071	(717 *)					
0.080	876 *	(941 *)				
0.090	1053 *	1095 *				
0.100	1229 *	1352 *	(1538 *)			
0.125	1673 *	1890 *	2153 *	(2310 *)		
0.160	1972 *	2640 *	3135 *	3428 *	(3645 *)	
0.190		2880 *	3983 *	4448 *	4853 *	
0.200			4260 *	4785 *	5285 *	
0.250			4868 *	6480 *	7290 *	
0.312					9690 *	
FASTENER SHEAR	1980	2925	5005	7215	10380	

RIVET TYPE	NAS 1670-L					AKY
SHEET MATERIAL	CLAD 7075-T6					
FASTENER DIAM, IN. (NOMINAL SHANK DIAM)	5/32 (0.163)	3/16 (0.198)	1/4 (0.259)	5/16 (0.311)	3/8 (0.373)	
	ULTIMATE STRENGTH, LBS.					
SHEET THICKNESS						
0.063	(750 *)					
0.071	902 *	(971 *)				
0.080	1067 *	1182 *	(1308 *)			
0.090	1203 *	1412 *	(1590 *)			
0.100	1331 *	1528 *	(1883 *)	(2025 *)		
0.125	1658 *	2010 *	2655 *	(2895 *)		
0.160	1678	2550 *	3375 *	4080 *	(4583 *)	
0.190		2620	3983 *	4800 *	(5835 *)	
0.250			4500	6000	7530 *	
0.312					9420 *	
0.375					9750	
FASTENER SHEAR	1678	2520	4500	6000	9750	

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A35   BLIND BOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF BLIND BOLTS (100° HD.) IN CLAD 2024 AND 7075 ALUMINUM (1)

FASTENER TYPE	FF-200		FF-260		FF-312	
SHEET MATERIAL	CLAD 2024-T42	CLAD 7075-T6	CLAD 2024-T42	CLAD 7075-T6	CLAD 2024-T42	CLAD 7075-T6
FASTENER DIAM, IN. (NOMINAL SHANK)	3/16 (0.198)	3/16 (0.198)	1/4 (0.259)	1/4 (0.259)	5/16 (0.311)	5/16 (0.311)
	ULTIMATE STRENGTH, LBS.					
SHEET THICKNESS						
0.032						
0.040						
0.050						
0.063						
0.071	(1028 *)	(1275 *)				
0.080	1155 *	1395 *				
0.090	1305 *	1538 *				
0.100	1470 *	1685 *	(1680 *)	(1920 *)		
0.125	1800 *	1960 *	2070 *	2400 *	(2160 *)	(2310 *)
0.160	2160	2200	2550 *	3075 *	2730 *	2970 *
0.190	2400	2420	3015 *	3705 *	3300 *	3780 *
0.250	2620	2620	3900 *	4320 *	4425 *	5565 *
0.312			4500	4500	5535 *	
FASTENER SHEAR	2620	2620	4500	4500	6000	6000

FASTENER TYPE	SSHFA-200 (F_{bu} = 50 ksi)		SSHFA-260 (F_{bu} = 50 ksi)	
SHEET MATERIAL	CLAD 2024-T42	CLAD 7075-T6	CLAD 2024-T42	CLAD 7075-T6
FASTENER DIAM, IN. (NOMINAL SHANK)	3/16 (0.198)	3/16 (0.198)	1/4 (0.259)	1/4 (0.259)
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS				
0.032				
0.040				
0.050				
0.063				
0.071	(790)	(880)		
0.080	1040	1060		
0.090	1270	1270		
0.100	1450	1450	(1880)	(1880)
0.125	1550	1550	2010	2250
0.160			2300	2850
0.190			2520	
0.250			2650	
FASTENER SHEAR	1550	1550	2650	2650

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A36   BLIND BOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF BLIND BOLTS (100° HEAD) IN ALLUMINUM ALLOY (1)

FASTENER TYPE	PLT-150 (Fsu = 112 ksi) (H-11 Nut and screw, Inconel X-750 or A-286 Sleeve)			
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAM, IN. (NOMINAL SHANK)	5/32 (0.163)	3/16 (0.198)	1/4 (0.259)	3/8 (0.373)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.			
0.063	(801)*			
0.071	923*	(1095)*		
0.080	1058*	1245*		
0.090	1208*	1430*	(1815)*	
0.100	1359*	1613*	(2018)*	
0.125	1853*	2085*	2625*	
0.160	2318*	2865*	3465*	(4740)*
0.190			4448*	5775*
0.250			5760*	8093*
0.312				10478*
FASTENER SHEAR	2340	3450	5900	12250

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A37   LOCKBOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD TI LOCKBOLTS IN ALLUMINUM ALLOY (1)

FASTENER TYPE	GPL3SC-V Pin, 2SC-3C Collar (Fsu = 95 ksi)			
SHEET MATERIAL	CLAD 2024-T3			
FASTENER DIAM, IN. (NOMINAL SHANK)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 (0.375)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.			
0.050	(938)			
0.063	1255	(1535)		
0.071	1455	1795	(2085)	
0.080	1680	2085	2440	(2740)
0.090	1845*	2410	2845	3230
0.100	1980*	2735	3245	3725
0.125	2316*	3308*	4270	4930
0.160	2694	3930*	5243*	6645
0.190		4463*	5903*	7515*
0.250		4660	7230	9113*
0.312			7290	10490
0.375				
FASTENER SHEAR	2694	4660	7290	10490

FASTENER TYPE	GPL3SC-V Pin, 2SC-3C (Fsu = 95 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAM, IN. (NOMINAL SHANK)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 (0.375)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.			
0.050	(1105)			
0.063	1500	(1800)		
0.071	1740	2125	(2430)	
0.080	2020	2485	2865	(3170)
0.090	2200	2885	3365	3780
0.100	2355	3310	3865	4390
0.125	2694	3945	5135	5880
0.160		4660	6245	8005
0.190			7010	8955
0.250			7290	10490
FASTENER SHEAR	2694	4660	7290	10490

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A38   LOCKBOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD TI LOCKBOLTS IN ALUMINUM ALLOY (1)

RIVET TYPE	LGPL2SC-V Pin (Fsu = 95 ksi), 3SLC-C Collar			
SHEET MATERIAL	CLAD 2024-T3			
RIVET DIAM, IN. (NOMINAL SHANK)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 (0.375)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.			
0.050	(836)			
0.063	1180	(1350)		
0.071	1395	1630	(1775)	
0.080	1640	1950	2155	(2270)
0.090	1875*	2300	2595	2800
0.100	2070*	2650	3035	3335
0.125	2340	3420*	4140	4640
0.160	2655	4000	5460*	6500
0.190	2694	4355	6085	7800*
0.250		4660	6965	9180
0.312			7290	10270
0.375				10490
FASTENER SHEAR	2694	4660	7290	10490

RIVET TYPE	LGPL2SC-V Pin (Fsu = 95 ksi), 3SLC-C Collar			
SHEET MATERIAL	CLAD 7075-T6			
RIVET DIAM, IN. (NOMINAL SHANK)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 (0.375)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.			
0.050	(1040)			
0.063	1370	(1710)		
0.071	1575	1980	(2345)	
0.080	1805	2280	2715	(3105)
0.090	2060	2615	3130	3620
0.100	2315	2950	3550	4130
0.125	2590	3790	4605	5375
0.160	2694	4430	6070	7150
0.190		4660	6750	8660
0.250			7290	10154
0.312				10490
FASTENER SHEAR	2694	4660	7290	10490

NOTES
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A39   CHERRYBUCK FASTENERS CSK IN ALUMINUM

ULTIMATE STRENGTH OF PROTRUDING SHEAR HEAD TI "CHERRYBUCK" FASTENERS IN ALUMINUM ALLOY (1)

FASTENER TYPE	CSR 925 (Fsu = 95 ksi) AMP		
SHEET MATERIAL	CLAD 2024-T3		
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.		
0.050	807		
0.063	1020	1180	
0.071	1150	1335	
0.080	1300	1505	1970
0.090	1465	1695	2220
0.100	1630	1885	2470
0.125	2007	2360	3095
0.160		2694	3975
0.190			4660
FASTNENER SHEAR	2007	2694	4660

FASTENER TYPE	CSR 925 (Fsu = 95 ksi) AMP		
SHEET MATERIAL	CLAD 7075-T6		
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)
SHEET THICK	ULTIMATE STRENGTH, LBS.		
0.050	995		
0.063	1227	1442	
0.071	1371	1607	
0.080	1532	1792	2415
0.090	1711	2001	2688
0.100	1890	2205	2960
0.125	2007	2694	3641
0.160			4595
0.190			4660
FASTENER SHEAR	2007	2694	4660

NOTES:
1. Values are for room temperature use only.

TABLE A40 CHERRYBUCK FASTENERS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD TI
"CHERRYBUCK" FASTENERS IN ALUMINUM ALLOY (1)

FASTENER TYPE	CSR 924 (F_{su} = 95 ksi)		AMC
SHEET MATERIAL	CLAD 2024-T3		
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)
	ULTIMATE STRENGTH, LBS.		
SHEET THICKNESS			
0.050	737		
0.063	1019	1118	
0.071	1152	1319	
0.080	1260 *	1509	1837
0.090	1350 *	1664 *	2168
0.100	1440 *	1767 *	2500
0.125	1665 *	2028 *	2969 *
0.160	1982 *	2394 *	3450 *
0.190		2694	3863 *
0.250			4660
FASTNENER SHEAR	2007	2694	4660

FASTENER TYPE	CSR 924 (F_{su} = 95 ksi)		AMC
SHEET MATERIAL	CLAD 7075-T6		
NOMINAL DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)
	ULTIMATE STRENGTH, LBS.		
SHEET THICK			
0.050	941		
0.063	1207	1393	
0.071	1385	1588	
0.080	1557	1779	2281
0.090	1775	2050	2594
0.100	1876	2263	2919
0.125	1950	2542	3765
0.160	2007	2660	4387
0.190		2694	4525
0.250			4660
FASTENER SHEAR	2007	2694	4660

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.

TABLE A41 HI-LOK FASTENERS IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD TI HI-LOK
IN CLAD 7075-T6 ALUMINUM (1)

FASTENER TYPE	HL 11 PIN (F_{su} = 95 ksi), HL 70 COLLAR			YH
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS, IN.				
0.040	(734)	(837)		
0.050	941	1083	(1343)	
0.063	1207	1393	(1762)	(2170)
0.071	1385	1588	2012	2463
0.080	1557	1779	2281	2823
0.090	1775	2050	2594	3193
0.100	1876	2263	2919	3631
0.125	1950	2542	3765	4594
0.160	2007	2660	3970	5890
0.190		2694	4165	6105
0.250			4530	6580
0.312			4660	7050
0.375				7290
FASTENER SHEAR	2007	2694	4660	7290

ULTIMATE STRENGTH OF PROTRUDING SHEAR HEAD ALLOY STEEL
HI-LOK IN CLAD 7075-T6 ALUMINUM (1)

FASTENER TYPE	HL 18 PIN (F_{su} = 95 ksi), HL 70 COLLAR			KD
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS, IN.				
0.050	1078			
0.063	1353	1559		
0.071	1520	1776		
0.080	1718	1957	2593	
0.090	1890	2224	2937	
0.100	1930	2473	3250 *	4050
0.125	2007	2580	4063	5075
0.160		2694	4450	6509
0.190			4620	6880
0.250			4660	7290
FASTENER SHEAR	2007	2694	4660	7290

NOTES:
1. Values are for room temperature use only.
2. Values that are (underlined) are knife edge.

TABLE A42 HI-LOK FASTENERS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD ALLOY STEEL
HI-LOKS IN CLAD 7075-T6 ALUMINUM (1)

FASTENER TYPE	HL 19 PIN (F_{su} = 95 ksi), HL 70 COLLAR			KE
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS				
0.050	968			
0.063	1251	1408		
0.071	1400	1606		
0.080	1595	1823	2344	
0.090	1815	2050	2675	
0.100	1903	2300	3000	3560
0.125	2005	2570	3781	4885
0.160		2694	4420	6051
0.190			4625	6832
0.250			4660	7290
FASTENER SHEAR	2007	2694	4660	7290

FASTENER TYPE	HL 719 PIN (F_{su} = 108 ksi), HL 79 COLLAR				ABJ
SHEET MATERIAL	7075-T6				
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 (0.375)
	ULTIMATE STRENGTH, LBS.				
SHEET THICKNESS					
0.040	(734)				
0.050	1044	(1131)			
0.063	1384	1565	(1813)		
0.071	1518	1820	2216		
0.080	1668	1998	2594	2916	
0.090	1784	2193	3015	3532	3724
0.100	1825	2345	3338	4059	4516
0.125	1979	2524	3980	5229	6167
0.160	2195	2774	4350	6347	7928
0.190		2989	4634	6702	9087
0.250		3062	5200	7412	9985
0.312			5300	8146	10870
0.375				8280	11760
FASTENER SHEAR	2281	3062	5300	8280	11930

NOTES
1. Values are for room temperature use only.
2. Values that are (underlined) are knife edge.

TABLE A43 THREADED FASTENERS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° FLUSH SHEAR HEAD (SS, PH13-8MO-H1000)
FASTENERS IN TI-6AI-4V ALLOY (1)

FASTENER TYPE	PBF 11 (F_{su} = 125 ksi)			
SHEET MATERIAL	ANNEALED TI-6AI-4V			
FASTENER DIAMETER (NOMINAL SHANK)	5/32 (0.164)	3/16 (0.250)	3/8 (0.375)	1/2 (0.500)
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS, IN.				
0.040	(1535)			
0.050	1963			
0.063	2528	(3656)		
0.071	2640	4213		
0.080		4813	(6820)	
0.090		5438	7818	
0.100		6140	8775	(11250)
0.125			11264	14575
0.160			13810	19250
0.190				23200
0.200				24540
FASTENER STRENGTH	2640	6140	13810	24540

ULTIMATE STRENGTH OF 100° FLUSH HEAD ALLOY STEEL
NAS 1620 (SERIES) FASTENERS IN CLAD 7075-T6 ALUMINUM (1)

FASTENER TYPE	NAS 1620 (F_{su} = 95 ksi)			
SHEET MATERIAL	CLAD 7075-T6			
FASTENER DIAMETER (NOMINAL SHANK)	3/16 (0.190)	1/4 (0.250)	5/16 (0.312)	3/8 0.375
	ULTIMATE STRENGTH, LBS.			
SHEET THICKNESS, IN.				
0.080	(1553) *			
0.090	1748 *			
0.100	1920 *	(2573) *		
0.125	2340 *	3195 *	(3285) *	
0.160	2690	3975 *	4350 *	(5100) *
0.190		4590 *	5160 *	6180 *
0.250		4650	6675 *	8130 *
0.312			7300	9945 *
0.375				10500
RIVET SHEAR STRENGTH	2690	4650	7300	10500

NOTES:
1. Values are for room temperature use only.
2. * Denotes ultimate values based on 1.5 x yield.
3. Values that are (underlined) are knife edge.

TABLE A44 SLEEVE BOLTS CSK IN ALUMINUM

ULTIMATE STRENGTH OF 100° REDUCED FLUSH HEAD (ALLOY STEEL PIN/ALUMINUM SLEEVE) IN ALUMINUM (1),(2)

FASTENER TYPE	MIL-B-8831/4 (F_{su} = 108 ksi)					
SHEET MATERIAL	CLAD 2024-T3					
FASTENER DIAMETER (NOMINAL HOLE)	3/16 (0.2390)	1/4 (0.3032)	5/16 (0.3695)	3/8 (0.4350)	7/16 (0.5022)	1/2 (0.5735)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.					
0.100	2175					
0.125	2720	3450	4205			
0.160	3290	4415	5380	6335	7315	
0.190		5240	6390	7525	8685	9920
0.250		5480	7945	9895	11425	13050
0.312		5655	8165	11085	14260	16285
0.375		5670	8385	11345	14845	19070
0.500			8760	11865	15445	19755
0.625				12385	16045	20440
0.750				12640	16645	21225
0.875					17100	21805
1.000						22250
FASTENER SHEAR	3290	5670	8760	12640	17100	22250

FASTENER TYPE	MIL-B-8831/4 (F_{su} = 108 ksi)					
SHEET MATERIAL	CLAD 7075-T6					
FASTENER DIAMETER (NOMINAL HOLE)	3/16 (0.2390)	1/4 (0.3032)	5/16 (0.3695)	3/8 (0.4350)	7/16 (0.5022)	1/2 (0.5735)
SHEET THICKNESS	ULTIMATE STRENGTH, LBS.					
0.100	2585					
0.125	3205	4100	5035			
0.160	3290	5205	6385	7560	8790	
0.190		5670	7535	8925	10360	11900
0.250			8760	11640	13495	15480
0.312				12395	16195	19180
0.375				12640	16625	21265
0.500					17100	22250
FASTENER SHEAR	3290	5670	8760	12640	17100	22250

NOTES
1. Values are for room temperature use only.
2. Fasteners installed in interference levels of 0.0025-0.008 in.
3. See MIL-B-8831/4 for nominal hole diameters.

TABLE A45 STEEL BOLT/SCREW BENDING MOMENTS

ULTIMATE ALLOWABLE SHANK BENDING MOMENTS FOR STEEL BOLTS AND SCREWS (ROOM TEMPERATURE)

F_{tu} KSI	125	160	180	220	
F_{ty} KSI	103	142	163	180	
F_{bu} KSI	197	259	294	346	
DIAMETER (INCH)	ULTIMATE ALLOWABLES SHANK BENDING MOMENT (IN-LBS)				SECTION MODULUS (I/C) (IN³)
0.190	133	175	198	233	.000673
0.250	302	397	451	531	.001534
0.312	590	776	881	1040	.002996
0.375	1020	1340	1520	1790	.00518
0.438	1620	2130	2415	2845	.00822
0.500	2415	3180	3605	4245	.01227
0.562	3440	4525	5135	6045	.01747
0.625	4720	6210	7045	8295	.02397
0.750	8160	10700	12150	14330	.04142
0.875	12970	17060	19360	22790	.06587
1.000	19340	25420	28860	33960	.09817

NOTES:
1. CRES steel is recommended when subjected to appreciable bending.
2. The use of bolts with an $F_{tu} \geq 180$ ksi requires approval by Structural Integrity.
3. The use of bolts and screws having 0.190 inch diameter or less is not recommended for bending applications.

TABLE A46 NUT AND COLLAR ALLOWABLE TENSILE LOADS

THREAD SIZE (IN.)	AN320C CASTILLATED (SHR.)	MS14145 CASTILLATED (SHR.)	HL70 HL79 HL82 (S.ALGN.) KFN 609 (S.ALGN.)	AN310C CASTILLATED (REG.)	HL97	MS14144 MS21043 MS21045L MS21046 MS20500	HL75 (S.ALGN.) HL78 HL86, 87 KFN511 KFN526 (S.ALGN.)
	ULTIMATE LOAD, LBS.						
532			1400		1940		2300
#10-32		1230	1600	4080	2500	2460	2750
1/4-28	2040	2290	3000	6500	4300	4580	5000
5/16-24	3250	3700	5000	10100	6300	7390	8300
3/8-24	5050	5720	7000	13600	8700	11450	12700
7/16-20	6800		9500	18500	12100	15450	19000
1/2-20	9250	10550	12500	23600	15300	21110	25500
9/16-18	11800		14500	30100	20500	26810	
5/8-18	15050	17060	18000		25700	34130	

NOTES:
1. The room temperature static load ratings above are not design allowables. They are based on the specification standards and are to be used as guideline data to aid in nut selections.

TABLE A47 BEAM FORMULAS FOR BEAMS OF UNIFORM SECTION

Beam formula table (Type and Loading):
- SIMPLE BEAM - SINGLE CONCENTRATED LOAD AT CENTER OF SPAN
- SIMPLE BEAM - UNIFORMLY DISTRIBUTED LOAD
- SIMPLE BEAM - SINGLE CONCENTRATED LOAD w AT DISTANCE a FROM SUPPORT, a>b
- SIMPLE BEAM - TWO CONCENTRATED LOADS w AT EQUAL DISTANCES a FROM SUPPORTS
- SIMPLE BEAM - SUBJECTED TO UNIFORM BENDING
- CANTILEVER BEAM - SINGLE CONCENTRATED LOAD AT FREE END
- CANTILEVER BEAM - UNIFORMLY DISTRIBUTED LOAD
- CANTILEVER BEAM - UNIFORM BENDING MOMENT M
- CANTILEVER BEAM - SINGLE CONCENTRATED LOAD AT OTHER. SINGLE CONCENTRATED LOAD AT CENTER.
- BEAM FIXED AT ONE END, SUPPORTED AT OTHER. SINGLE CONCENTRATED LOAD
- BEAM FIXED AT ONE END, SUPPORTED AT OTHER. UNIFORMLY DISTRIBUTED LOAD
- BEAM FIXED AT THE ENDS - SINGLE CONCENTRATED LOAD AT CENTER
- BEAM FIXED AT THE ENDS - UNIFORMLY DISTRIBUTED LOAD
- BEAM FIXED AT THE ENDS - TWO CONCENTRATED LOADS w AT EQUAL DISTANCES a FROM SUPPORTS

REFERENCES: Add to Chapters Indicated

Chapter C4
4) Plastic Analysis, Nadai,A., McGraw Hill Co.
5) An Extension of the Sand Heap Analogy in Plastic Torsion Having One or More Holes, Journal of Applied Mechanics, Dec. 1944

Chapter C7
14) Engineering Column Analysis (see Art.A18.27a)
15) Airplane Structures, Vol.2, 1943, Niles,A.S. and Newell, J.S., John Wiley and Sons
16) "Primary Instability of Extrusions Under Compressive Loads", Ramberg,W and Levy, S., Journal of Aeronautical Sciences, Oct., 1945
17) Primary Instability of Open-Section Stringers Attached to Shell, Levy,S. and Kroll,W., Journal of Aeronautical Sciences, Oct. 1948

Chapter C11 (p.C11.49)
10) Engineering Column Analysis (see Art.A18.27a)

Chapter C3
3) Engineering Column Analysis (see Art.A18.27a)

Following is an alternative analysis to that presented in Chapter A9. It is based upon the minimum energy principal instead of upon deflections as in Art.A9.2

A loaded bulkhead or frame, in a fuselage for example, is supported by the fuselage skin panels as in Fig.B1, which shows the general (but uncommon) case of an _unsymmetrical_ bulkhead. The applied loads consist of the loads, Q, and the reacting shear flows, q (determined by VQ/I and T/2A per Art.A20.3-A20.10). To determine the internal loads in the bulkhead it is "cut" at the top, and the unknown internal loads M_o, V_o and P_o there are shown acting on the left side of the cut (on segment 1) in Fig.B1(b). Opposite loads act on the right side of the cut (on segment 20). M_o, V_o and P_o are redundant loads and are positive for the directions shown. x and y are the moment arms for the forces V_o and P_o respectively, positive as shown. The bulkhead is then divided into a large number, N, of segments of length ΔS, at least twenty. The segments are usually of the same length.
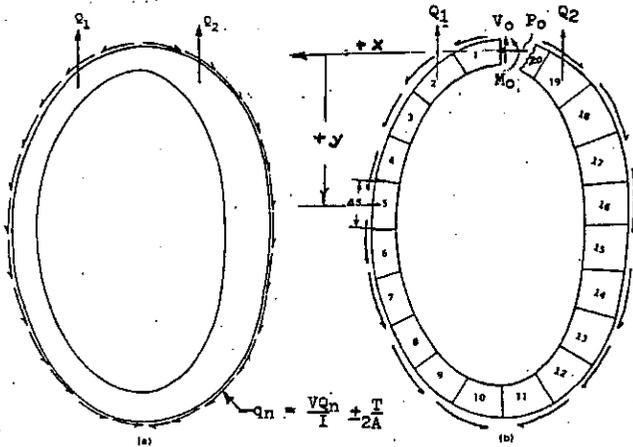
Fig.B1 Unsymmetrical Frame Analysis Data

The bending moment in each segment, n, is

$$M_n = M_{Q_n} + M_{q_n} + M_o + V_o x_n + P_o y_n \cdots\cdots(1)$$

where M_n is at the center of the segment. The moment of the shear flows, q, about each segment's center is calculated as shown on p.A19.19. Positive moments produce compression in the segments outer flange. The bending energy in each segment will be

$$U_n = M_n^2 \Delta S_n / 2 E_n I_n$$

and the total energy in the frame will be

$$U = \sum_{n=1}^{n=N} (M_{Q_n} + M_o + V_o x_n + P_o y_n)^2 \frac{\Delta S_n}{2 E_n I_n} \cdots\cdots(2)$$

where M_{Q,q_n} is $M_{Q_n} + M_{q_n}$.

---

* Bulkheads are relatively highly loaded and sturdy frames. For very light frames also see Fig.C9.13a.

The values of M_o, V_o and P_o must be such that U is a minimum. Therefore

$$\frac{\partial U}{\partial M_o} = 0, \quad \frac{\partial U}{\partial V_o} = 0 \quad and \quad \frac{\partial U}{\partial P_o} = 0$$

Differentiating (2) as indicated yields the three simultaneous equations

$$\sum_{n=1}^{n=N} (M_{Q_n} + M_o + V_o x_n + P_o y_n) \frac{\Delta S_n}{E_n I_n} = 0 \cdots\cdots(3)$$

$$\sum_{n=1}^{n=N} (M_{Q_n} + M_o + V_o x_n + P_o y_n) \frac{\Delta S_n x_n}{E_n I_n} = 0 \cdots\cdots(4)$$

$$\sum_{n=1}^{n=N} (M_{Q_n} + M_o + V_o x_n + P_o y_n) \frac{\Delta S_n y_n}{E_n I_n} = 0 \cdots\cdots(5)$$

All terms in the equations are known except the redundants and these are found by solving the three eqyations. The final values of M at the center of each segment are then calculated using Eq.(1).

The analysis is most easily carried out by using a tabular form (Table B1), and this is illustrated for the bulkhead shown in Fig.B2. The values of $M_{Q,qn}$, $\Delta S/E_n I_n$, x and y for the bulkhead are shown in Columns 3, 2, 4, and 5 respectively of Table B1. The final bending moments are shown in Col. 14. The values of V and P at the center of the segments would be calculated as noted in Col. 16 and 15 of Table B1 (by statics).
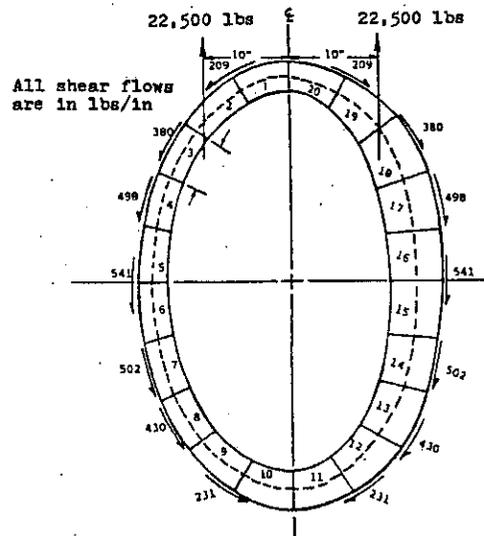
Fig.B2 Unsymmetrical Frame Analysis Data

Symmetrical Frame and Symmetrical Loads

For this case, due to symmetry, $V_o = 0$ so only Eq.(3) and (5) apply, and it is only necessary to use one-half of the frame. This procedure is illustrated for the frame of Fig.B2 assuming that its right side is the same as its left side. Table B2 shows

Table B1 Unsymmetrical Frame Analysis

① Segment	② ΔS/EI 1/Lb-In	③ M_{Q,q} Lb-In	④ x in.	⑤ y in.	⑥ $\frac{M_{Q,q}\Delta S}{EI}$ ③x②	⑦ $\frac{\Delta Sx}{EI}$ ②x④	⑧ $\frac{\Delta Sy}{EI}$ ②x⑤	⑨ $\frac{M_{Q,q}\Delta Sx}{EI}$ ④x⑥	⑩ $\frac{\Delta Sx^2}{EI}$ ②x④²	⑪ $\frac{\Delta Sxy}{EI}$ ②x④x⑤	⑫ $\frac{M_{Q,q}\Delta Sy}{EI}$ ⑥x⑤	⑬ $\frac{\Delta Sy^2}{EI}$ ②x⑤²	⑭ M_{final} ③ + M_o + V_o x④ + P_o x⑤	⑮ Axial Load	⑯ Shear Load
								6 x 4							
1	.900	0	3.0	.7	0	2.70	.63	0	8.10	1.89	0	.44	-21,649	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o and V_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	.900	2,700	8.8	3.9	2,430	7.92	3.51	21,384	69.70	30.89	9,477	13.69	-38,854		
3	.900	70,900	12.5	9.0	63,810	11.25	8.10	797,625	140.63	101.25	574,290	72.90	-1,515		
4	.900	138,200	14.9	14.7	124,381	13.41	13.23	1,853,262	199.80	197.13	1,828,386	194.48	31,565		
5	.900	177,600	15.8	20.5	159,841	14.22	18.45	2,525,472	224.68	291.51	3,276,720	378.23	36,384		
6	.900	209,200	16.6	26.6	188,280	14.22	23.94	2,974,824	224.68	378.25	5,008,248	636.81	31,763		
7	.900	250,300	14.9	33.1	225,270	13.41	29.79	3,356,523	199.81	443.87	7,456,437	986.05	34,406		
8	.900	259,700	12.5	38.4	233,730	11.25	34.56	2,921,625	140.63	432.00	8,975,232	1,327.1	12,708		
9	.900	250,800	8.8	43.2	225,720	7.92	38.88	1,986,336	69.70	342.14	9,751,104	1,679.6	-24,118		
10	.900	240,300	3.0	46.1	216,270	2.70	41.49	648,810	8.10	124.47	9,970,047	1,912.7	-50,934		
11	1.154	240,300	-3.0	46.0	277,306	-3.46	53.08	-831,918	10.38	-159.25	12,756,076	2,441.9	-49,406		
12	1.598	248,100	-8.2	43.0	396,464	-13.10	68.71	-3,251,005	107.45	-563.45	17,047,952	2,954.7	-22,981		
13	1.864	246,400	-11.6	38.3	459,290	-21.62	71.39	-5,327,764	250.82	-828.14	17,590,807	2,734.3	3,757		
14	2.130	231,100	-13.4	33.2	492,243	-28.54	70.72	-6,595,056	382.46	-947.59	16,342,468	2,347.8	19,021		
15	2.308	191,100	-14.3	26.6	441,059	-33.00	61.39	-6,307,143	471.96	-877.92	11,732,169	1,633.0	-18,352		
16	2.308	157,100	-14.3	20.5	362,586	-33.00	47.31	-5,184,980	471.96	-676.59	7,433,013	989.9	20,574		
17	2.130	109,500	-13.4	14.8	233,235	-28.54	31.52	-3,125,349	382.46	-422.42	3,451,878	466.5	6,680		
18	1.864	75,700	-11.6	9.1	141,105	-21.62	16.96	-1,636,818	250.82	-196.76	1,284,056	154.3	-6,446		
19	1.598	4,600	-8.2	3.9	7,351	-13.10	6.23	-60,278	107.45	-51.10	28,669	24.3	-34,306		
20	1.154	0	-3.0	.7	0	-3.46	.61	0	10.38	-2.42	0	.6	-20,714		
	Σ = 27.108				Σ = 4,250,369	-100.44	640.7	-15,235,450	3732.9	-2,382.2	134,517,029	20,929.3			

** $M_{Q,q} = M_Q + M_q$

* When ΔS or E or I is constant over the frame it can be considered to be unity for Column ②. For this example E and ΔS are constant and are taken as being 1.0.

$$\Sigma⑥ + M_o\Sigma② + V_o\Sigma⑦ + P_o\Sigma⑧ = 0$$
$$\Sigma⑨ + M_o\Sigma⑦ + V_o\Sigma⑩ + P_o\Sigma⑪ = 0 \quad\quad \text{Solve for } M_o, V_o \& P_o$$
$$\Sigma⑫ + M_o\Sigma⑧ + V_o\Sigma⑪ + P_o\Sigma⑬ = 0$$

$$M_o = -17625$$
$$V_o = -155.8$$
$$P_o = -5938$$

Table B2 Symmetrical Frame with Symmetrical Applied Loads

① Segment	② $\frac{\Delta S}{EI}$ Given	③ M_{Q,q} Given	④ y Given	⑤ $\frac{M_{Q,q}\Delta S}{EI}$ ③x②	⑥ $\frac{\Delta Sy}{EI}$ ②x④	⑦ $\frac{M_{Q,q}\Delta Sy}{EI}$ ③x⑥	⑧ $\frac{\Delta Sy^2}{EI}$ ②x④²	⑨ M_{final} ⑤ + M_o + P_o x④	⑩ Axial Load	⑪ Shear Load
1	1	0	.7	0	.7	0	0	-24,907	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	1	2,700	3.9	2,700	3.9	11,000	15.2	-41,063		
3	1	70,900	9.0	70,900	9.0	638,000	81.0	-2,197		
4	1	138,200	14.7	138,200	14.7	2,032,000	216.1	30,794		
5	1	177,600	20.5	177,600	20.5	3,641,000	420.3	36,016		
6	1	209,200	26.6	209,200	26.6	5,565,000	707.6	31,670		
7	1	250,300	33.1	250,300	33.1	8,285,000	1,095.6	34,446		
8	1	259,700	38.4	259,200	38.4	9,972,000	1,474.6	12,634		
9	1	250,800	43.2	250,800	43.2	10,835,000	1,866.2	-24,551		
10	1	240,300	46.1	240,300	46.1	11,078,000	2,105.2	-52,140		
	Σ = 10			Σ = 1,599,700	236.2	52,057,000	8,001.8			

$$\Sigma⑤ + M_o\Sigma② + P_o\Sigma⑥ = 0$$
$$\Sigma⑦ + M_o\Sigma⑥ + P_o\Sigma⑧ = 0$$

$$1,599,700 + 10 M_o + 236.2 P_o = 0$$
$$52,057,000 + 236.2 M_o + 8,001 P_o = 0$$

$$M_o = -20,782 \quad P_o = -5,892.8$$

the calculations for the left side. The loads on the right side are the same as for the left, because of symmetry, e.g., segment 11 same as 10, 12 same as 9 etc. The two simultaneous equations for M_0 and P_0 are

$$\sum_{n=1}^{n=N}(M_{Q_{A_n}} + M_o + P_o y_n)\frac{\Delta S_n}{E_n I_n} = 0$$

$$\sum_{n=1}^{n=N}(M_{Q_{A_n}} + M_o + P_o y_n)\frac{\Delta S_n y_n}{E_n I_n} = 0$$

These are obtained from Eq.(2) (with $V_o=0$) by differentiating it with respect to M_o and to P_o.

Symmetrical Frame and Unsymmetrical Loads

This case could be analyzed as was done for Fig.B2, using Table B1, but an easier procedure is as follows, which uses only one-half of the frame (segments 1-10).

An unsymmetrical loading can be resolved into a symmetrical loading and an antisymmetrical one, as shown in Fig.B3. An antisymmetrical loading is one which when rotated 180° and the load directions reversed will give the original loading. The final internal loads are found by determining those due to the antisymmetrical and then adding these to those due to the
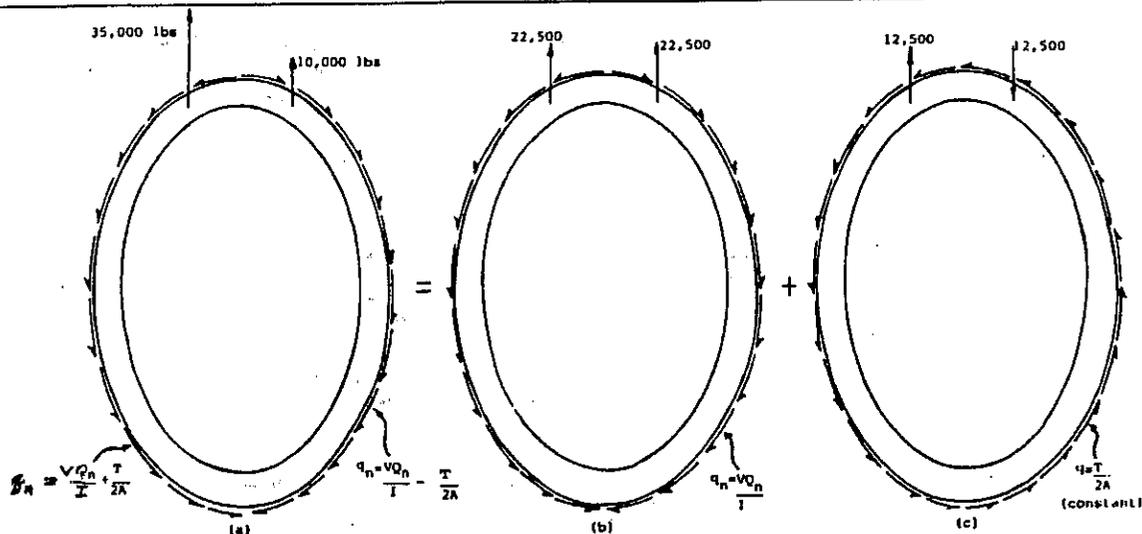
Fig. B3   Resolving Unsymmetrical Loads

Fig. B3   Resolving Unsymmetrical Loads

symmetrical ones. The antisymmetrical loads will add to the symmetrical ones on one-half of the frame and subtract from those on the other half, to give the final internal loads.

To illustrate this procedure assume that the frame in Fig. B3 is the same as that in the previous example (in Table B2). The symmetrical loads will be the same as in Table B2. Those due to the antisymmetrical loading are found as follows. Due to geometric symmetry and loading asymmetry M_O and P_O are zero, so the only redundant is V_O. Therefore, the only equation is Eq. (4) with $M_O = 0$ and $P_O = 0$, or

$$\sum_{n=1}^{n=N}(M_{Qn} + M_{qn} + V_O x_n)\Delta S_n x_n / E_n I_n = 0 \cdot (6)$$

This is solved for V_O, and the final antisymmetrical loads are obtained for each segment by using the terms in the parentheses of Eq. (6). These antisymmetrical loads are determined as shown in Table B3. The final internal bending moments are shown in Table B4, Col. 8. It is seen that the asymmetrical loads add to the symmetrical ones on the left side and subtract from them on the right side.

Two-Lobe Frame

Such a frame is shown in Fig. B4. For an unsymmetrical frame there are six redundants as shown, hence there would be six simultaneous equations, derived in the same manner as was done for the previous bulkhead. Aside from this the procedure is the same as before. For the more common symmetrical frame V_O and V_a are zero, so there would be only four equations for a symmetrical loading involving M_O, P_O, M_a and P_a. For an asymmetrical loading there would be only two simultaneous equations involving V_O and V_a, since M_O,

Table B3   Symmetrical Frame with Antisymmetrical Applied Loads

①	②	③	④	⑤	⑥	⑦	⑧	⑨
Seg-ment	$\frac{\Delta S}{EI}$ Data	$M_{Q,q}$ Data	x Data	$\frac{M_{Q,q}\Delta Sx}{EI}$ ②x③x④	$\frac{\Delta Sx^2}{EI}$ ②x④²	M_{final} ③ + V_o x④	Axial Load	Shear Load
1	1	445	3.0	1,300	9.0	−15,131	This is the	Same as for the
2	1	1,197	8.8	10,500	77.4	−44,493	component	axial load but
3	1	37,509	12.5	468,900	156.3	−27,391	parallel to the	using the
4	1	70,851	14.9	1,055,700	222.0	−6,510	neutral axis of	component
5	1	85,916	15.8	1,357,500	249.6	3,882	the vector sum of	normal to the
6	1	94,598	15.8	1,494,600	249.6	12,564	all loads from the	neutral axis at
7	1	99,671	14.9	1,485,100	222.0	22,310	"cut" to the	the segment
8	1	85,216	12.5	1,065,200	156.3	20,316	segment center,	center.
9	1	52,122	8.8	458,700	77.4	6,432	including V_o.	
10	1	6,539	3.0	19,600	9.0	−9,037		

Σ 7,417,100   1,428.6

Σ ⑤ + $V_o \Sigma$ ⑥ = 0   7,417,100 + 1,428.6 V_o = 0 V_o = −5,192

Table B4   Symmetrical Frame with Unsymmetrical Applied Loads

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
Segment	M_{sym} in – lbs *	Axial$_{sym}$ lbs *	Shear$_{sym}$ lbs *	M_{asym} in – lbs **	Axial$_{asym}$ lbs **	Shear$_{asym}$ lbs **	M_{unsym} in – lbs ②+⑤	Axial$_{unsym}$ lbs ③+⑥	Shear$_{unsym}$ lbs ④+⑦
1	–24,907	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.	–15,131	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including V_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.	–40,038	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o and V_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	–41,063			–44,493			–85,556		
3	–2,197			–27,391			–29,588		
4	30,794			–6,510			24,284		
5	36,016			3,882			39,898		
6	31,670			12,564			44,234		
7	34,466			22,310			56,776		
8	12,634			20,316			32,950		
9	–24,551			6,432			–18,119		
10	–52,140			–9,037			–61,177		
11	–52,140			9,037			–43,103		
12	–24,551			–6,432			–30,983		
13	12,634			–20,316			–7,682		
14	34,466			–22,310			12,156		
15	31,670			–12,564			19,106		
16	36,016			–3,882			32,134		
17	30,794			6,510			37,304		
18	–2,197			27,391			25,194		
19	–41,063			44,493			3,430		
20	–24,907			15,131			–9,776		

P_o, M_a and P_a are zero. If the cross-beam were pinned at its ends M_a and V_a would be zero, so the above six equations would become only four, the four equations would become only three and the two equations would become only one.

Calculations and Data

In all of the preceding calculation tables (and also in Table A9.5, Col.8) the most laborious effort is calculating the values of the applicable shear flow moments, M_q, and of the concentrated applied loads, M_Q, about each segment's center. This is done starting with segment one and proceeding counterclockwise (M_q can be calculated per p.A19.19 or per p.A9.12). Once these moments are calculated and entered in Col.3 the remaining calculations are routine so they can also be programmed for calculation by computer or suitable calculators. In Col.3 and elsewhere positive moments produce compression in the outer flange. Positive values of x and y and of M_o, V_o and P_o are as shown in Fig.B1.

Two-Lobe Frame (a)   Redundant Loads (b)
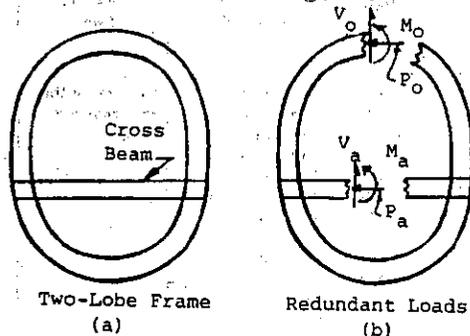
Fig.B4   Two-Lobe Frame

Inner Flange Lateral Supports

Unlike the outer flanges, the inner flange of a frame is not usually supported against buckling by skin panels. Therefore lateral supports of some type are needed when the flange compressive loads are significant. The support spacing must be such that lateral buckling will not occur. The supports are usually tubes (struts) or intercostals as in Fig.B5
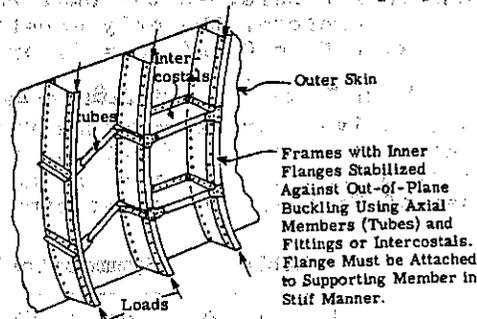
Fig.B5 Inner Flange Lateral Supports

Circular Frames of Uniform EI

When these are supported by skin panels as in previous analyses, data is available in Ref.15 of p.A21 for a more direct solution (using the "Wise Coefficients", from Jour. Aero Sciences, Sept.'39) The data can also be used when any self-equilibrating loads (no supporting skins) are present, by superposition of the applied and reacting load cases. The data is of graphical form, giving the internal moments, axial and shear loads for applied normal, tangential and moment loadings.

Accuracy of Analyses

Since the previous analyses do not include the stiffnesses of the structure adjacent to the bulkheads (skin panels, stringers and adjacent frames) the results are approximate and usually conservative for the bulkhead, but unconservative for the other structure. A discussion of this with examples is available in "The Analysis of Structures", N.J.Hoff, John Wiley and Sons. A more accurate analysis requires an involved finite element analysis which model s all of the structure. However, the previous analyses are commonly used, and the results can also be used to size the frame for a finite element model.

Arches

Arches are beams with significant curvature, as in Fig.B6. They can be analyzed in the same manner as previously illustrated for frames. The internal loads depend upon the end fixities, so the analyses are as follows. Also see Art.
                                              A13.11a
Both Ends Fixed

This case is shown in Fig.B6, the redundants being taken at the right end, O. The applied loads, Q, can be in any direction. The arch is like a half-frame. The internal loads are determined in Table B5. The segment EI values may be uniform or varied. Table B5 is the same as Table B2 except that x and y are interchanged since the arch is shown in a horizontal position, and there are no shear flows, q.

For a symmetrical arch, loads,reactions and an even number of segments only $\frac{1}{2}$ of the arch is needed for the analysis with segment 5 fixed at its left end. $P_O = \Sigma Qy/2$ so only the first 2 equations are used with the P_O terms omitted. Loads in 6-10 are same as 5-1.*
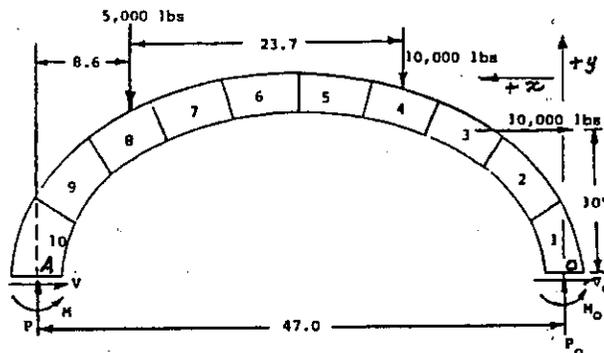
Fig.B6   Arch with Both Ends Fixed

One End Fixed and One End Pinned.

This is as shown in Fig.B7, there being only the two redundants V_O and P_O at the right end, so only two simultaneous equations are involved. These are

$$\Sigma \; ⑫ \; + V_o \Sigma \; ⑬ \; + P_o \Sigma \; ⑪ \; = 0$$

$$\Sigma \; ⑨ \; + V_o \Sigma \; ⑪ \; + P_o \Sigma \; ⑩ \; = 0$$

Therefore, Table B5 would be used except that Col. 7 and 8 and their sums are elim-

* With pinned ends $M_O = 0$, so only the first equation applies with the P_O and M_O terms omitted.

Table B5   Arch with Both Ends Fixed

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯
Seg-ment	$\frac{\Delta S}{EI}$	M_Q	x	y	$M_Q \frac{\Delta S}{EI}$	$\frac{\Delta S}{EI} x$	$\frac{\Delta S}{EI} y$	$M_Q \frac{\Delta S}{EI} x$	$\frac{\Delta S}{EI} x^2$	$\frac{\Delta S}{EI} xy$	$M_Q \frac{\Delta S}{EI} y$	$\frac{\Delta S}{EI} y^2$	M_{final} ③ + M_o + $V_o x$⑤ + $P_o x$④	Axial Load	Shear Load
	$\frac{1}{lb-in}$	in-lbs	in	in	③x②	②x④	②x⑤	④x⑥	②x④²	②x④x⑤	⑥x⑤	②x⑤²			
1	1.0	0	.7	3.0	0	.7	3.0	0	.49	2.1	0	9.0	24,666	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_a and V_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	1.0	0	3.9	8.8	0	3.9	8.8	0	15.21	34.32	0	77.44	–32,829		
3	1.0	25,000	9.0	12.5	25,000	9.0	12.5	225,000	81.0	112.50	312,500	156.25	–17,669		
4	1.0	49,000	14.7	14.9	49,000	14.7	14.9	720,300	216.09	219.03	730,100	222.01	20,937		
5	1.0	0	20.5	15.8	0	20.5	15.8	0	420.25	323.90	0	249.64	9,552		
6	1.0	–61,000	26.6	15.8	–61,000	26.6	15.8	–1,622,600	707.56	420.28	–963,800	249.64	2,078		
7	1.0	–135,000	33.1	14.9	–135,000	33.1	14.9	–4,468,500	1,095.61	493.19	–2,011,500	222.01	–1,607		
8	1.0	–212,000	38.4	12.5	–212,000	38.4	12.5	–8,140,800	1,474.56	480.00	–2,650,000	156.25	3,310		
9	1.0	–321,000	43.2	8.8	–321,000	43.2	8.8	–13,867,200	1,866.24	380.16	–2,874,800	77.44	–8,890		
10	1.0	–422,500	46.1	3.0	–422,500	46.1	3.0	–19,477,250	2,125.21	138.30	–1,267,500	9.0	541		
	$\Sigma = 10.0$				$\Sigma = 1,077,500$	236.2	110.0	–46,631,050	8,002.22	2,603.8	–8,675,000	1,428.7			

** $M_{Q,n} = M_Q + M_g$
* When ΔS or E or I is constant over the frame it can be considered to be unity for column ②. For this example all of these are constant.

$\Sigma \; ⑥ \; + M_o \Sigma \; ② \; + V_o \Sigma \; ⑧ \; + P_o \Sigma \; ⑦ \; = 0$ $M_o = 62,787$

$\Sigma \; ⑫ \; + M_o \Sigma \; ⑧ \; + V_o \Sigma \; ⑬ \; + P_o \Sigma \; ⑪ \; = 0$ $V_o = -14,754$

$\Sigma \; ⑨ \; + M_o \Sigma \; ⑦ \; + V_o \Sigma \; ⑪ \; + P_o \Sigma \; ⑩ \; = 0$ $P_o = 5,774.8$
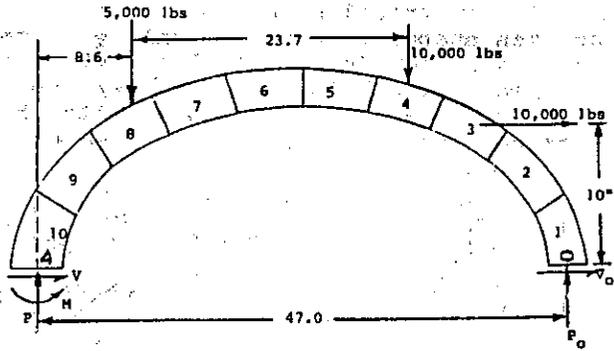
Fig. B7 Arch, One End Fixed, One Pinned

Fig. B8 Arch, One End Fixed, One Rollers

inated, the sum of Col.6 is not needed, M_O is zero and only the above two equations are used to determine V_O and P_O.

Proceeding as in the above manner the final internal loads are as shown in Table B6 ($V_0 = -11,173$ and $P_0 = 9463$)

Table B6 One End Fixed and One End Pinned

Segment	M_x $\text{(3)} + V_o \times \text{(5)} + P_o \times \text{(4)}$	Axial Load	Shear Load
1	−26,901	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o and V_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	−61,435		
3	−29,519		
4	21,602		
5	17,433		
6	14,160		
7	11,730		
8	11,707		
9	−10,519		
10	−19,759		

One End Fixed and One End on Rollers

For this case, Fig. B8, there is only the redundant P_O at the right end, so the only minimum energy equation is, referring to Table B7,

$$\Sigma \, \text{(5)} + P_o \Sigma \, \text{(6)} = 0$$

The final loads are determined using Table B7.

Both Ends Pinned

This case is shown in Fig. B9. Since V_O passes through point A, P_O can be calculated directly as $P_O = \Sigma M_A / L$ leaving V_O as the only redundant. It is determined from the minimum energy equation, referring to Table B8,

$$\Sigma \, \text{(5)} + V_o \Sigma \, \text{(6)} = 0$$

The final internal loads are determined using Table B8, as shown.

$$P_0 = 466,000 / 47 = 9915 \text{ lbs}$$
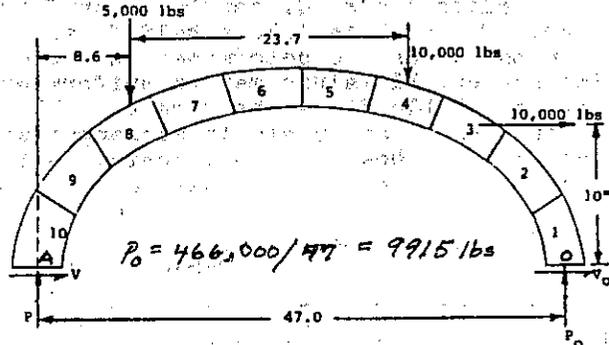
Fig. B9 Arch with Both Ends Pinned

Table B7 Arch with One End Fixed and One on Rollers

(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)
Segment	$\dfrac{\Delta S}{EI}$ Data	M_Q Data	x Data	$\dfrac{M_Q \, \Delta S \, x}{EI}$ (2)x(3)x(4)	$\dfrac{\Delta S \, x^2}{EI}$ (2)x(4)²	M_{final} (3) + $P_o \times$ (4)	Axial Load	Shear Load
1	1.0	0	.7	0	.5	4,078	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_o.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	1.0	0	3.9	0	15.2	22,725		
3	1.0	25,000	9.0	225,000	81.0	77,443		
4	1.0	49,000	14.7	720,000	216.1	134,657		
5	1.0	0	20.5	0	420.3	119,453		
6	1.0	−61,000	26.6	−1,622,600	707.6	93,998		
7	1.0	−135,000	33.1	−4,468,500	1,095.6	57,874		
8	1.0	−212,000	38.4	−8,140,800	1,474.6	11,757		
9	1.0	−321,000	43.2	−13,867,200	1,866.2	−69,274		
10	1.0	−422,500	46.1	−19,477,250	2,125.2	−153,875		

$\Sigma = $ −46,631,050   8,002.3 $\Sigma \, \text{(5)} + P_o \times \Sigma \, \text{(6)} = 0$ $P_o = $ · 5,827 lbs

Table B8   Arch with Both Ends Pinned

①	②	③	④	⑤	⑥	⑦	⑧	⑨
Seg-ment	$\dfrac{\Delta S}{EI}$ Data	M_{Q,P_0} ** Data	y Data	$\dfrac{M_{Q,P_0}\,\Delta Sy}{EI}$ ②x③x④	$\dfrac{\Delta Sy^2}{EI}$ ②x④²	M_{final} ③ + V_0 x④	Axial Load	Shear Load
1	1.0	6,940	3.0	20,820	9.0	-29,057	This is the component parallel to the neutral axis of the vector sum of all loads from the "cut" to the segment center, including P_0 and V_0.	Same as for the axial load but using the component normal to the neutral axis at the segment center.
2	1.0	38,699	8.8	340,551	77.4	-66,892		
3	1.0	114,235	12.5	1,427,938	156.3	-3,575		
4	1.0	194,751	14.9	2,901,790	222.0	15,966		
5	1.0	203,258	15.8	3,211,476	249.6	13,764		
6	1.0	202,739	15.8	3,203,276	249.6	13,155		
7	1.0	193,187	14.9	2,878,486	222.0	14,402		
8	1.0	168,736	12.5	2,109,200	156.3	18,749		
9	1.0	107,328	8.8	944,486	77.4	1,737		
10	1.0	34,582	3.0	103,746	9.0	-1,415		

* $M_Q + M_{P_0}$ $\Sigma = 17,141,769$ 1,428.6 $\Sigma\,⑤ + V_0\,\Sigma\,⑥ = 0$ $V_0 = -11,999$ lbs

One End Pinned and One End on Rollers

This case is statically determinate since $P_0 = \Sigma M_A/L$, so the moments at all segments can be calculated directly. For the previous applied loads

$$P_0 = 466,000/47 = 9,915 \text{ lbs}$$

which is the same as for the previous case.

Bents*

Examples of these are shown in Fig.B10. The same discussions and tables presented for arches also apply for these.

Fig.B10   Bents*

The discussions and calculation tables for arches and bents enable one to quickly proceed with the determination of their internal loads. All one needs to do is to enter the applicable data in Col.1 through 4 (or 5) and then carry out the calculations as indicated in the tables. The same also applies for bulkheads and frames. Stress analyses can then be performed for the structures.

Accuracy of Analyses

For the usual "sturdy" arches (and bents) the calculated final bending moments are suitable for engineering design purposes, even though they are not "exact",

since the effects of curvature of the arch were not considered. There is no analytical way to include these effects**. The following successive approximation procedure can be used to see if deflections matter.

1) Use the final bending moments from the arch analysis as the moments in Table C3.3 and calculate the deflections. These moments are at the segment centers, but they must be at the segment ends in Table C3.3. Therefore, plot the moments versus distance along the arch, draw a curve through them and then obtain the moments at the ends of the segments for Table C3.3.

2) The calculated deflections are at the segment ends, so they must be found at the segment centers in the manner described above. The deflections are normal to the arch neutral axis, positive deflections being outward (or "up"). This gives a new shape for the arch and the applied load locations. Recalculate the arches final moments for this new geometry. If they are not significantly different from the original ones they are used for design purposes.

3) If the recalculated final moments are significantly different, successively repeat (1) and (2) until they are not so.*

It is for relatively long and slender arches that the deflections are most likely to be significant. The following rough guide can be used to see if a deflection analysis is needed (see "Advanced Structural Analysis", Borg & Gennaro,D.Van Nostrand Co.). Calculate the following factor, F. If F is less than 3 a deflection analysis is probably necessary.

$$F = CP_{cr}/P$$

* Does not account for sidesway effects, see Art.A11.11 and the reference below. For axial load effects and buckling of bents, see Engineering Column Analysis by W.F.McCombs, published by Datatec.2106 Siesta Dr., Dallas, Tx 75224.

* Successively increasing deflections indicate instability
** Ignoring curvature results in an error of about 4%.

P_{cr} is the buckling load assuming the arch to be a pin-ended column whose length is the arc length of the arch. For pinned ends C = 4 and for fixed ends C = 8. For a uniform EI $P_{cr} = \pi^2 EI/L^2$. For a non-uniform EI P_{cr} is per Art. C2.6a - C2.6b. P is the average compressive load in the arch

Carrying out (1) above for the pin-ended arch of Fig.B9 and Table B8, where ΔS is 6.1" and L is 61", assuming EI is 16×10^6 the deflections at the segment centers (using Table C3.3) are found to be

Seg.	1	2	3	4	5	6	7	8	9	10
Def.	.08	.22	.15	.05	-.06	-.12	-.16	-.16	-.10	-.03

These deflections are so small that they would cause a very minor change in the arches shape, and its resulting effects on the final moments would be inconsequential if (2) were carried out (the arch in Fig. B9 is therefore a "sturdy" one). Also, for this case F is much larger than 3, which indicates no deflection analysis is needed (as the deflection calculations also showed).

Buckling of Arches and Bents*

Some arches and bents and their applied loadings are such that no bending is present, but there is considerable axial stress. For such cases the allowable loading is the buckling load for the member. When there is also some bending present it is magnified by the "beam-column effect". The buckling normally occurs as a "sidesway", as shown for two typical cases in Fig.B11, (a) being a circular arch and (b) being a bent.
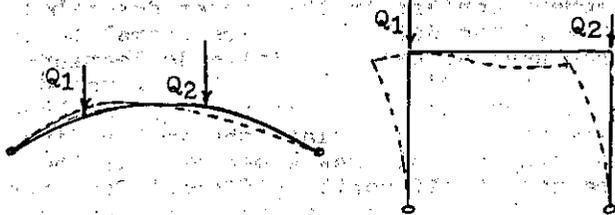
Fig.B11 Buckling of an Arch and a Bent

The buckling of arches and bents is discussed in the book of Art.A18.27a.** For a few cases such as the following, the critical value of the loading can be determined by formulas and related data.

$W_{cr} = CEI/R^3$

where C is per the text items (1)-(3)
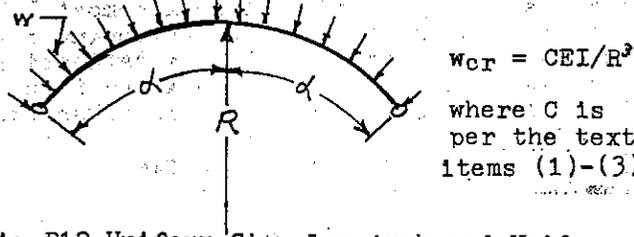
Fig.B12 Uniform Circular Arch and Uniform Radial Distributed Loading

* For additional discussions and other cases see "Theory of Elastic Stability", Timoshenko and Gere, McGraw-Hill Book Co.
** To detect instability (p.B7 footnote) there must be some nonsymmetry in the arch or in the load. If not, add a small lateral load, about 5% of the total load, at the center of the arch.

1) For pinned ends $C = (\pi^2/\alpha^2) - 1.0$
2) For fixed ends $C = k^2 - 1.0$ where k is the value satisfying the equation
$$k \tan\alpha \cot k\alpha = 1.0$$
3) For fixed ends or pinned ends having a center pin, C is obtained from Table B9.

Table B9 Circular Arch with a Center Pin

α	Fixed Ends	Pinned Ends
15	162	108
30	40.2	27.6
45	17.4	12.0
60	10.2	6.75
75	6.56	4.32
90	4.61	3.30

For a uniform parabolic arch and loading as in Fig.B13

$w_{cr} = CEI/L^3$ where C is per Table B10
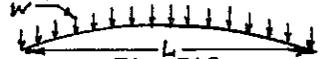
Fig.B13

Table B10 Parabolic Arch (Fig.B13) Data

h/L	No Pins	1 Pin	2 Pins	3 Pins
.1	60.7	33.8	28.5	22.5
.2	101.	59	45.5	39.6
.3	115	82	46.5	46.5
.4	111	96	43.9	43.9
.5	97.4	91	38.4	38.4
.6	83.8	80	30.5	30.5
.8	59.1	59.1	20.0	20.0
1.0	43.7	43.7	14.1	14.1

For a catenary arch see Table B11.

Table B11 Catenary Arch with a Center Pin

h/L	Fixed Ends	Pinned Ends
.1	59.4	28.4
.2	96.4	43.2
.3	112	41.9
.4	92.3	35.4
.5	80.7	27.4
1.0	27.8	7.06

* Same load and formula as in Fig.B13

For a very shallow arch, Fig.B14, buckling can occur as a "snap-through" movement as shown by the broken line and is due to shortening caused by compression.
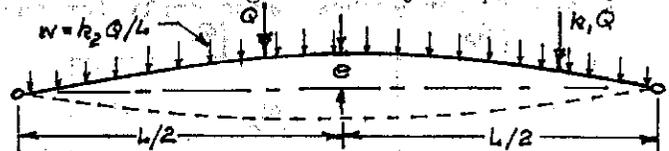
Fig.B14 Very Shallow Uniform Arch

When there are several loads express them in terms of only one, Q, as shown. The critical value of Q is defined by the equation

$$\delta/e = 1 + \sqrt{4(1-m)^3/27m^3}$$

where δ = deflection at center of arch and is written in terms of Q (or of w if only w is present)

m = $4I/Ae^2$ (A = cross-sectional area)

The above equation is solved to get the critical value of Q (or of w if only w is present).

When m ≥ 1.0 this type of buckling cannot occur, but the general type (sidesway) can.

← Buckling Equation*

$$\frac{L/j}{\tan L/j} = \frac{-6LI_1}{bI}\left[\frac{1}{1 + 24LI_1/Ab^3}\right]$$

where $j = \sqrt{EI/P}$
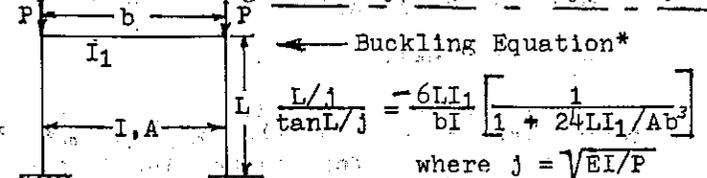
Fig.B15 Special Case of Bent Buckling

* Solve by successive trials for P. When P = P_{cr} the equation will be satisfied. Also applies within e very few percent for any vertical loads having a total of 2P, may be unsymmetrical.

For pinned ends the equation is $(L/j)\tan L/j = 6I_1 L/Ib$ and the above comments apply

Effect of Column End Support Stiffness

When the lateral end supports for a column are significantly flexible, this can reduce the allowable axial load to be below the buckling load, as follows. For the pin-ended case the allowable axial load due to support stiffness is in Fig.B16 (see the book of Art.A18.27a for a derivation).
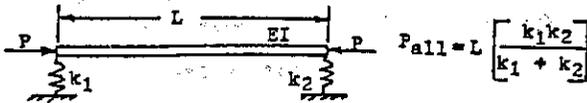
$$P_{all} = L\left[\frac{k_1 k_2}{k_1 + k_2}\right]$$

Fig.B16 Effect of End Support Stiffness

When $k_1 = \infty$ (simple support) $P_{all} = k_2 L$ and vice-versa if $k_2 = \infty$. For the column itself the allowable load is $\pi^2 EI/L^2$. Therefore, minimum values of k_1 and k_2 needed to provide adequate support are given by

$$k_1 k_2/(k_1 + k_2) = \pi^2 EI/L^3$$

If less than this, P_{cr} cannot be reached but P_{all} may be adequate for the actual load, P.

For any multispan column the ability of flexible supports to provide simple support for a given axial load, P, can be checked using the formula in Fig.B16 with successive calculations from end A to end E as in Fig.B17. This is discussed and illustrated in the above mentioned book and also in NACA TN 871. Pinned joints are assumed.
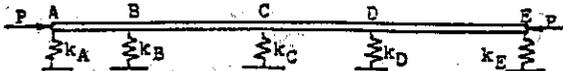
Fig.B17 Multispan Column Flexible Supports

Structural Requirements for Secondary Structure and Operating Devices

Troubles for these items are caused by a lack of strength or insufficient stiffness and usually show up during proof testing or during service.* Some suggestions for avoiding such troubles are as follows.

1. All devices must maintain full strength at limit loading. Therefore, the effects of limit deflection, whether due to limit load on the device or to limit load on other parts of the structure, must be checked. All operating devices must function properly at deflections due to limit loading.

2. For areas of engagement of locking devices where retention depends upon bearing pressure between two parts, keep the bearing stresses below 10,000 psi and/or provide for .25" misalignment on assembly.

3. As to location and direction of loads, assume them to be anywhere within a 30° cone centered on the computed direction. When the load direction is based on a properly oriented machined fitting face assume a 10° mis-

* And are then very expensive, both dollar and time-wise, to fix.

alignment to exist. For analysis of back-up structure, assume the most adverse position of load, e.g., at the tip end of lugs (which is universal practice in gear tooth design). Where strength depends on a dead-center mechanism, provide both strength and mechanical advantage from the operating standpoint to take care of a 10° misalignment either way.

4. Design limit switch brackets and installations to deflect a maximum of .03" under a 100 lb load in the direction of switch actuation and to have no permanent set under a load of 100 lbs in any direction.

5. Design external power plug receptacle installations for a limit load of 1500 lbs along the plug axis and, simultaneously, 500 lbs normal to the plug axis in any direction and at the largest moment arm which the plug permits. External power plugs are subject to rough and careless handling.

6. Gaps provided to prevent secondary structure from loading up must be checked for adequacy against gap closure due to structural load and/or temperature deflections.

7. Provide adequate hinges and warp for doors to remain closed and sealed under proof loads and, where applicable, design the hinges for superposition of proof loads and warp loads.

8. The structural analysis of control surfaces hinged to primary structure must include the effects of the deflections of the supporting structure. This also applies to power or control system shafting. See examples in the book of Art.A18.27a.

9. When control surface skin panels are allowed to buckle, the secondary loads due to tension field action must be considered. Otherwise these loads may cause either a failure or excessive deformation, particularly for thin trailing edges (see p.67).

It is recognized that procedures (2) through (5) may run into difficulties, inconsistencies and designs which, when installed properly, will be considerably over strength. The design penalty may seem to be large large in the layout stage, but actually it is only a small fraction of the cost, dollar and time-wise, of making the changes at any later date, particularly in the field. The weight penalty is more than justified in terms of increased reliability.

———   ———   ———

Adding material to a structure never reduces its strength but can reduce its life.
With a redundant ductile structure (and joints, Fig.D1.44) the redundant loads can be assumed, the member loads calculated and the structure will deform to this load distribution prior to strength failure. This does not apply to structural life, however, or to no yielding at limit load.

There are two main cases of axial load transfer, by shear, between members which require detailed analyses. These cases are the installations of doublers and splices.

Splices

Splices involving the transfer of load, by shear, from one member to another should be kept as short as possible. For example, when two "skins" are spliced together an ideal splice would involve only a single line of fasteners, but two or three lines may sometimes be needed.

Doublers

Doublers are relatively long members installed on a "base" member, such as on a wing skin for example, for various purposes such as the following.

a) Strength

    1) To strengthen an existing structure
    2) To salvage a damaged area
    3) To strengthen an axially loaded member having a hole or a cut-out or a non-structural door.

b) Fatigue Life

    1) To increase the life of an existing design in a fatigue critical region.
    2) To properly salvage a damaged structure for an adequate service life.
    3) To salvage a "fatigue damaged" structure where fatigue damage has been accumulating too rapidly in a particular vehicle or group of vehicles

c) Reinforcement for additional stiffness purposes which must include a consideration of possible fatigue life limitation due to the installation.

d) Any member attached to an axially loaded base structure will act as a local doubler picking up axial load, so a check on a possible harmful effect on fatigue life at the fasteners may be necessary.

e) The effect of ending an axial member, such as a stringer, on a skin or sheet material. This may be desirable from a manufacturing or salvage standpoint, but its effect on fatigue life must be considered or investigated.

The main effort in analyzing doublers or splices is the determination of the loads in the attachments. Once these are known the loads and stresses in the members are known and can be evaluated as to strength or fatigue life or stiffness.

Figure B18 shows a comparison of the fastener (and member) loads in a doubler and in a long(undesirable) splice. Note that the loads are largest in the end fasteners, so the members must be designed and "tailored" to reduce this "peaking" of loads. The fastener load distribution also depends upon the spring constants of the fastener joints (determined experimentally).

A discussion of the analyses and design of doublers and splices is beyond the scope of this book. However, a detailed and practical discussion of the subject is available in the Air Force Flight Dynamics Laboratory Report AFFDL-TR-67-184, January 1968, "Analytical Design Methods for Aircraft Structural Joints" which contains numerous examples. It also accounts for fastener hole clearance or "slop" and loadings into the plastic range of the joints. The report is over 187 pages and will enable the reader to obtain a good understanding of the subject and its many applications, and is available at some libraries. A copy, with corrections and added comments, is also available from W.F. McCombs, 2106 Siesta Dr., Dallas, TX 75224, $19.95 plus $3.00 shipping. The reader is encouraged to consult the report.*

DOUBLER

LOAD IN MEMBER D

FASTENER LOADS

SPLICE

LOAD IN MEMBER D

FASTENER LOADS
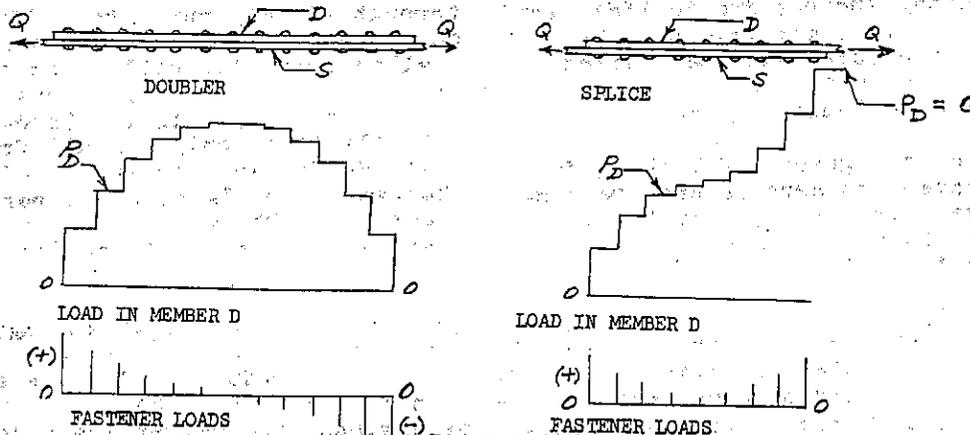
Fig.B18

* Being the only such comprehensive report available, it should be included in any structures library.
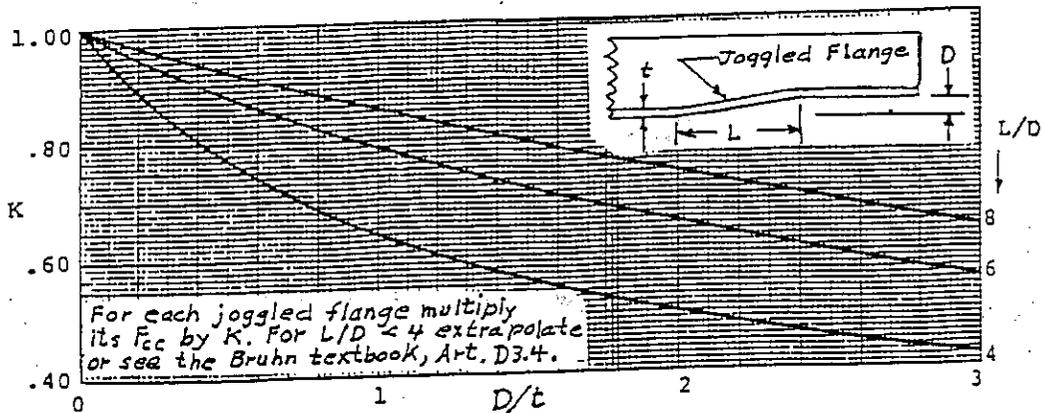
Fig.C7.45 Crippling Stress (Fcc) Reduction Factor for
Aluminum Flanges

For each joggled flange multiply
its Fcc by K. For L/D < 4 extrapolate
or see the Bruhn textbook, Art. D3.4.

Calculating the Critical (Buckling) Value for a Rigid Joint Truss's Loading

The critical (buckling) loading for the truss (all members deforming in bending) is found by a successive trial procedure as follows.

1. For the applied loading determine the member loads assuming pin joints. Factor the applied loads to cause a load of about 1.6 times the buckling load in the first member that would fail, assuming pin joints. Then determine the COF and DF for all members, for rigid joints.

2. Apply a unit couple at the joint, N, whose members have the largest compression loads and carry out the moment distribution procedure until all joints have been balanced and the balancing moments carried back to the joint N. Do not rebalance N but again rebalance all other joints (in the same sequence as before) carrying the balancing moments back to N.

4. Repeat until the moments carried back to N are negligible, usually 2-3 sets of balancing.

5. If the sum of the moments carried back to N, ΣCOM_N, is < 1.0 the loading is less than critical. If more than 1.0 it is above the critical load.

6. Repeat the above with another loading, successively, until $\Sigma COM_N = 1.0$ (or, say, between .99 and 1.01) and that is the critical loading.

The procedure is illustrated below for the truss of Fig.A11.92 where, after several successive trials.it is found that for an applied load of 12,377 lbs $\Sigma COM_C = 1.013$, so that is,essentially,the critical load (for a load of 12,360 lbs $\Sigma COM_C = 1.00$).

As discussed in Art.11.15b and Table A11.6, the failing load will be less than the buckling load because of beam-column failure. Usually it will be at about 90% of the buckling load, but only a successive trials analysis as in Art. A11.15a will give the M.S..

The COF and SC values used to obtain SF and DF values were calculated using the formulas on p.3.

Gusset plates can considerably increase the critical loading and the failing loading. The analyses are as before,but the SC and COF values are different. These are available in Ref.14 and in "The Analysis of Structures", Hoff, N.J., and on p. B12-13.
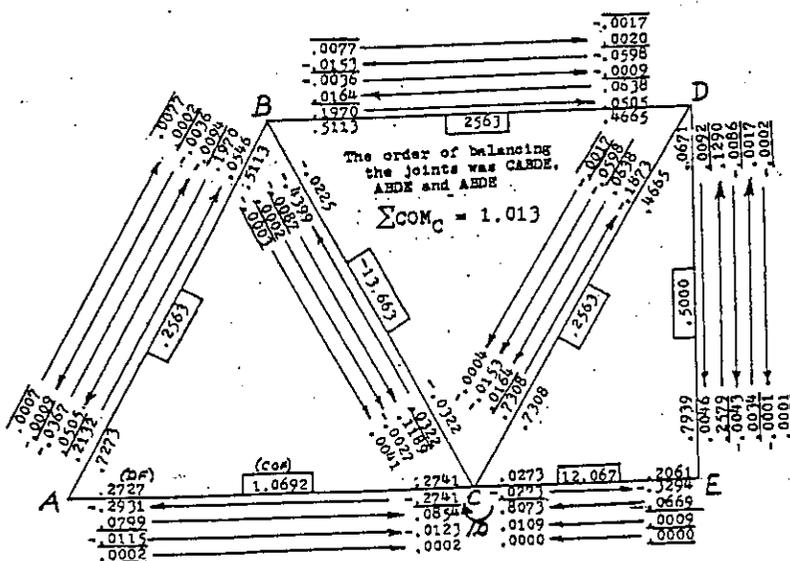
Assuming pin joints to determine the axial loads is quite reasonable, although the joint secondary bending moments do change these slightly. Actually the assumption is conservative, the final bending moments always being smaller (see "Moment Distribution",Gere,James M., Van Nostrand Co.).
In Table A11.4 cross-sections are square. At the end of item 6, p.4 add:"Then see Art.A5.31a."
At the bottom of p.4 add the following: "If the applied loading is above the critical value the successive carry over moments will diverge. To calculate the critical (buckling) loading value see P. B11, inside the rear cover. Rigid joint strength is usually over 60% more than is predicted by a pin joint stress analysis.

The failing load for the truss is 11,088 lbs, failure occuring in member CE as a beam-column, 3.6" from C (M=448 in-lbs). This is 89.6% of the above buckling load and is obtained by successive trials using the procedure of Art.A11.15a.

The order of balancing the joints was CABDE, ABDE and ABDE

$\Sigma COM_C = 1.013$

Fig. 2.4.10. Carry-over factors for compression bars with gusset plates.
From author's paper in *ASCE Transactions* #2454

For more accuracy enlarge the region between L/j = 4.2 and 5.7 2 or 3 times
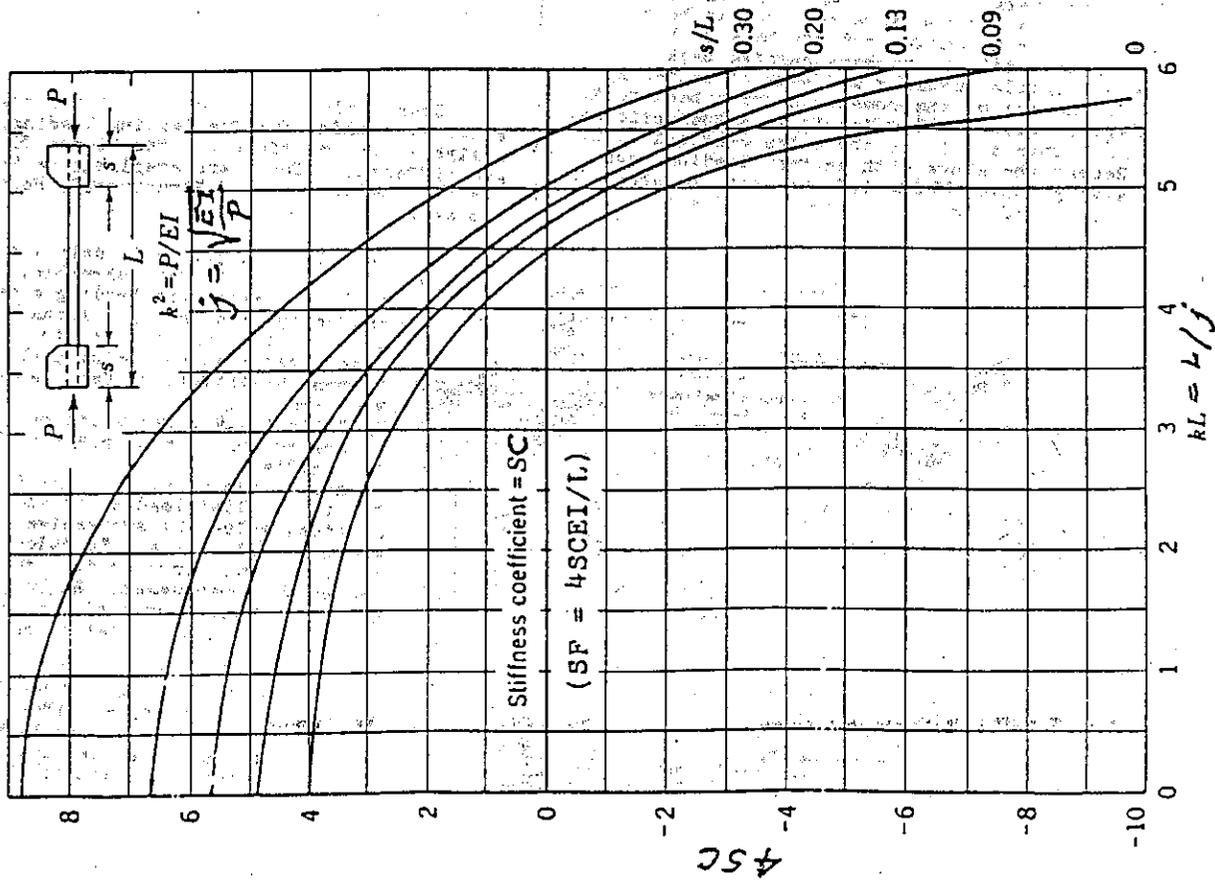
Fig. 2.4.9.   Stiffness coefficients for compression bars with gusset plates.
From author's paper in *ASCE Transactions*, #2454
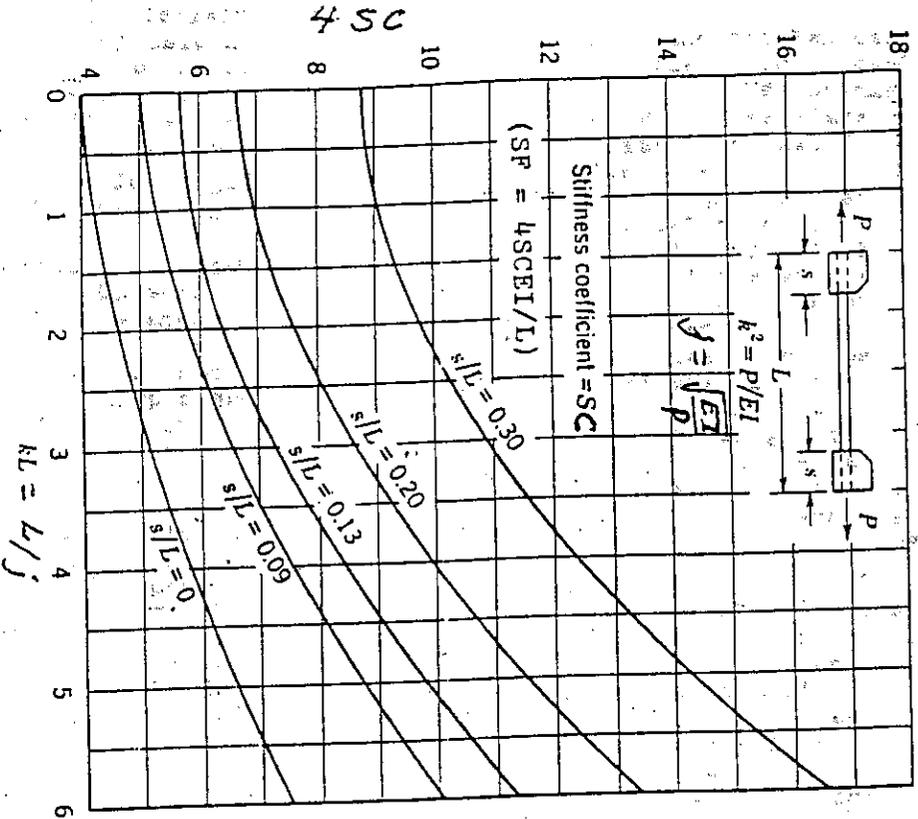
Fig. 2.4.11.   Stiffness coefficients for tension bars with gusset plates.
From author's paper in *ASCE Transactions*.
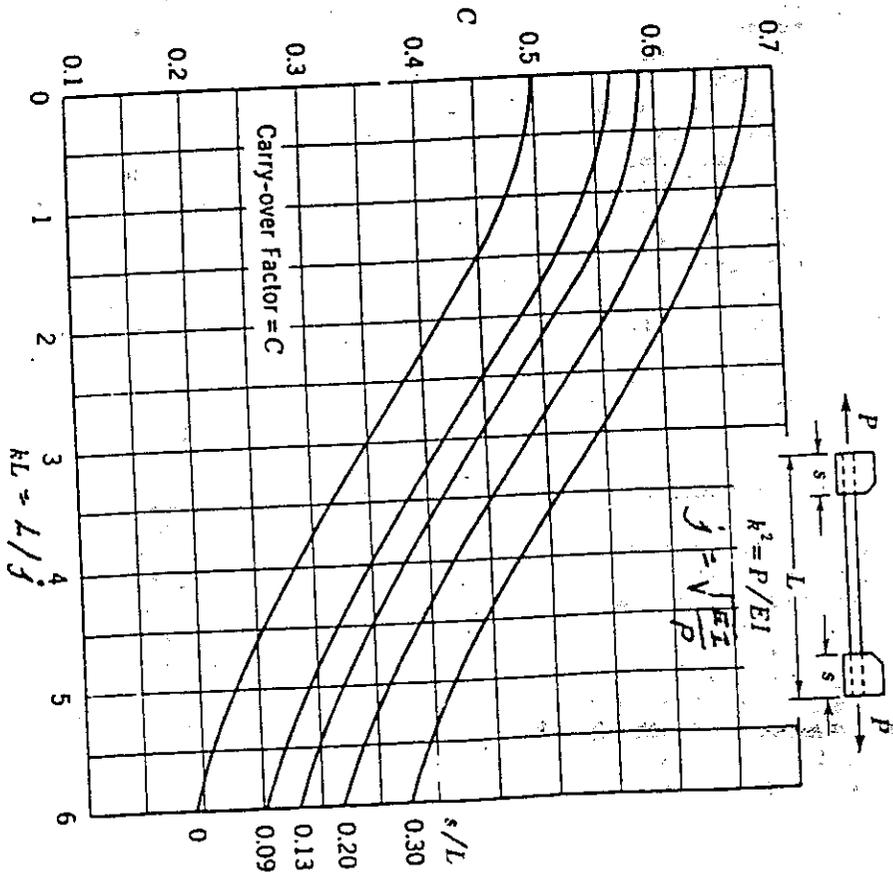
Fig. 2.4.12.   Carry-over factors for tension bars with gusset plates.
From author's paper in *ASCE Transactions*.

INDEX

The current (1973) textbook has no Index. Following is an updated index for that edition.

ADDITIONAL TOPICS IN THE BRUHN TEXTBOOK

ADDITIONAL TOPICS ARE ALSO IN THE SUPPLEMENT'S INDEX, PAGE I1