


Sheath both sides of wall. Use 7/16 OSB with 8d nails 6" o/c edge, 12" o/c field. Blocking required at all panel edges.

PROBABLY AREN'T GOING TO GET THE LS50 INSTALLED HERE. CHECK TO SEE IF LS50 WILL WORK ON ONE SIDE.

THESE ARE OVER-KILL...IMO. YOU WILL HAVE SHEATHING ON THE WALLS ALREADY AND THE SHEATHING SHOULD TIE EVERYTHING TOGETHER. IF YOU WERE TRANSFERRING LATERAL LOAD THROUGH, THEN YES, THE STRAPS WOULD PROBABLY BE NEEDED.

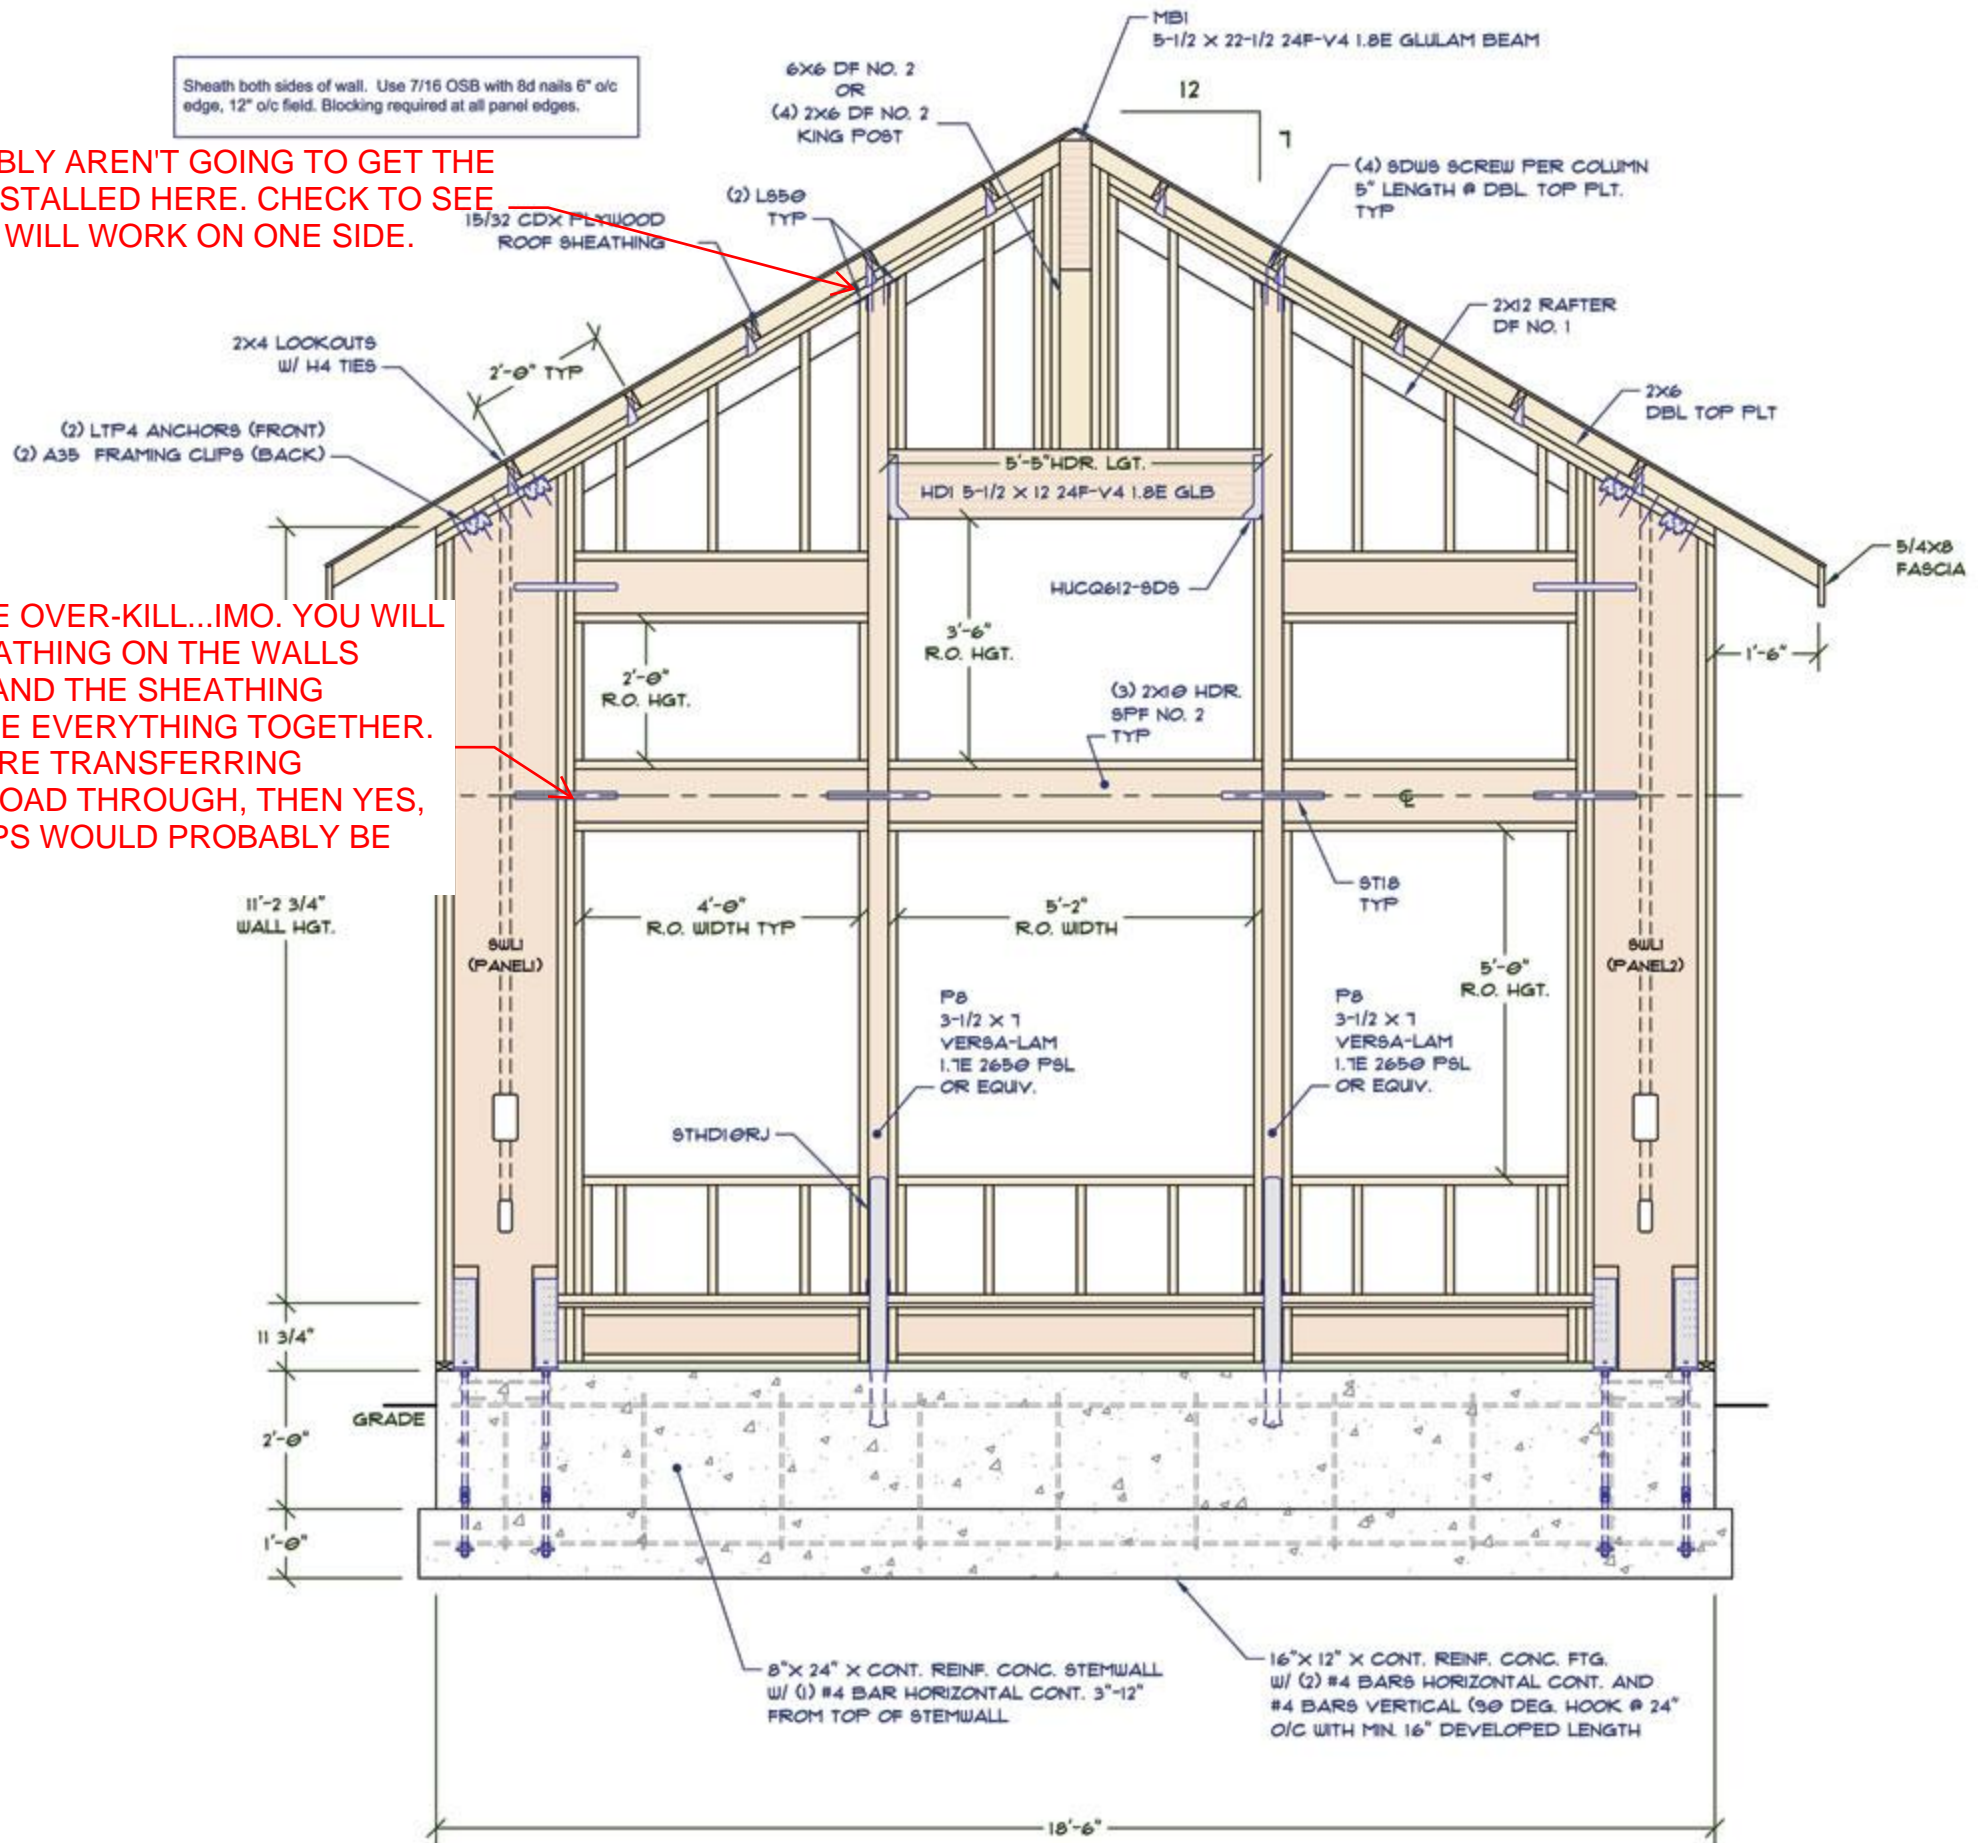

Install 1/2" DIA x 10" anchor bolts, 32" o/c @ min. 7" embedment w/ 3"x3"x1/4" plt. washer. [Not shown for clarity]